

Assembly Instructions



LCC-187 44" x 44" Table

Required Tools:

- Hammer
- Cordless Drill
- #2 Square Drive bit
- 7/16" Wrench or Socket
- Tape Measure


Hardware:

- (8) 1/4" x 4" Bolts
- (8) 1/4" Flange Nuts
- (8) 2 1/2" Screws
- (12) 3" Screws
- (4) 2" Screws

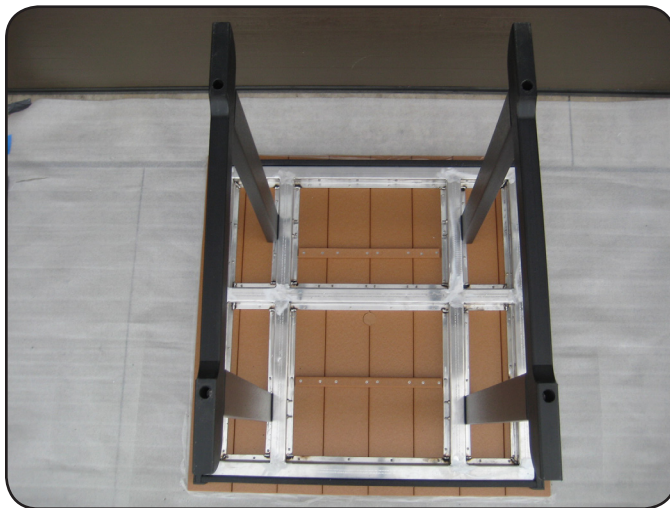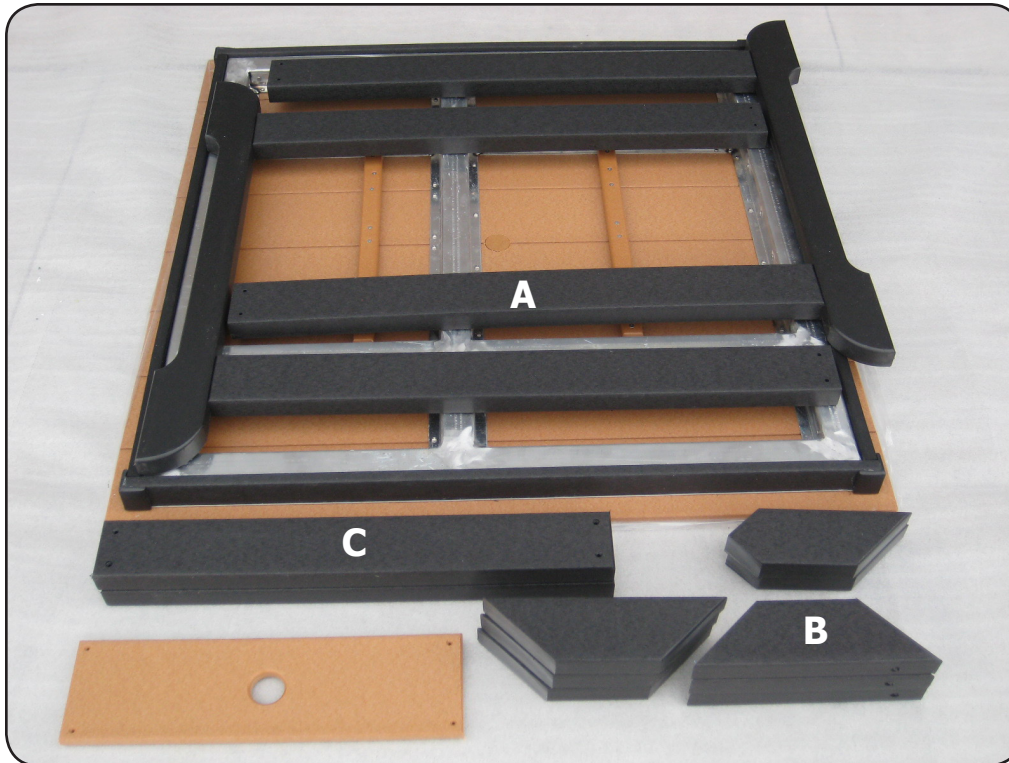

Step 1

Lay table upside down on a soft surface and attach (4) legs (A) on inside of table cleats as shown with (8) 4" bolts and nuts.

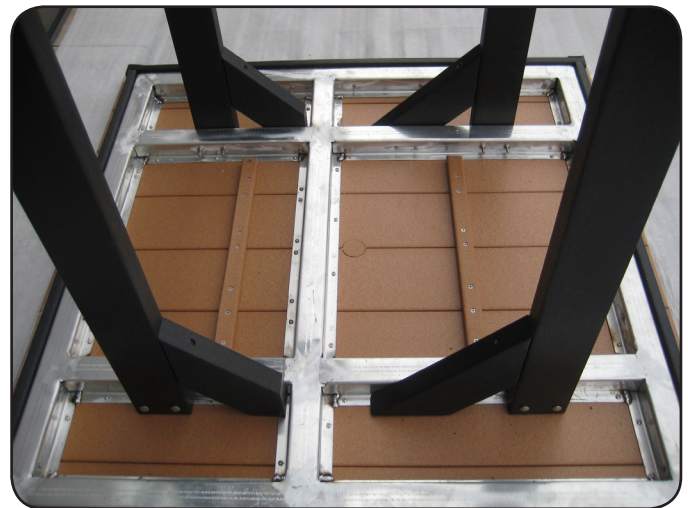

Step 2

Now fasten braces (B) where shown with (8) 3" screws through angle iron, (4) 2 1/2" screws into leg. NOTE: the (2) braces that are chopped off to clear center angle iron. (Refer to picture.)



www.wildridge.com

330-893-4212


Assembly Instructions

LCC-187 44" x 44" Table



Step 3

Fasten cross members (C) where shown on inside of legs with (8) 2 1/2" screws.

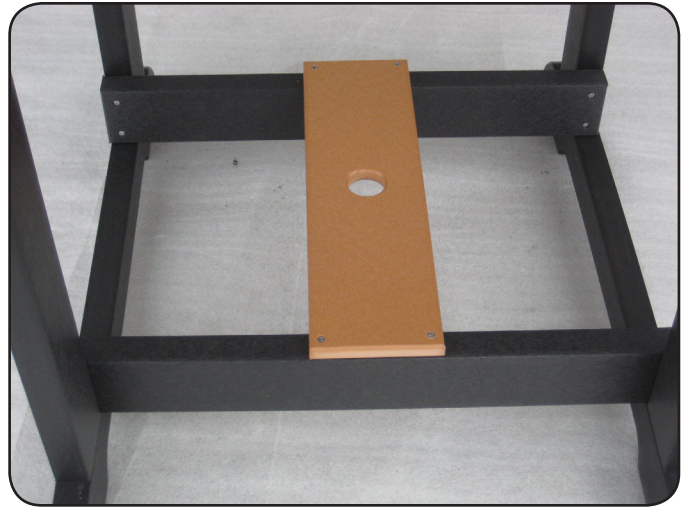

Step 4

Now set table on legs and fasten bottom board with umbrella hole on the cross members. Measure carefully to align with top umbrella hole. Fasten with (4) 2" screws.



Complete

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com

330-893-4212

© 2017