


# Assembly Instructions

## LCC-191 44" x 94" Table

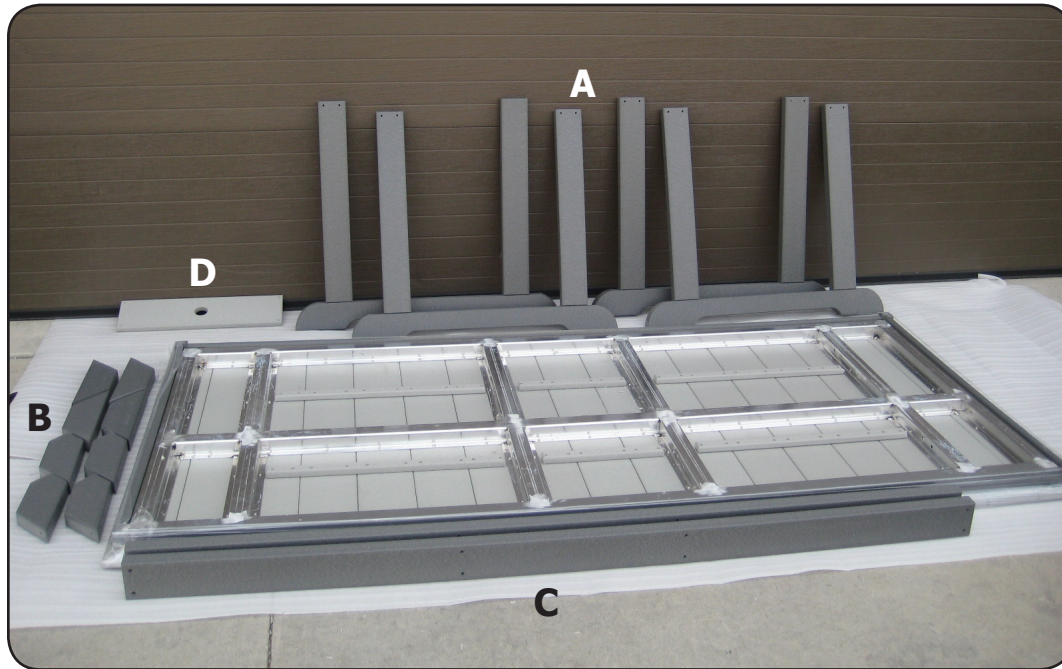

### Required Tools:

- Cordless Drill
- #2 Square Drive bit
- 7/16" Wrench or Socket
- Tape Measure


### Hardware:

- (4) 2" Screws
- (24) 2 1/2" Screws
- (16) 3" Screws
- (16) 1/4" x 4" Bolts
- (16) 1/4" Flange Nuts



### Step 1

Lay table upside down on soft surface and attach legs (A) in positions shown with (16) 4" bolts & nuts. Make sure legs are fastened at exact positions shown.

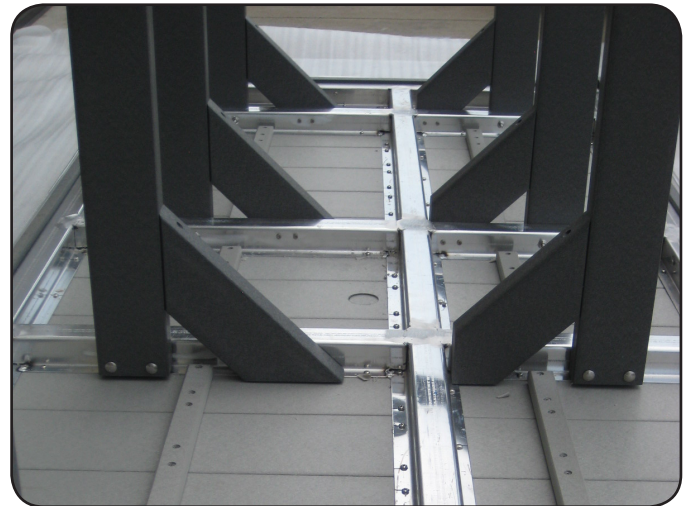

### Step 2

Now fasten braces (B) where shown with (16) 3" screws through angle iron, (8) 2 1/2" screws into leg. The 4 braces that are chopped off to clear center angle iron.



[www.wildridge.com](http://www.wildridge.com)

330-893-4212

# Assembly Instructions

## LCC-191 44" x 94" Table



### Step 3

Fasten cross members (C) as shown on inside of legs with (16) 2 1/2" screws. NOTE: fasten out-sides first, then space inside legs same as they are spaced at base of legs.



### Step 4

Now set table on legs and fasten bottom board with umbrella hole (D) on the 2 center bases. Measure carefully to align with top umbrella hole. Fasten with (4) 2" screws.



**Complete**

**WILDRIDGE**<sup>®</sup>  
PURVEYORS OF QUALITY POLY FURNITURE

[www.wildridge.com](http://www.wildridge.com)

330-893-4212