ASSEMBLY INSTRUCTIONS

 ${
m WILDRIDGE}^{\circ}$

330-893-4212 • www.wildridge.com

CLASSIC SAVANNAH SWING

LCC-203



Required Tools:

- Mallet/Non Marring Hammer (Do not use Metal Headed Hammer)
- Cordless Drill
- #2 Square Drive Bit
- 1/2" and 7/16" Wrench or Socket

Hardware:

- Swing Chains
- (4) Connector Links
- (3) 1/4" x 3" Lag Bolts
- (4) 1/4" x 3 1/2" Carriage Bolts
- (4) 1/4" Nylon Locknuts
- (7) 1/4" Washers
- (4) 2" Screws
- (2) 5/16" x 4" Eye Bolts
- (2) 5/16" x 5" Eye Bolts
- (4) 5/16" Nylon Locknuts
- (4) 5/16" Flange Nuts
- (4) 5/16" Washers


Parts:

A = (1) Backrest

B = (1) Seat


C = (1) Left Facing Armrest

D = (1) Right Facing Armrest

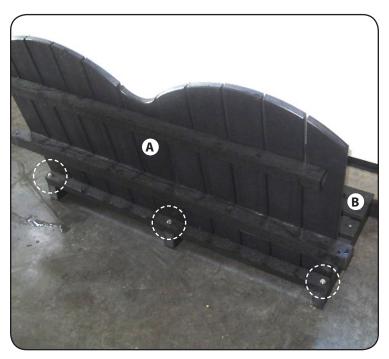

Step 1

Mount the backrest (A) onto the seat (B). Place a 1/4" washer onto a 1/4" x 3" lag bolt and insert it into one of the three pre-drilled holes in the back, keeping it flush with back of seat supports as shown, fasten it together. Do the same with the two remaining holes. NOTE: Do not tighten all the way until you have Step 3 complete.

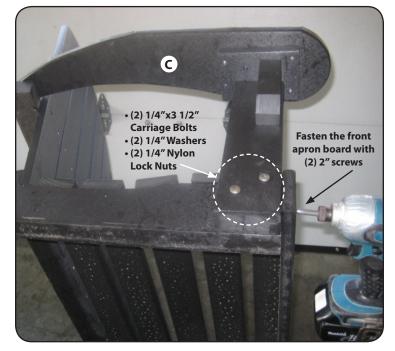

Step 2

Lay the swing on its right side and place the left facing arm rest (C) as pictured. Slide (2) 1/4"x 3 1/2" carriage bolts through the holes from the outside, through the armrest, and through the seat, and add a 1/4" washer and 1/4" nylon locknut, one per bolt. Next, fasten the front apron board with (2) 2" screws as shown. Repeat with right facing armrest (D) and apron board on the other side.


ASSEMBLY INSTRUCTIONS



330-893-4212 • www.wildridge.com

CLASSIC SAVANNAH SWING

LCC-203

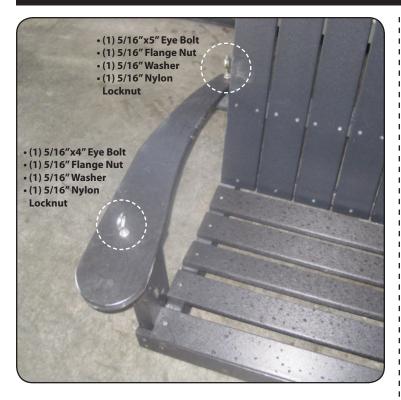

Step 3

Thread a 5/16" flange nut onto a 5/16"x5" eye bolt with the flange turned away from the eye and as far as the thread allows and feed it through the pre-drilled hole on the back of the armrest and add (1) 5/16" washer and (1) 5/16" nylon locknut. Do the same on the front of the armrest using (1) 5/16"x4" eye bolt, (1) 5/16" flange nut, (1) 5/16" washer and (1) 5/16" nylon locknut. Repeat with remaining two eye bolts, etc. on the other end of the swing. Finish tightening the lag bolts (from Step 1) on the back of the swing.



Step 4

Using the (4) connector links, attach the chains to eye bolts. Your swing is now complete.

Thank you for purchasing from Wildridge.