

Assembly Instructions


LCC-203 Savannah Swing

Required Tools:

- Hammer
- Cordless Drill
- #2 Square Drive Bit
- 1/2" and 7/16" Wrench or Socket

Hardware:

- Swing Chains
- (4) 5/16" Nylon Lock Nuts
- (3) 1/4" x 3" Lag Bolts
- (4) Connector Links
- (4) 1/4" x 3 1/2" Carriage Bolts
- (4) 1/4" Nylon Lock Nuts
- (7) 1/4" Washers
- (4) 2" Screws
- (2) 5/16" x 4" Eye Bolts
- (2) 5/16" x 5" Eye Bolts
- (4) 5/16" Flange Nuts
- (4) 5/16" Washers

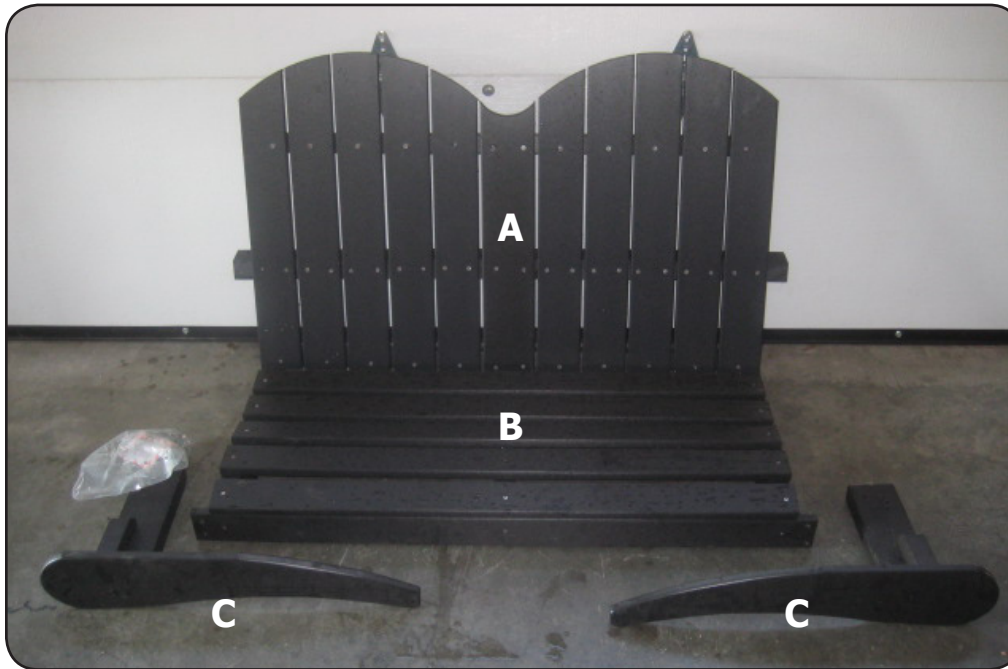

Step 1

Mount back (A) onto seat (B) with (3) 1/4" x 3" lag bolts and washers. Insert lag bolts through pre-drilled holes in back keeping flush with back of seat supports as shown. Do not tighten all the way until step 3 is complete.



Step 2

Attach arm rests with (4) 1/4" x 3 1/2" bolts, washers and nylon lock nuts on sides. Also fasten front boards with (4) 2" screws as shown. NOTE: left and right.



www.wildridge.com

330-893-4212

© 2017

Assembly Instructions

LCC-203 Savannah Swing



Step 3

Now thread a flange nut on all eye bolts as far as thread allows with flange away from eye. Using the shortest eye bolts for the front of arm and longest in back, feed through pre-drilled holes and fasten with 5/16" washers and 5/16" nylon lock nuts. Use the (4) connector links to attach chain to eye bolts.



Complete

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com

330-893-4212

© 2017