


Assembly Instructions

LCC-214 Classic Adirondack Chair

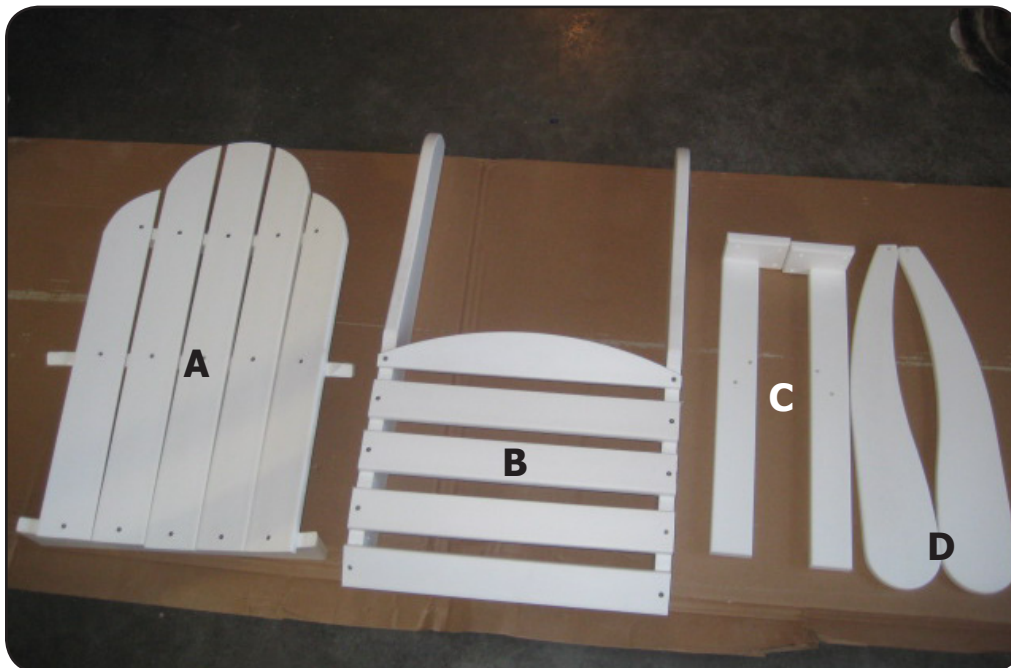

Required Tools:

- Cordless Drill
- #2 Square Drive Bit
- 7/16" Wrench or Socket

Hardware:

- (4) 1/4" x 2 1/2" Bolts
- (6) 1/4" Flange Nuts
- (4) 2 1/2" Screws
- (8) 1 1/4" Screws
- (2) 1/4" x 2" Bolts



Step 1

Mount back (A) onto seat (B) as shown with (4) 2 1/2" screws. Note: Space back and the last board of seat the same as spacing between the other boards in seat.



Step 2

Attach front legs as shown with (4) 2 1/2" bolts & nuts. NOTE: left and right.



www.wildridge.com

330-893-4212

Assembly Instructions

LCC-214 Classic Adirondack Chair



Step 3

Attach arms in back with 2" bolts & nuts and the front of arms from bottom up as shown through pre-drilled holes in arm blocks up into arm rest with (4) 1 1/4" screws per arm. NOTE: space sides of arm rests equally on arm blocks.



Complete!

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com

330-893-4212

© 2017