

# Assembly Instructions


## LCC-215 Adirondack Rocker

### Required Tools:

- Hammer
- Cordless Drill
- #2 Square Drive bit
- 7/16" Wrench or Socket

### Hardware:

- (8) 1/4" x 2 1/2" Bolts
- (8) 1/4" Flange Nuts
- (4) 2 1/2" Screws
- (4) 4" Screws
- (8) 1 1/4" Screws

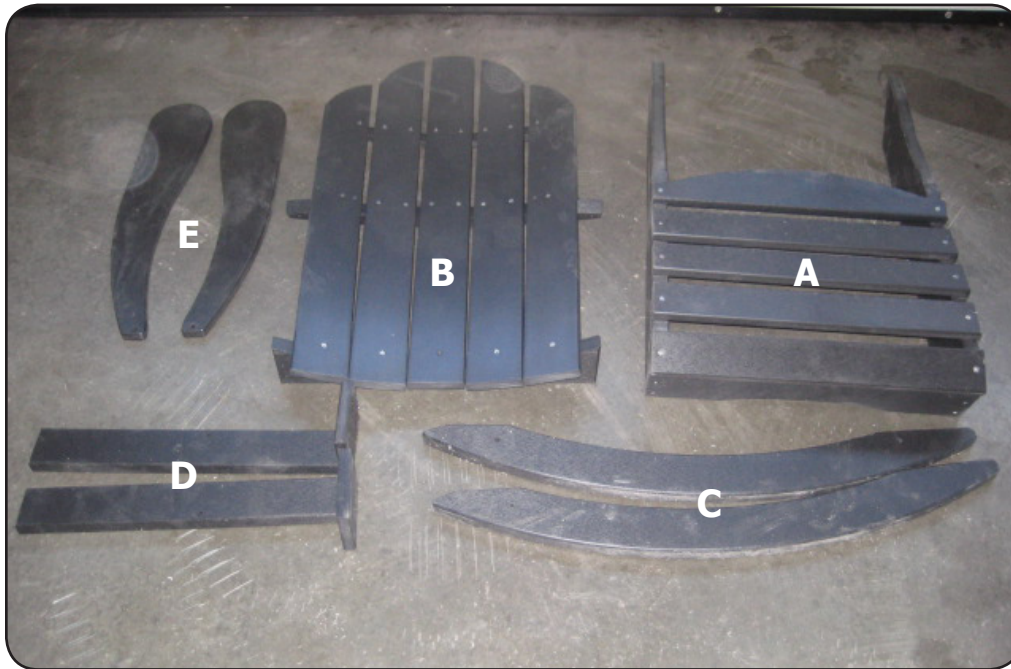

### Step 1

Mount legs (D) onto seat (A) with (4) 2 1/2" bolts & nuts.

Note: Left & Right.



### Step 2

Fasten Back (B) onto seat (A) where shown with (4) 2 1/2" screws. Leave 3/4" gap between last slat in seat and back boards.



[www.wildridge.com](http://www.wildridge.com)

330-893-4212

# Assembly Instructions

## LCC-215 Adirondack Rocker



### Step 3

Lay the assembly on side as shown and fasten rocker (C) in back with 2 1/2" bolt & nut on outside of seat support. Fasten the front with (2) 4" screws to the bottom of leg. Repeat other side.



### Step 4

Now fasten armrests (E) as shown using 2 1/2" bolts & nuts in back. Now space armrests evenly on leg blocks and fasten from bottom up with (8) 1 1/4" screws. (4 in each arm).

**Complete!**

**WILDRIDGE**<sup>®</sup>  
PURVEYORS OF QUALITY POLY FURNITURE

[www.wildridge.com](http://www.wildridge.com)

330-893-4212