

# Assembly Instructions

## LCC-226 Classic Bench

### Required Tools:

- Hammer
- Cordless Drill
- #2 Square Drive bit
- 7/16" Wrench or Socket

### Hardware:

- (4) 1/4" x 2" bolts
- (10) 1/4" Flange Nuts
- (6) 3 1/2" Bolts
- (2) 4" Screws



### Step 1

Position back (A) and seat (B) as shown and fasten with (4) 2" bolts and nuts.



### Step 2

Attach arm-leg assembly (C) as shown with (3) 3 1/2" bolts and (3) 1/4" nuts. Repeat other side.




[www.wildridge.com](http://www.wildridge.com)

330-893-4212

# Assembly Instructions

## LCC-226 Classic Bench

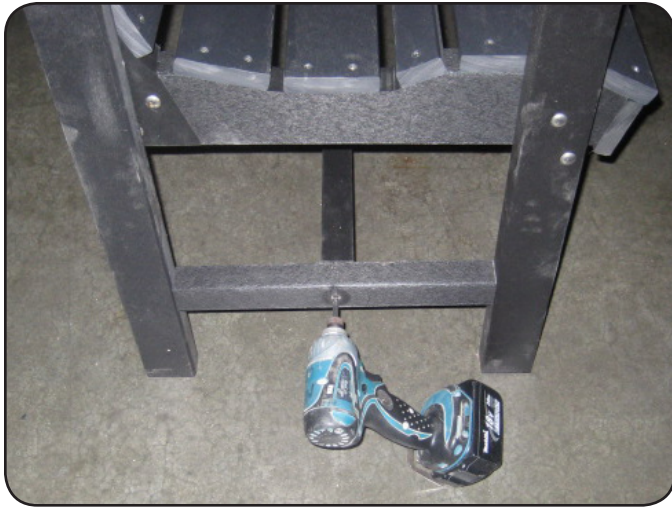

### Step 3

Fasten bottom cross brace (D) with (2) 4" screws.



### Complete

**WILDRIDGE**<sup>®</sup>  
PURVEYORS OF QUALITY POLY FURNITURE

[www.wildridge.com](http://www.wildridge.com)

330-893-4212

© 2017