**Required Tools:**

- Cordless Drill
- #2 Square Drive Bit

**Hardware:**


- (8) 2" Screws
- (2) 3" Screws

**Parts:**

- A = (1) Table Top
- B = (4) Legs
- C = (1) Leg Support


**Step 1**

Lay the table top (A) upside down on a soft surface. Place one leg into the inset in the batten and fasten it using (2) 2" screws.

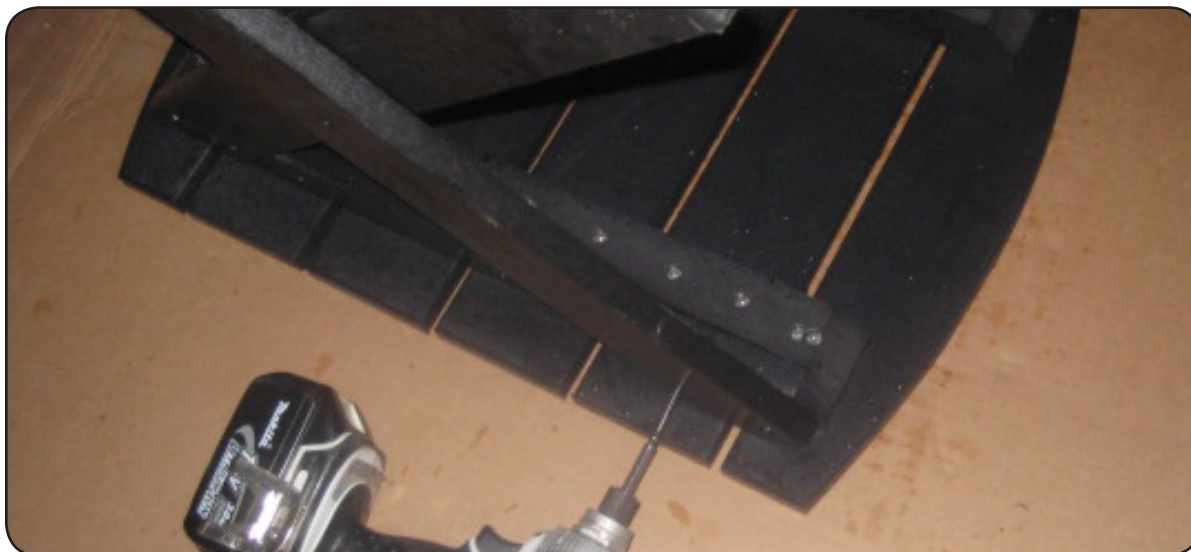**Step 2**

Now place the second leg (B) on the other end of the batten where shown. Keeping it flush with the outside of the batten, fasten it to the batten with (2) 2" screws.

Repeat steps 1 and 2 with the remaining 2 legs on the other side of the table.

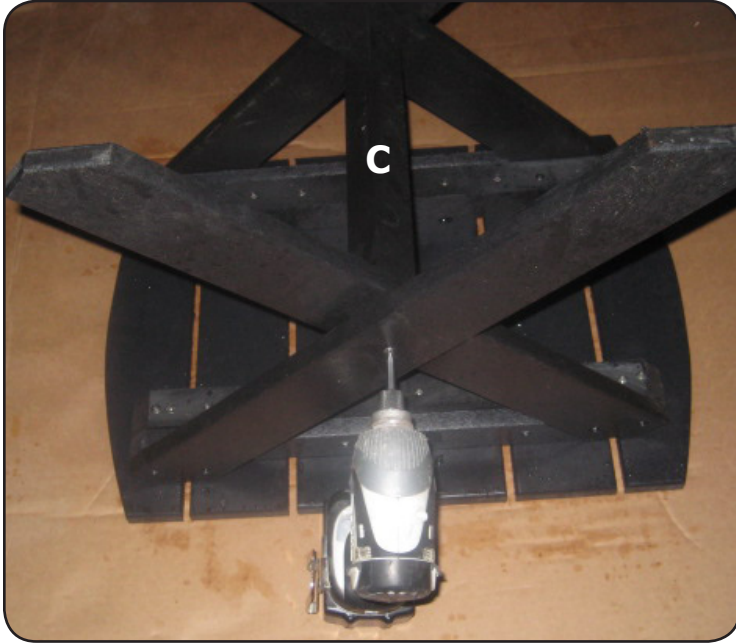

#### Step 3

Place the leg support (C) between the legs, as shown. Feed a 3" screw through the holes in the center of one set of legs and into the leg support. Repeat on the other side.



#### Step 4

Your table is complete.

*Thank you for purchasing from Wildridge.*