
ASSEMBLY INSTRUCTIONS

 ${
m WILDRIDGE}$

CLASSIC DECK CHAIR TETE-A-TETE

LCC-229

330-893-4212 • www.wildridge.com

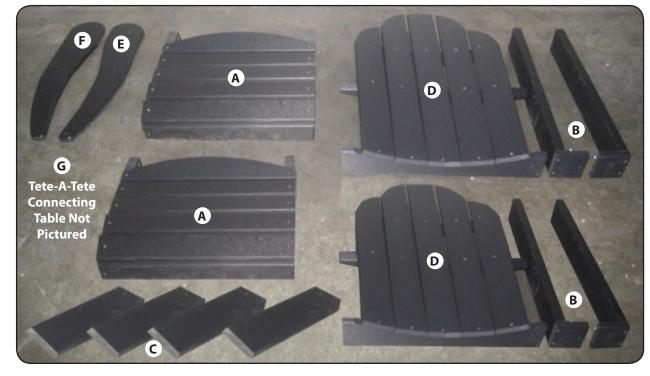

Required Tools:

- Mallet/Non Marring Hammer (Do not use Metal Headed Hammer)
- Cordless Drill
- #2 Square Drive Bit
- 7/16" Wrench or Socket

Hardware:

- (16) 1/4" x 2 1/2" Bolts
- (20) 1/4" Flange Nuts
- (20) 2" Screws
- (12) 1 1/4" Screws
- (4) 1/4"x2" Bolts

Parts:

- A = (2) Seats
- B = (2 Sets) Front Legs
- C = (4) Back Legs
- D = (2) Backrests
- E = (1) Right Armrest
- F = (1) Left Armrest
- G = (1) Tete-A-Tete Connecting Table

Note: The instructions in Steps 1 thru 4 are for putting one deck chair together.

Instructions will need to be repeated for the second deck chair.



Step 1

Lay seat (A) on its side and attach a front leg (B) and a back leg (C) as shown with (4) 1/4" x 2 1/2" bolts and (4) 1/4" flange nuts (2 per leg). **Note:** Be sure to position front leg with the arm block on top pointing away from seat. Repeat on other side.



Step 2

Now position a backrest (D) on the back legs as shown, and fasten with (6) 2" screws (3 per side).

ASSEMBLY INSTRUCTIONS

 ${
m WILDRIDGE}^{\circ}$

CLASSIC DECK CHAIR TETE-A-TETE

LCC-229

330-893-4212 • www.wildridge.com




Step 3

Fasten the right armrest (E) to chair with (1) 1/4" x 2" bolt and 1/4" flange nut in the back of the armrest and (3) 1 1/4" screws in the front of the armrest from the bottom up through arm blocks and the holes provided, dividing the space evenly on each side.

Note: For the second deck chair use this same step but attach the left armrest (F) on the opposite side.



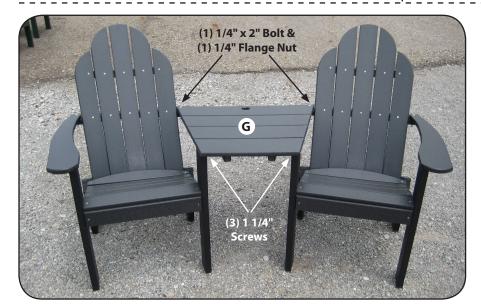

Step 5

Set both chairs on a flat/even surface and slightly angle the fronts of the chairs towards each other. Position the tete-a-tete connecting table (G) in between both chairs, and on top of the two front inside legs on each chair, as shown on left. Fasten the back of the table to the backrest supports with (2) 1/4" x 2" bolt and (2) 1/4" flange, one per side. Adjust the front as needed and fasten the table to the front legs from the bottom up into table with (6) 1 1/4" screws, three per side. Your tete-a-tete is now complete.

Thank you for purchasing from Wildridge.