

# Assembly Instructions

## LCC-229 Deck Chair Tete-a-Tete



### Step 1

**LCC-229 Deck Chair Tete-a-Tete consists of (2) LCC-252 Dining-Deck Chairs with only (1) arm per chair.**

Refer to LCC-252 Dining-Deck Chair Manual (see attached LCC 252 assembly instructions).

**Installing** (1) armrest on right side of (1) chair and (1) armrest on left side of other chair.

Now place side by side as shown and fasten back of table with (2) 2 1/2" bolts & nuts.

Now bring the front of chairs in against table cleats and fasten from bottom up into table with (6) 1 1/4" screws, 3 per side.

**COMPLETE!**




[www.wildridge.com](http://www.wildridge.com)

330-893-4212

© 2017

# Assembly Instructions

## LCC-252 Classic Dining/Deck Chair

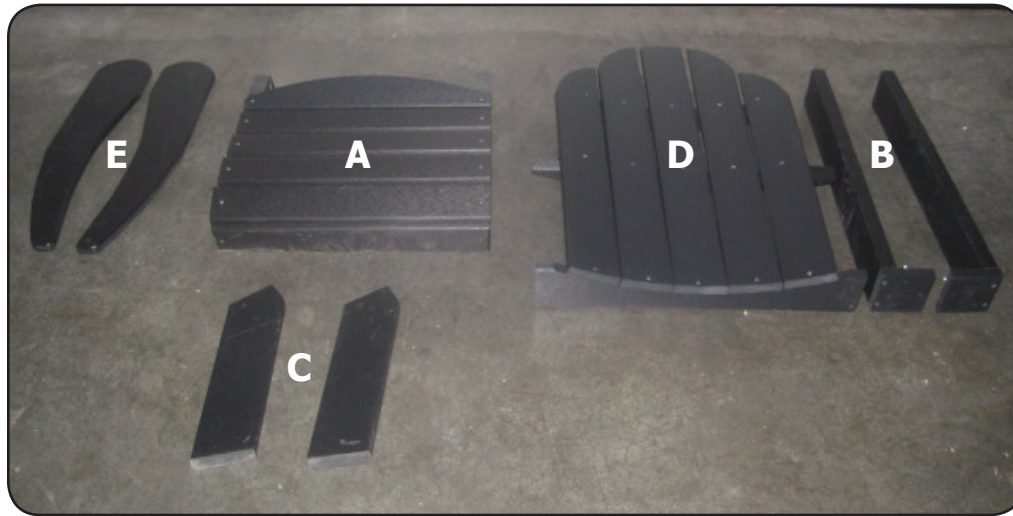

### Required Tools:

- Hammer
- Cordless Drill
- #2 Square Drive Bit
- 7/16" Wrench or Socket

### Hardware:

- (10) 1/4" x 2 1/2" Bolts
- (10) 1/4" Flange Nuts
- (10) 2" Screws
- (6) 1 1/4" Screws



### Step 1

Lay seat (A) on side and attach front leg (B) and back leg (C) as shown with (4) 2 1/2" Bolts and nuts.  
Note: Be sure to position front leg (B) as shown with arm block on top pointing away from seat. Repeat other side.



### Step 2

Now position back (D) on back legs as shown and fasten with (6) 2" Screws.



[www.wildridge.com](http://www.wildridge.com)

330-893-4212

# Assembly Instructions

## LCC-252 Classic Dining/Deck Chair



### Step 3

Fasten armrests (E) to chair with (2) 2 1/2" bolts and nuts in back and (6) 1 1/4" screws in front from bottom up through arm blocks and holes provided (3 per arm). Divide space evenly on each side.



### Step 4

For added strength add (4) 2" screws on inside of front legs, (2) screws per leg.

**WILDRIDGE**<sup>®</sup>  
PURVEYORS OF QUALITY POLY FURNITURE

[www.wildridge.com](http://www.wildridge.com)

330-893-4212

© 2017