


Assembly Instructions

LCC-250/LCC-251 High Dining Chair

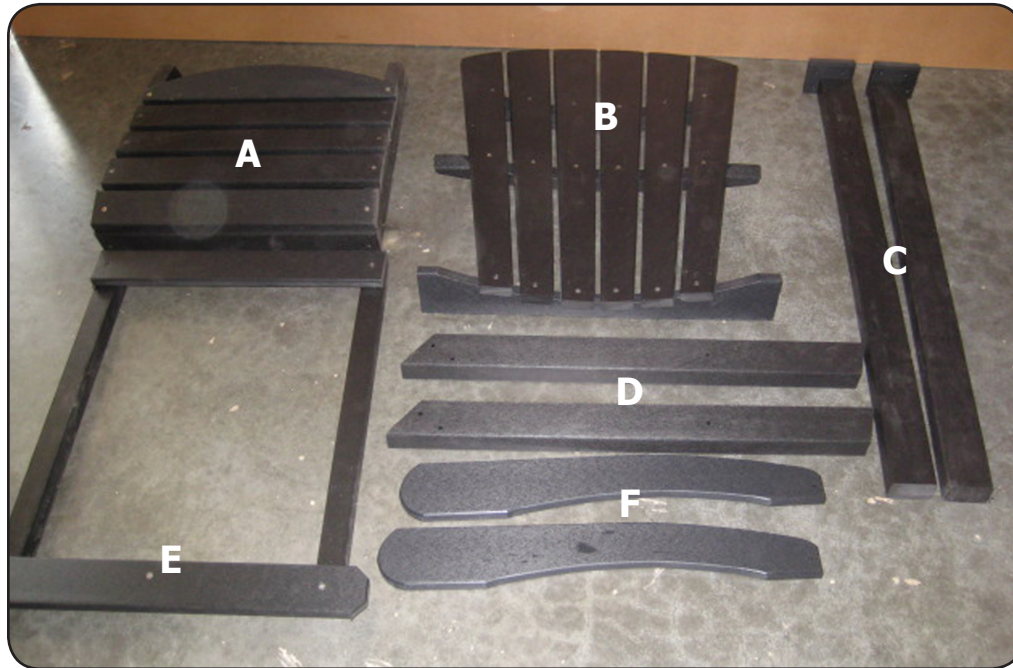

Required Tools:

- Hammer
- Cordless Drill
- #2 Square Drive Bit
- 7/16" Wrench Or Socket

Hardware:

- (6) 1/4" x 3" bolts
- (4) 1/4" x 3 1/2" bolts
- (2) 1/4" x 2 1/2" bolts
- (12) 1/4" flange nuts
- (6) 2" screws
- (6) 1 1/4" screws



Step 1

Fasten legs (D) on outside of seat (A) with (4) 3" bolts and nuts.



Step 2

Position front legs (C) as shown and fasten to seat (A) with (2) 3" bolts and nuts.

Note: Make sure they are positioned as shown with arm blocks flush on front and inside.



www.wildridge.com

330-893-4212

Assembly Instructions

LCC-250/LCC-251 High Dining Chair



Step 3
Fasten back (B) in position shown with (6) 2" screws.



Step 4
Fasten footrest (E) to legs with (4) 3 1/2" bolts and nuts.



Step 5
Fasten armrests (F) with (2) 2 1/2" bolts and nuts in back and (6) 1 1/4" screws in front. Divide space evenly on each side and fasten screws from bottom up through predrilled holes.

Complete!



www.wildridge.com
330-893-4212