


Assembly Instructions

LCC-252 Classic Dining/Deck Chair

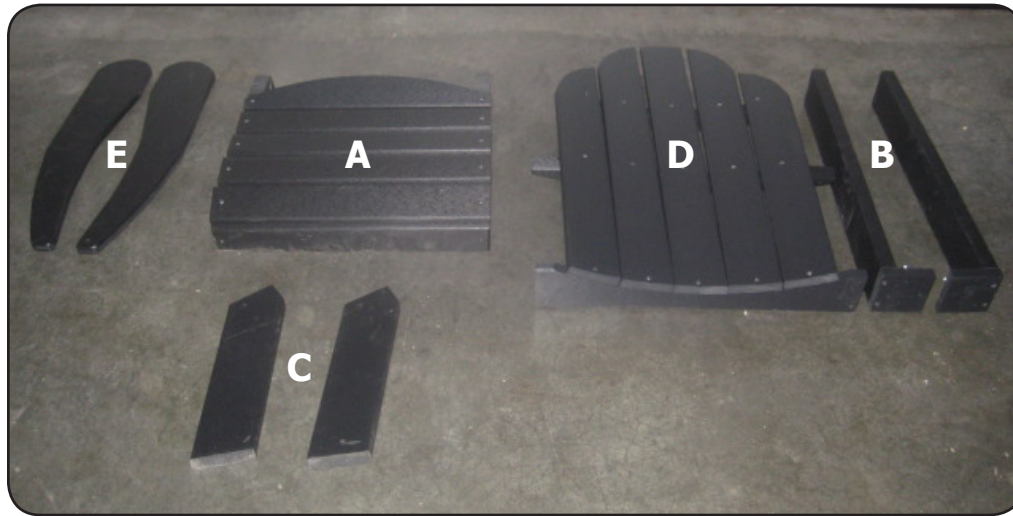

Required Tools:

- Hammer
- Cordless Drill
- #2 Square Drive Bit
- 7/16" Wrench or Socket

Hardware:

- (10) 1/4" x 2 1/2" Bolts
- (10) 1/4" Flange Nuts
- (10) 2" Screws
- (6) 1 1/4" Screws



Step 1

Lay seat (A) on side and attach front leg (B) and back leg (C) as shown with (4) 2 1/2" Bolts and nuts.
Note: Be sure to position front leg (B) as shown with arm block on top pointing away from seat. Repeat other side.



Step 2

Now position back (D) on back legs as shown and fasten with (6) 2" Screws.



www.wildridge.com

330-893-4212

Assembly Instructions

LCC-252 Classic Dining/Deck Chair



Step 3

Fasten armrests (E) to chair with (2) 2 1/2" bolts and nuts in back and (6) 1 1/4" screws in front from bottom up through arm blocks and holes provided (3 per arm). Divide space evenly on each side.



Step 4

For added strength add (4) 2" screws on inside of front legs, (2) screws per leg.

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com

330-893-4212