


Assembly Instructions

LCC-254 Side Chair With Arms

**NOTE: Refer to the LCC-253 Side Chair (Without Arms) assembly instructions to assemble the base (see attached).
FOLLOW THESE INSTRUCTIONS TO ATTACH THE ARMS.**

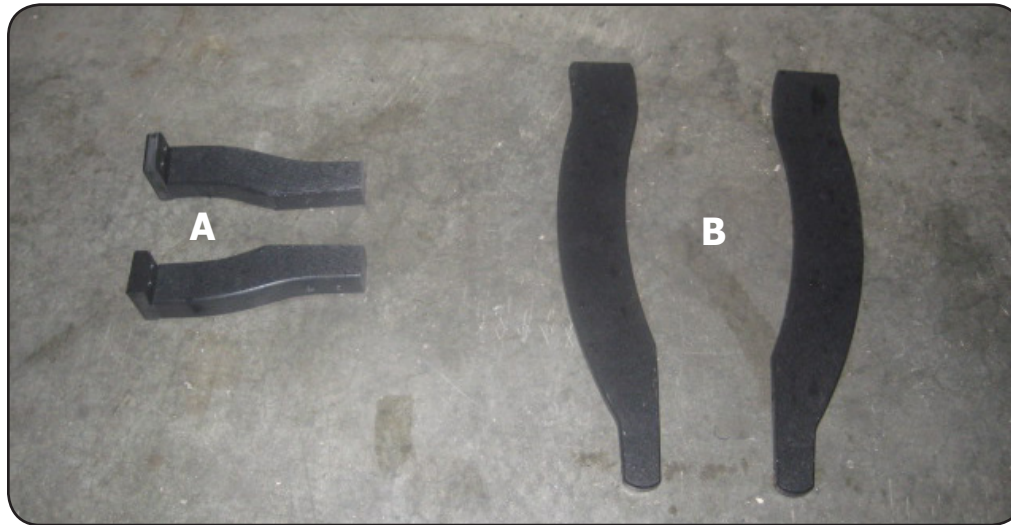

Additional Hardware:

- (4) 2 1/2" Screws
- (4) 1 1/4" Screws
- (2) 1/4" x 3 1/4" Bolts
- (2) 1/4" Flange Nuts



Step 1

Lay chair on side and fasten arm rest support (A) to front leg where shown with (2) 2 1/2" screws. Be sure to examine picture closely before fastening to determine right or left. Repeat other side.



Step 2

Now fasten armrests in back with (2) 1/4" x 3 1/4" bolts & nuts and front of armrests from bottom up through blocks in armrest support. With (4) 1 1/4" screws (2 per armrest). Note: space armrests equally on sides.

Complete!




www.wildridge.com

330-893-4212

Assembly Instructions

LCC-253 Side Chair Without Arms

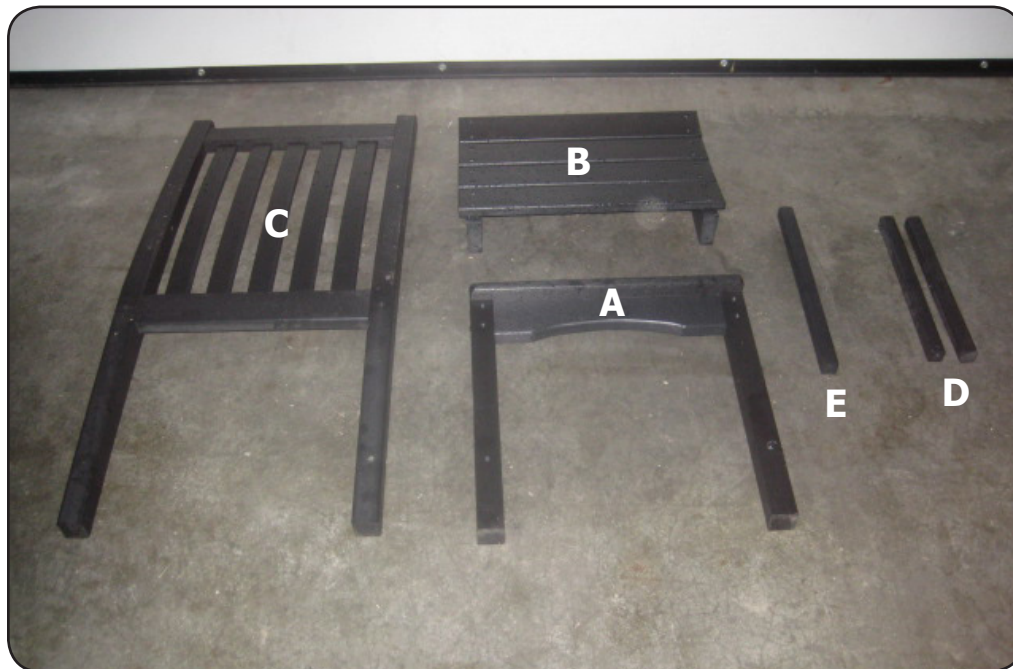

Required Tools:

- Tape Measure
- Cordless Drill
- #2 Square Drive Bit
- #3 Square Bit
- 7/16" Wrench or Socket

Hardware:

- (8) 2 1/2" Screws
- (2) 14 x 4" Screws
- (2) 2" Screws



Step 1

Fasten the front leg assembly (A) to the front of seat (B) using (4) 2 1/2" screws (examine picture closely to determine which is the front of the seat.)



Step 2

Now fasten back (C) to back of seat (B) as shown with (2) 4" screws measuring 14 1/2" from bottom of seat support to bottom of leg as shown.



www.wildridge.com

330-893-4212

Assembly Instructions

LCC-253 Side Chair Without Arms



Step 3

Fasten the leg support (D) with (2) 2 1/2" screws where predrilled holes are located. Center the supports on inside of legs. Repeat other side. Notice these supports have a hole in center for next step. Note: counter sinkholes need to be on outsides



Step 4

Now fasten the cross support (E) in between leg supports (D) where holes are provided with (2) 2" screws



Complete

See the LCC-254 assembly instructions to attach the arms.

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com
330-893-4212