
# **Assembly Instructions**

## LCC-291 44"x84" Table

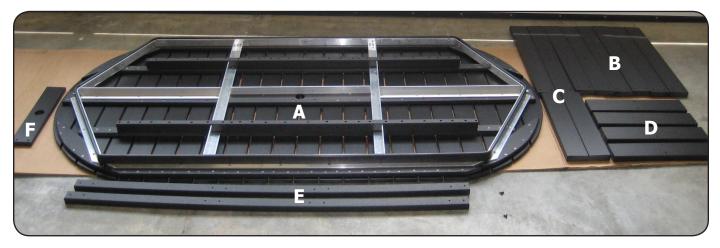

#### Required Tools: - Hammer

- #2 Square Drive bit

- Cordless Drill

- 7/16" Wrench or Socket- Tape Measure
- Hardware: - (16) 1/4" x 2" Bolts - (16) 1/4" Flange Nuts
- (24) 2 1/2" Screws - (20) 2" Screws





### Step 1

Lay table upside down on a soft surface. Attach (8) legs (A) onto inside of table cleats with (16) 2" bolts & nuts. Be sure counter sink holes are turned out for step 3.



### Position the 18 7/8" pieces (C) in between the (2) 17 1/2" pieces (D) as shown and fasten with (8) 2 1/2" screws through predrilled holes provided.

# www.wildridge.com 330-893-4212

# **Assembly Instructions**

## LCC-291 44"x84" Table



#### Step 3

Now fasten the pieces you have just assembled in between legs as shown measuring  $11 \ 1/2$ " from bottom of leg. Center assembly in between legs and fasten with (16) 2 1/2" screws.



### Step 4

Fasten cross supports (E) to legs where shown with (16) 2" screws. First fasten ends and keep flush with legs.





#### Step 5

Set table on legs and fasten board with umbrella hole (F) onto the cross supports aligning with top hole using (4) 2" screws.



Complete!

www.wildridge.com 330-893-4212