

Required Tools:



- Mallet/Non Marring Hammer (Do not use Metal Headed Hammer)
- Cordless Drill
- #2 Square Drive bit
- 7/16" Wrench or Socket
- Tape Measure
- Level

Hardware:

- (16) 1/4" x 2" Bolts
- (16) 1/4" Flange Nuts
- (24) 2 1/2" Screws
- (20) 2" Screws


Parts:

- A = (1) Table Top
- B = (8) Legs
- C = (2) 18 7/8" H Pieces
- D = (4) 17 1/2" H Pieces
- E = (2) Cross Supports
- F = (1) Umbrella Board

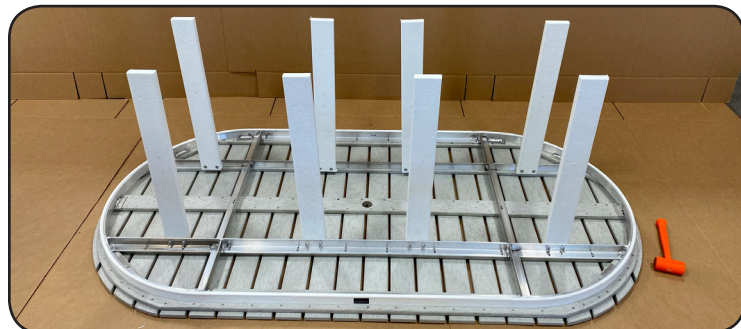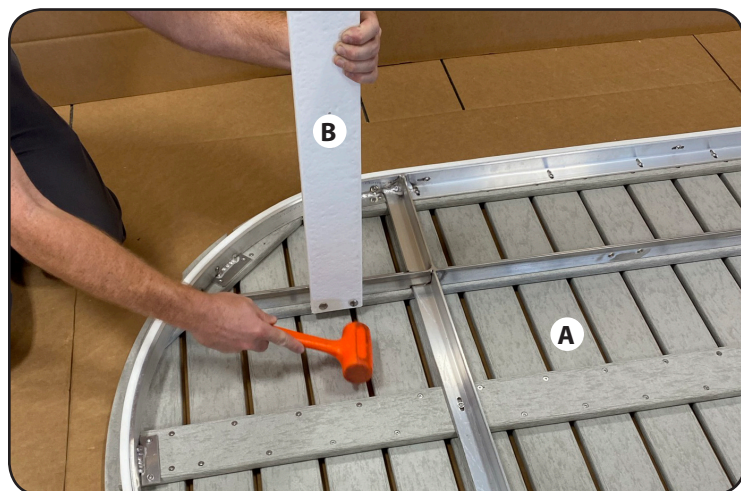

Step 1

Lay table top (A) upside down on a soft surface. Place a leg (B) into position on the inside of the metal cleat, making sure the counter sink holes that are located in the middle of the leg is facing outward. Insert (2) 2" bolts through the holes provided. Use a level to make sure the leg is straight, then add (2) 1/4" flange nuts to the bolts and tighten. Repeat with remaining (7) legs.

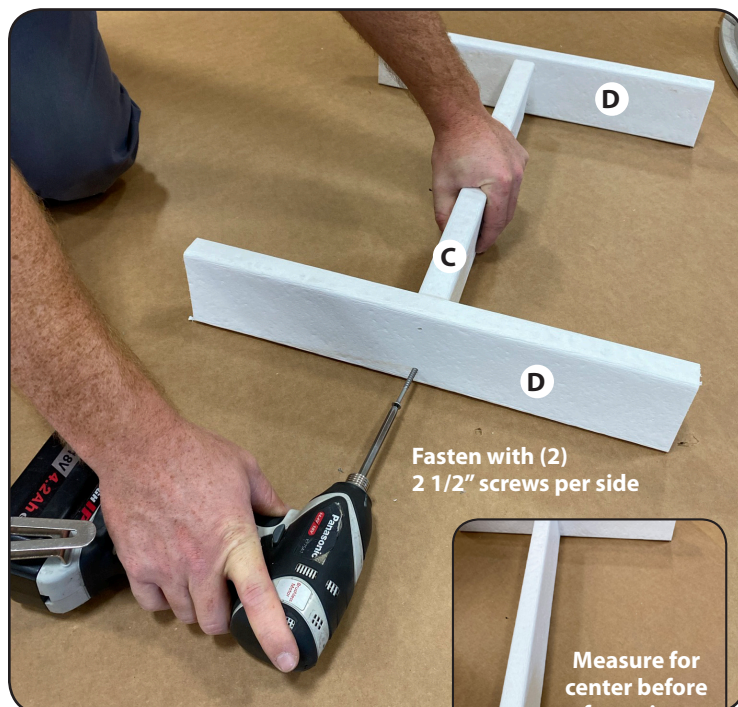


Fasten with (2)
2 1/2" screws per side

Measure for
center before
fastening.

Step 2


To make one H stretcher, position two 17 1/2" H pieces (D) on their sides as shown above, and place one 18 7/8" H piece (C) on its side and in between them as shown and measure so its centered, fasten with (4) 2 1/2" screws (2 per side) through the pre-drilled holes provided. Make the second H stretcher in the same fashion, with the remaining 3 pieces.

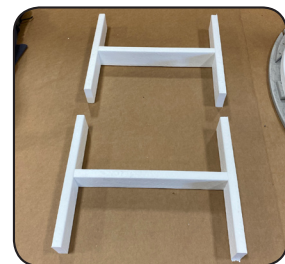




Step 3

On one end of the table, place one of the H stretchers that you assembled in Step 2, in between the legs, as shown, measure 11 1/2" down from the foot of the leg, center the H stretcher and fasten with two 2 1/2" screws, do this for each of the four legs. Repeat with the other H stretcher on the other end of the table.

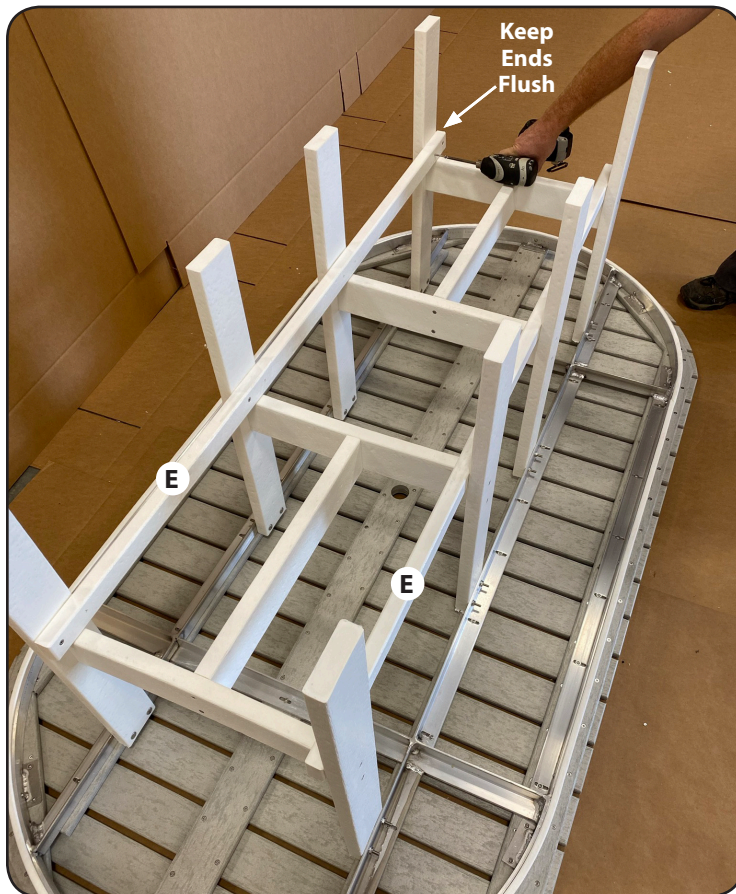

Step 4

Place the two cross supports (E) on top of the H Stretchers, one on each side, and up against the legs, as shown. Fasten the cross supports to the end legs first, keeping them flush, using two 2" screws for each of the 4 end legs., then fasten the remaining 4 middle legs with the remaining 8 screws, 2 per leg.

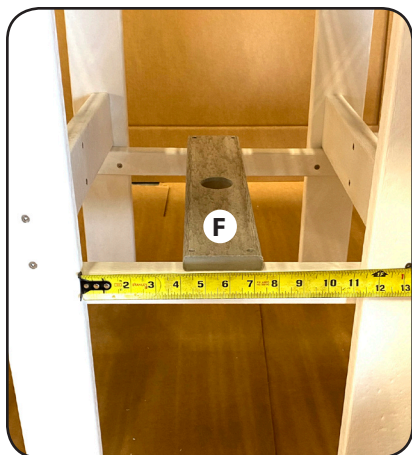

Step 5

Set the table upright, and place the umbrella board (F) onto the cross supports in the middle, and measure to center it. Fasten the umbrella board from the top and down into the cross support with (4) 2" screws, 2 per side.



Your table is now complete... enjoy!

Thank you for purchasing from Wildridge.