

Assembly Instructions


LCC-314 Low Adirondack Chair

Required Tools:

- Hammer
- 7/16" Wrench or Socket
- Cordless Drill
- #2 Square Drive bit

Hardware:

- (2) 1/4" x 3 1/2" bolts
- (8) 1/4" x 2 1/2" bolts
- (10) 1/4" flange nuts
- (8) 1 1/4" screws
- (4) 2" screws

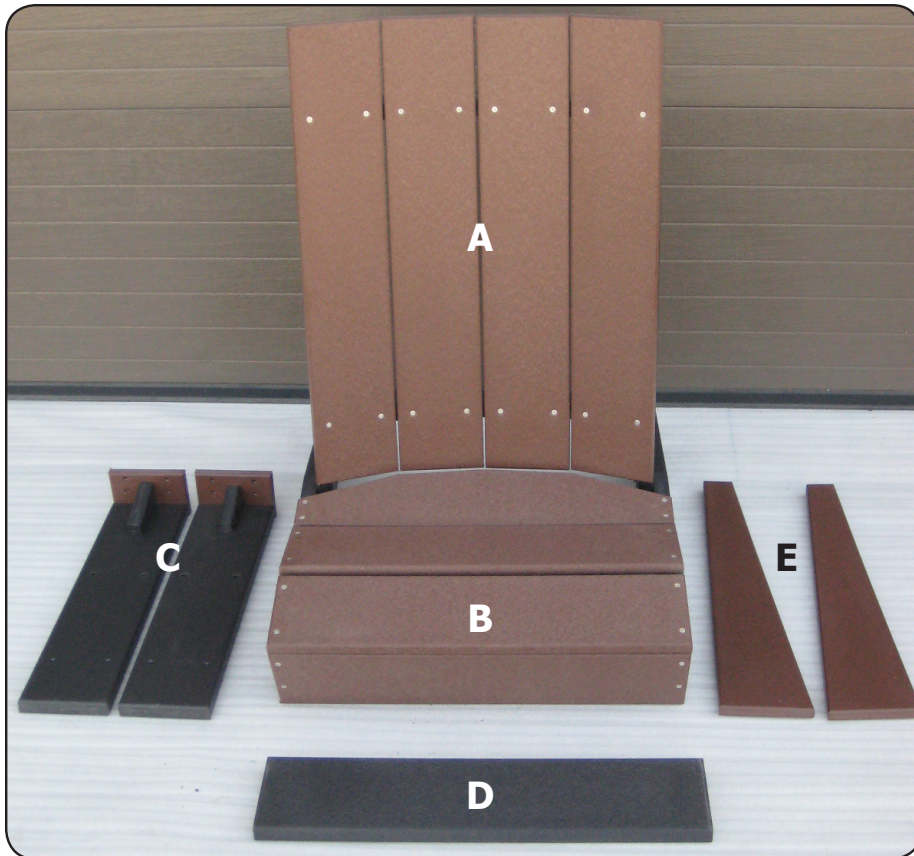

Step 1

Using (4) 1/4" x 2 1/2" bolts and (4) 1/4" flange nuts attach seat (B) to back (A).



Step 2

Using (4) 1/4" x 2 1/2" bolts and (4) 1/4" flange nuts attach legs (C) to seat.



www.wildridge.com

330-893-4212

Assembly Instructions

LCC-314 Low Adirondack Chair



Step 3
Now slide brace (D) in groove in front leg and fasten with (4) 2" screws.



Step 4
Attach arm (E) to back with (2) 1/4" x 3 1/2" bolts and (2) 1/4" flange nuts. Fasten front of arm using (8) 1 1/4" screws. Note: Measure 3/4" overhang on inside as shown.



Complete



www.wildridge.com
330-893-4212