

# Assembly Instructions


## LCC-319 High Adirondack Chair

### Required Tools:

- Hammer
- 7/16" Wrench or Socket


### Hardware:

- (4) 1/4" x 4" bolts
- (2) 1/4" x 3 1/2" bolts
- (4) 1/4" x 3" bolts
- (4) 1/4" x 2 3/4" bolts
- (14) 1/4" flange nuts

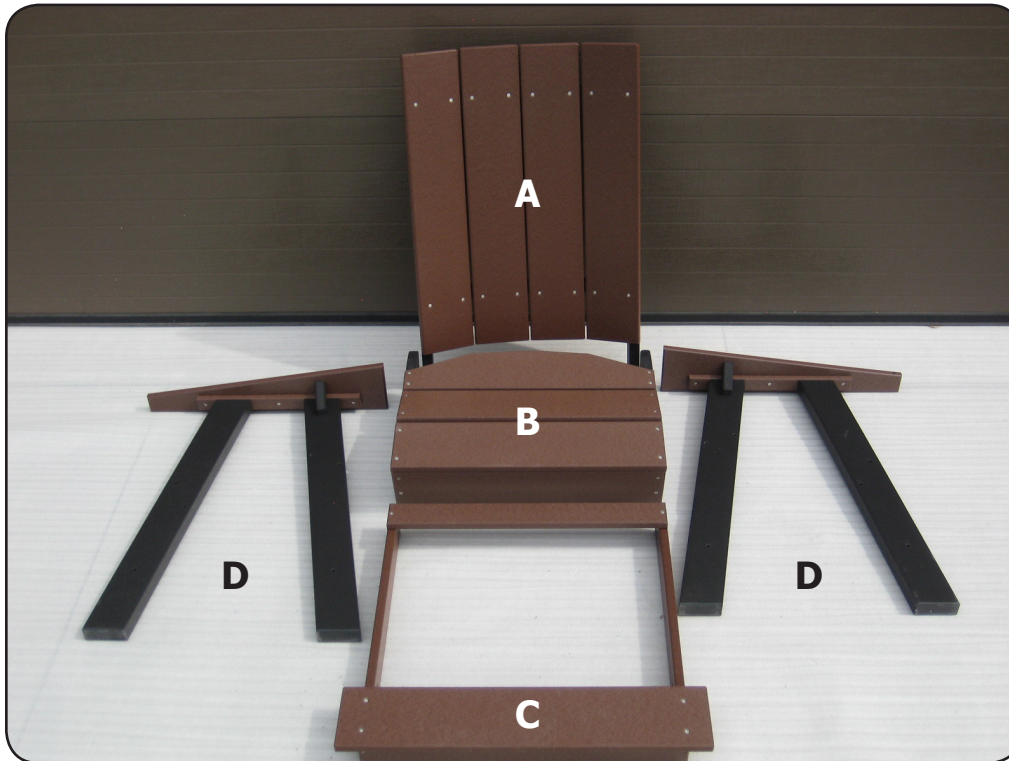

### Step 1

Using (2) 1/4" x 4" bolts back leg, (2) 1/4" x 3" bolts front leg, (1) 1/4" x 3 1/2" bolt arm, and (5) 1/4" nuts, attach legs (D) to seat (B) and back (A). DO NOT TIGHTEN NUT AT THIS POINT.

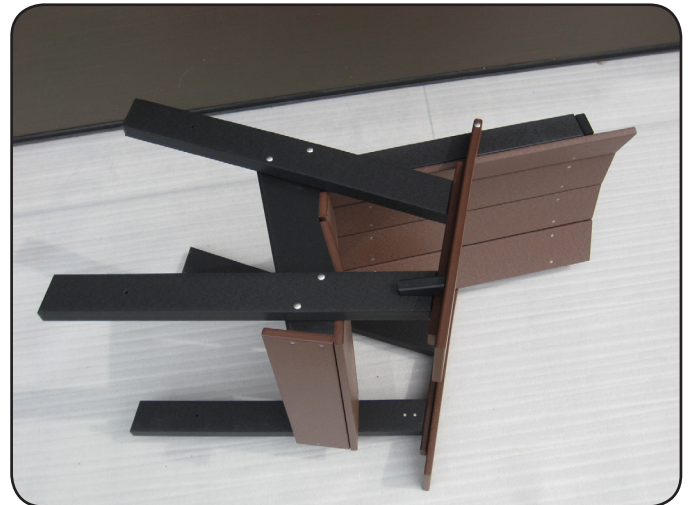

### Step 2

Turn chair over and repeat step 1 to attach legs to other side. Once chair is together use 7/16" wrench or socket to tighten all connecting points.



[www.wildridge.com](http://www.wildridge.com)

330-893-4212

# Assembly Instructions

## LCC-319 High Adirondack Chair



### Step 3

Using (4) 1/4" x 2 3/4" bolts and (4) 1/4" nuts attach the foot rest (C) to chair legs. Tighten using a 7/16" wrench or socket.



### Complete

**WILDRIDGE**<sup>®</sup>  
PURVEYORS OF QUALITY POLY FURNITURE

[www.wildridge.com](http://www.wildridge.com)

330-893-4212

© 2017