


Assembly Instructions

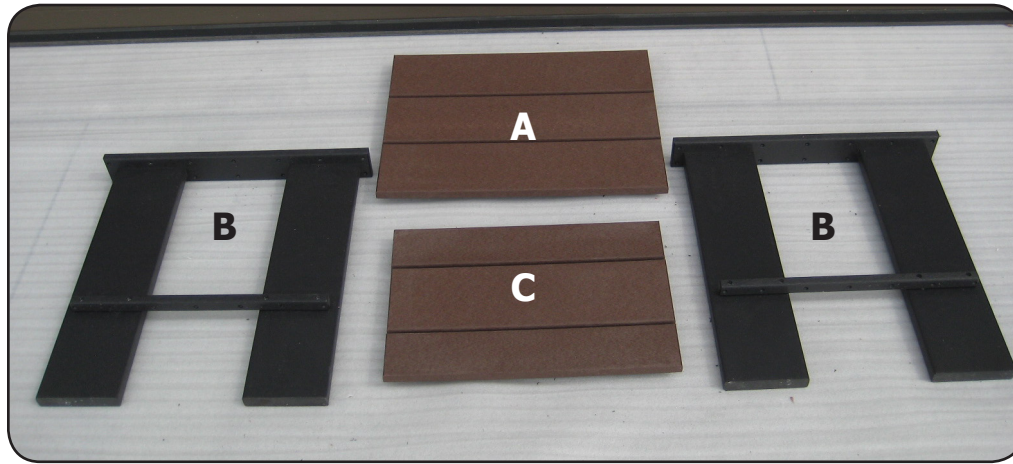

LCC-320 Adirondack Side Table

Required Tools:

- Cordless Drill
- #2 Square Drive Bit


Hardware:

- (26) 1 1/4" screws



Step 1

Lay top (A) upside down on soft surface. Attach legs (B) as shown with (16) 1 1/4" screws on each side.

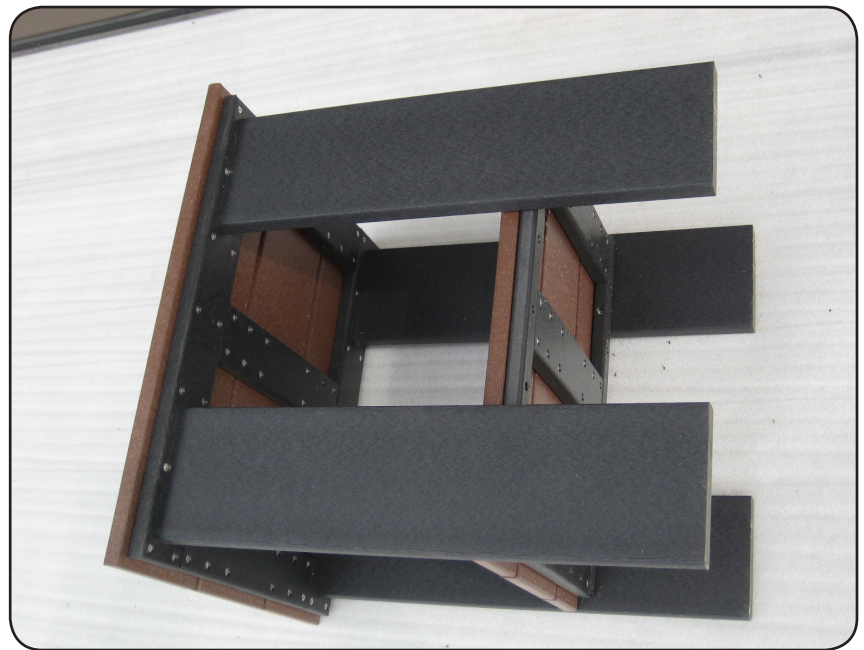

Step 2

Lay table on side and fit shelf (C) in between leg as shown. Fasten with (10) 1 1/4" screws.



Complete

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com

330-893-4212