**Required Tools:**

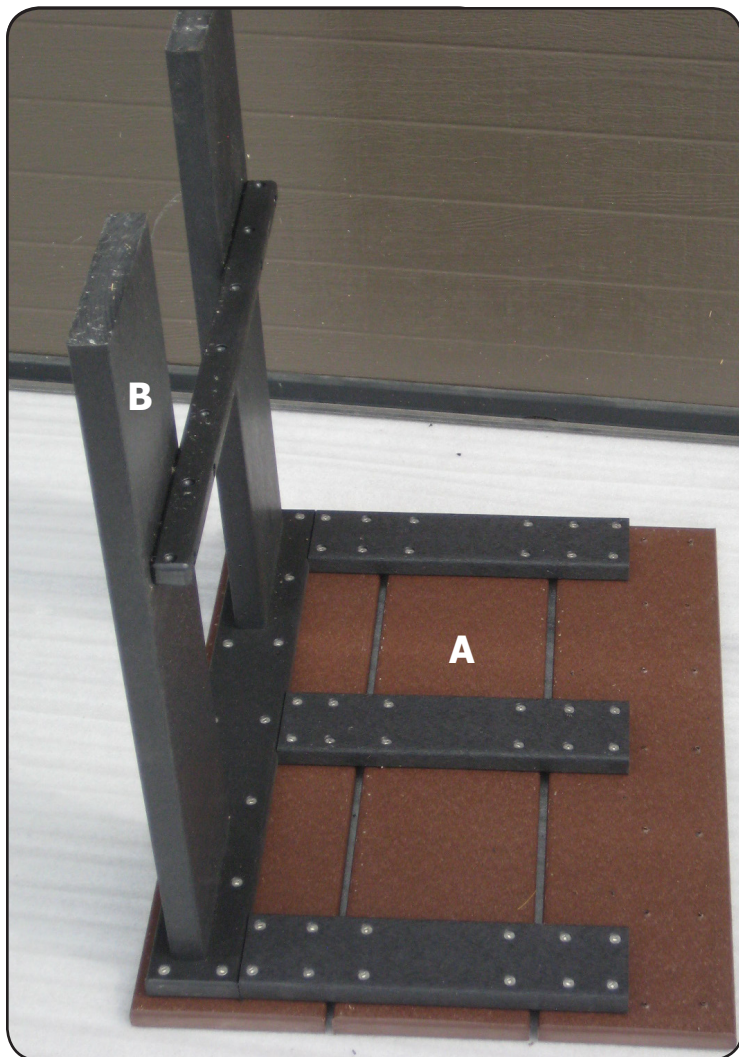
- Cordless Drill
- #2 Square Drive Bit

**Hardware:**

- (26) 1 1/4" screws

**Parts:**

- A = (1) Table Top
- B = (2) Leg Assemblies
- C = (1) Shelf

**Step 1**

Lay the table top (A) upside down on soft surface. Attach one of the leg assemblies (B) into the table frame, and position it up against the 3 cleats as shown. Fasten it to the table top with (16) 1/4" screws. Repeat on the other side.

**Step 2**

Next lay the table on its side and position the shelf (C) in between the legs, and above the shelf supports that are on the legs as shown. Fasten it thru the shelf supports from the bottom and into the shelf with (10) 1 1/4" screws.

**Step 3**

Your table is now complete.

*Thank you for  
purchasing from  
Wildridge.*