

Assembly Instructions


LCC-352 High Adirondack Side Table

Required Tools:

- Hammer
- 7/16" Wrench or Socket
- Cordless Drill
- #2 Square Drive Bit

Hardware:

- (8) 1/4" x 3" bolts
- (8) 1/4" flange nuts
- (8) 2 1/2" screws

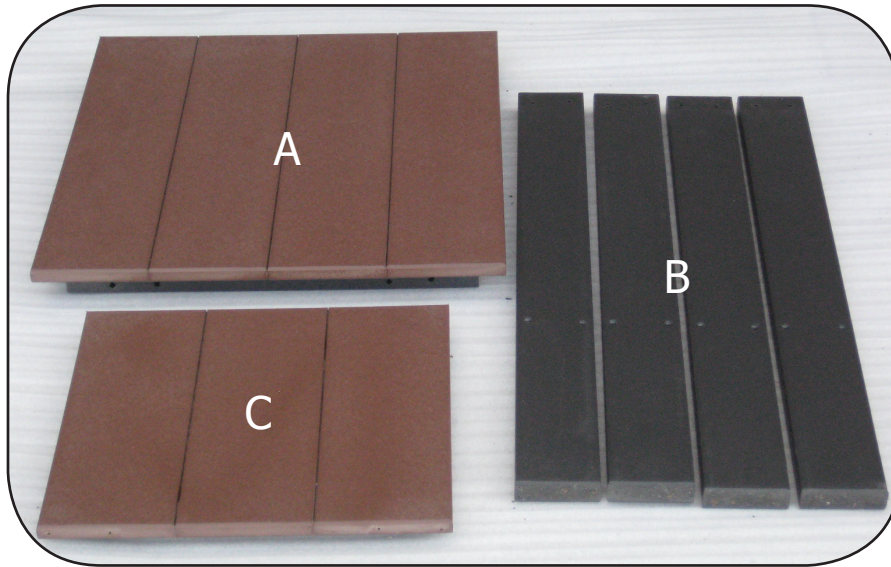

Step 1

Lay top (A) on a soft surface. Fasten legs (B) to top as shown using (8) 1/4" x 3" bolts and (8) 1/4" nuts.



Step 2

Lay table on side and fasten shelf (C) with (8) 2 1/2" screws. Align screws with holes in shelf.



Complete

WILDRIDGE[®]
PURVEYORS OF QUALITY POLY FURNITURE

www.wildridge.com
330-893-4212