


Polybird




CHAIR
P-95R


TOOLS

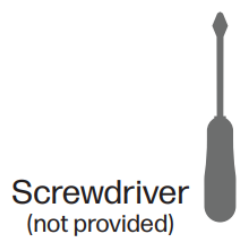


HARDWARE

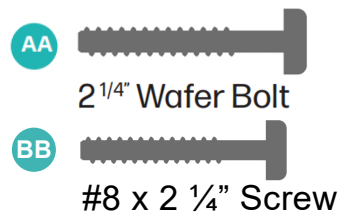

PARTS

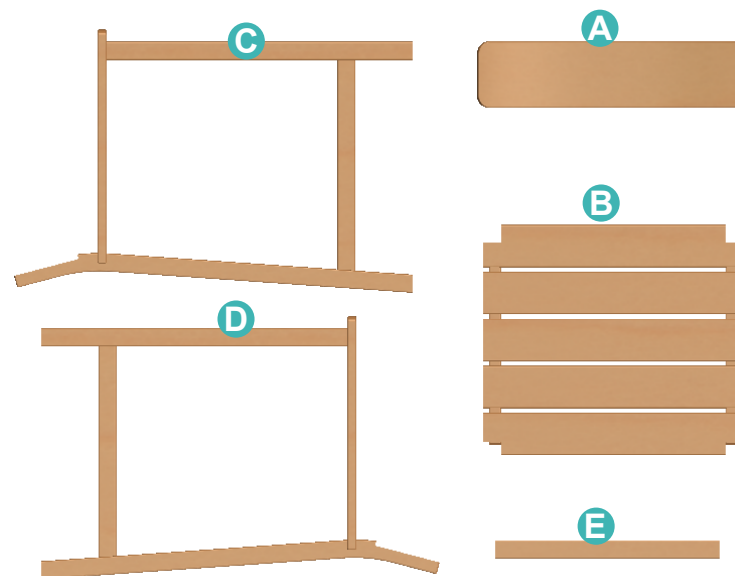


1

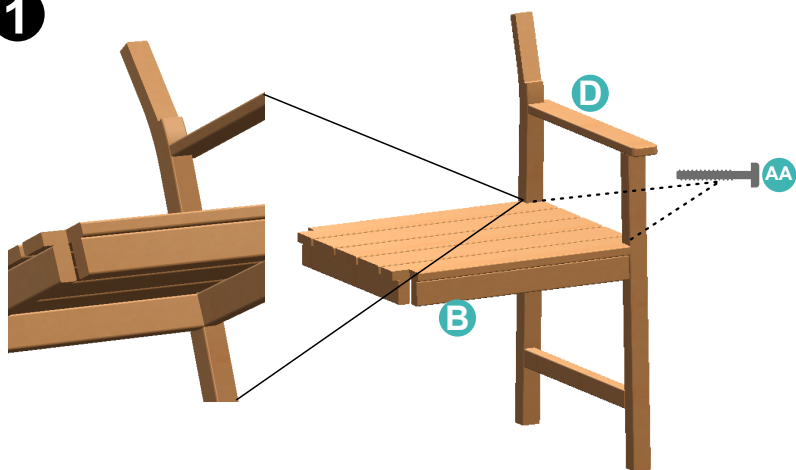


Attach right legs D to seat B using two 2 1/4" wafer bolts (AA) per leg, as shown.

2

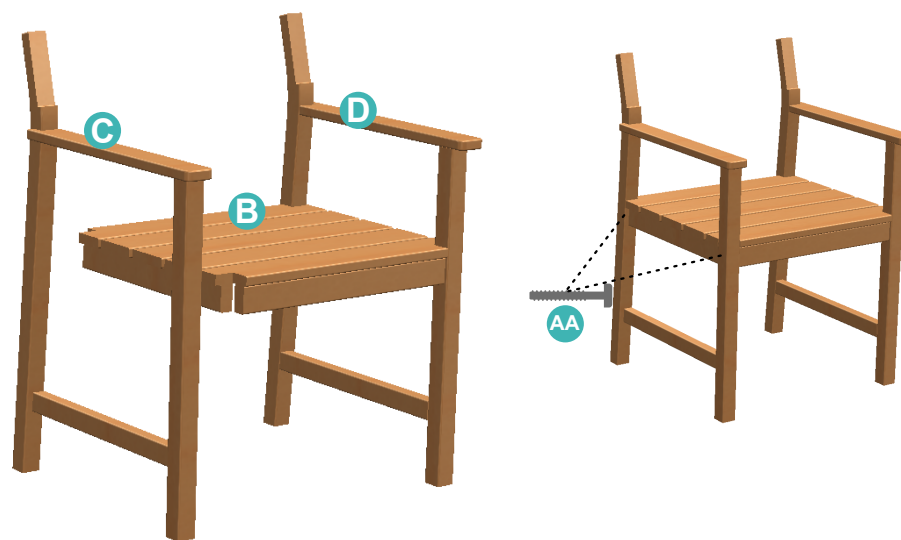



Attach left legs C to seat B using two 2 1/4" wafer bolts (AA) per leg, as shown.

3

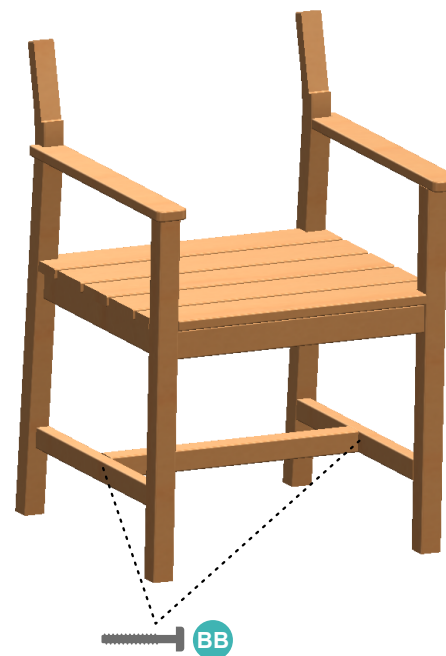

Attach middle brace E to both side braces using two #8 x 2 ¼" screw (BB) per brace, as shown.

4

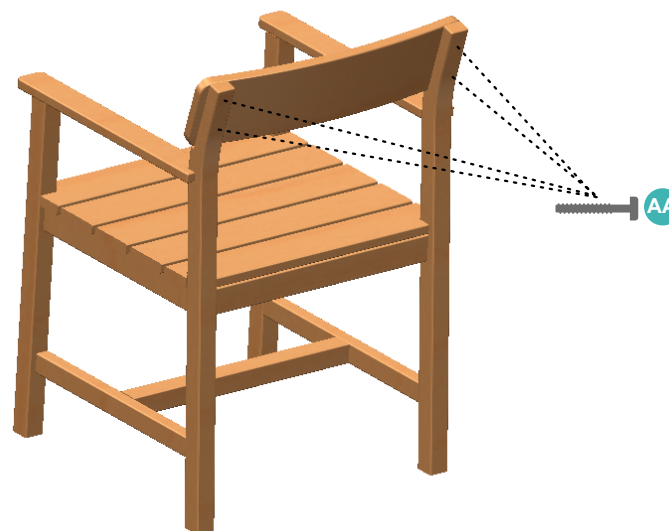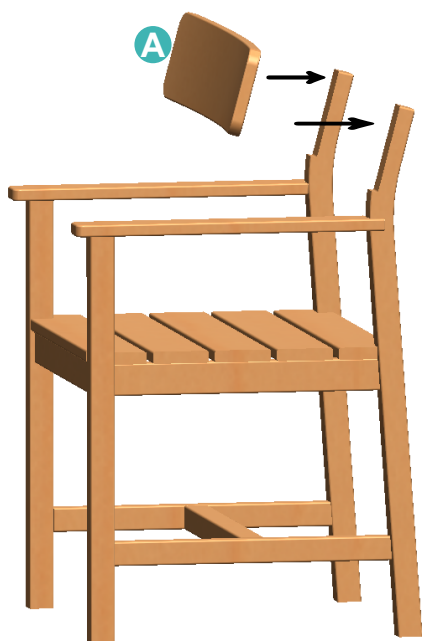

Attach backrest A to both rear legs using two 2 ¼" wafer bolts (AA) per leg, as shown.

We hope you enjoy your new piece of furniture for years to come!