



*Assembly Instructions*

## **Poly Table with Attached Benches**



*Thank you for choosing **A&L Furniture Co.***

*We hope that this piece brings you many years of enjoyment!*

For help with assembling your furniture,  
or if you have missing hardware, please email us at  
[help@aandlfurniture.com](mailto:help@aandlfurniture.com) or call us at 866-896-5747


## PARTS (included)

(A) Table Top (1)

(B) Bench Top (2)

(C) Legs (2)

(D) Braces (2)

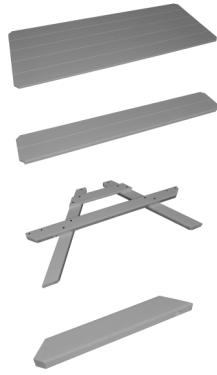

## HARDWARE (included)

(a) 2½" Bolts (12)

(b) Lags (2)

(c) Washers (2)

(d) Screws (4)

(e) Square Drive Bit (1)

(f) Allen Wrench (1)



## TOOLS NEEDED

Screwgun/powerdrill

$\frac{7}{16}$ " Socket

## STEP 1

Lay table top upside down on a clean flat surface and attach leg as shown in photo 1 and 2. Tighten the bolts using the included Allen wrench.

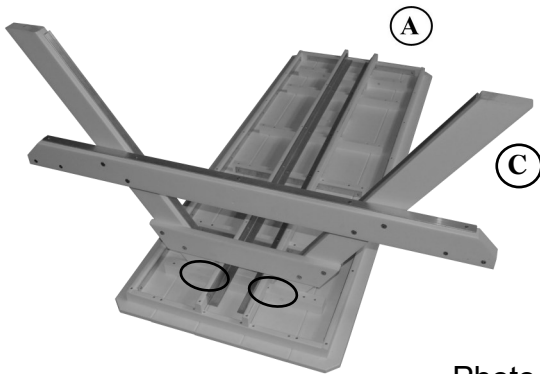


Photo 1

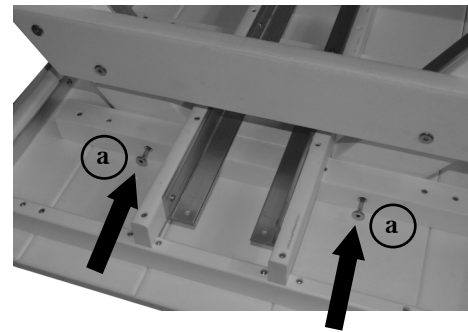


Photo 2

## STEP 2

Attach the braces as shown. (See photo 3.) Slip a washer on each lag (photo 4) and insert the lag into the countersunk hole in the brace. (See photo 5.) Use the  $\frac{7}{16}$ " socket to tighten the lag. Use the screws to fasten the brace to the table leg. (See photo 6.) Tighten with the included square drive bit using your screwgun/power drill.

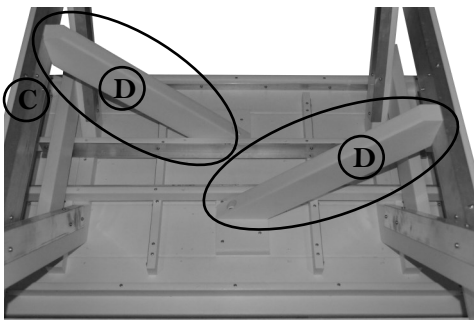


Photo 3

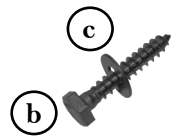


Photo 4

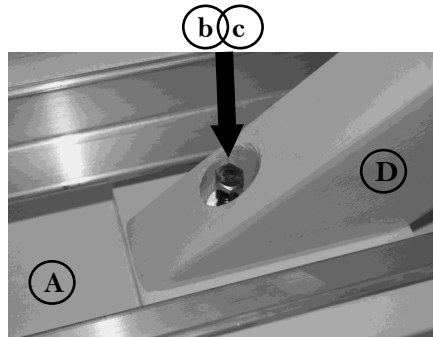


Photo 5

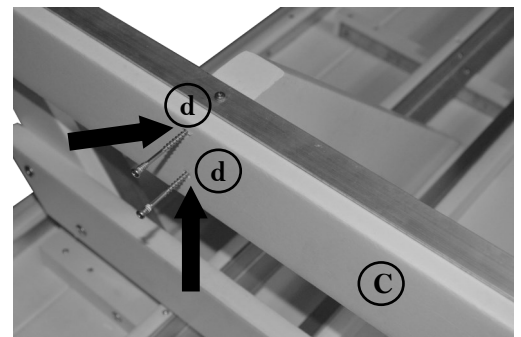


Photo 6

### STEP 3

Set the table upright. (See photo 7.) Attach bench tops as shown. (See photo 8.) Insert 2½" bolts through the table legs and tighten using the Allen wrench. (See photo 9.)



Photo 7

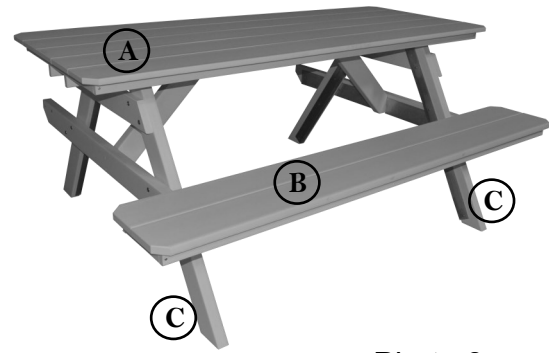


Photo 8

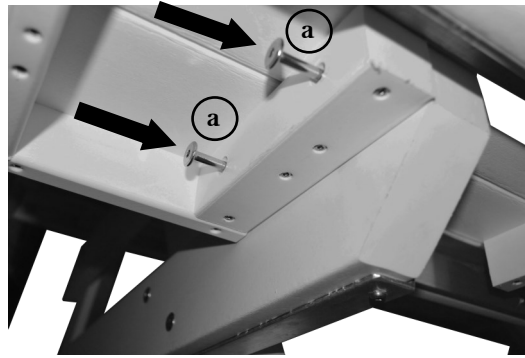


Photo 9