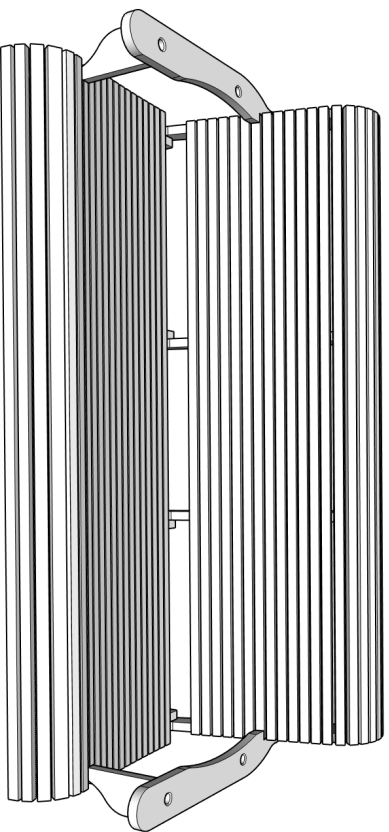
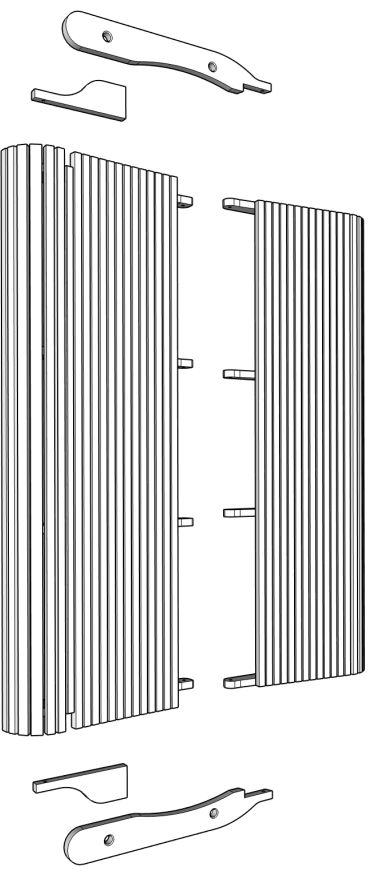


Louisiana Cypress Swings & Things, Inc

Swing Assembly Instructions



NO.	PARTS	QTY	NO.	HARDWARE	QTY
	SEAT	1	A	5/16 X 3" CARRIAGE BOLT	8
	BACK	1	B	5/16 WASHER	8
	RISER (left and right)	2	C	5/16 NUT	12
	ARM (left and right)	2	D	3" SCREW	4
	CHAINS	2			



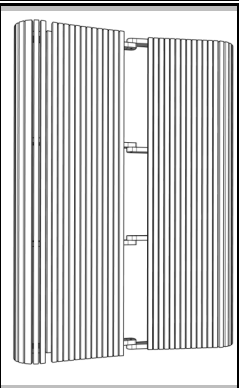
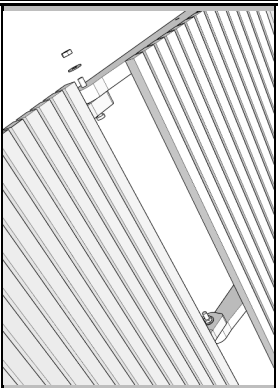
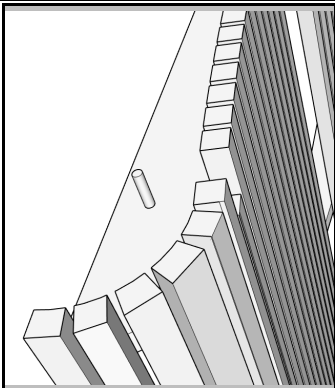
Included Tools	Optional Tools
#2 square Driver Bit	Power Drill

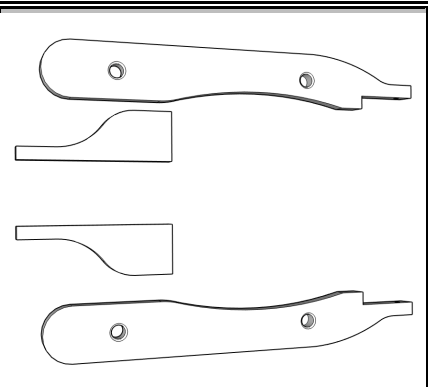
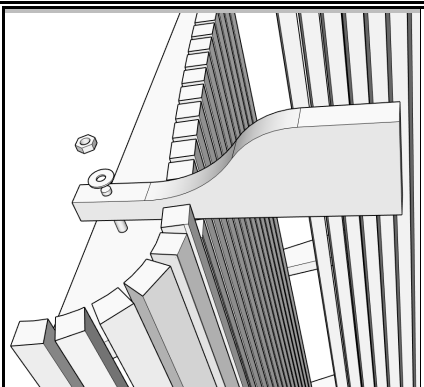
Email – la.cypress@yahoo.com
www.swingsandrockers.com
 318-765-7208

Thank You for your Order

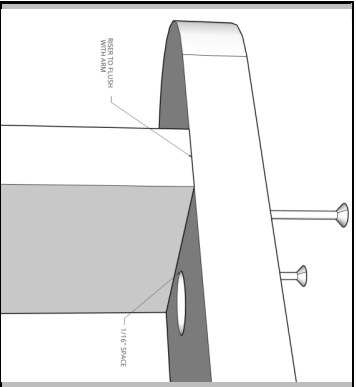
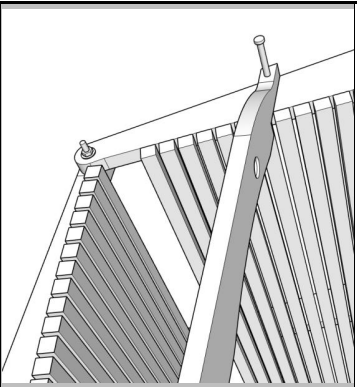
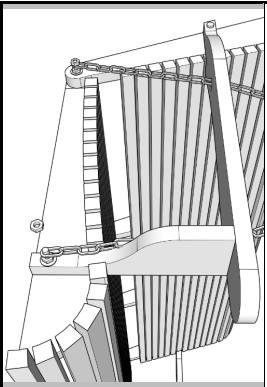
Swing Assembly Instructions

Please note that all bolt holes are pre-drilled and all hardware is supplied with the swing, including the chains and hooks. (**Swing beds and 7ft swings do not include chains or hooks**)

	<p>Place the Seat and Back as shown. Back is flush on sides.</p>
	<p>Install 3" carriage bolts(A) with heads facing center of swing. Add a washer(B) and nut(C) to each and hand tighten.</p>
	<p>Add bolt(A) to seat bottom, this is for the arm (threads should be facing out)</p>

	<p>Locate left and right arms and risers. Chain holes are beveled on top of each arm.</p>
	<p>Install Riser into bolt(A) from step 3, add a washer(B) and nut(C). Hand tighten.</p>

Swing Assembly Instructions

	<p>Install arm to riser for each side as shown, use 3" screws(D) (these holes are not predrilled). Be sure to leave 1/16" room between the chain hole and the riser. Repeat for other side.</p>
	<p>Raise back in line with Arm. Install bolt(A) through arm and into back. Add washer(B) and nut(C) to back side. Hand tighten. Repeat for other side.</p>
	<p>Tighten all nuts. Run chains through arm holes. Place chain on the bolts as shown. Add nut(C) to lock chain in place. Swing is now ready to hang.</p>

Email – la.cypress@yahoo.com

www.swingsandrockers.com

318-765-7208