

RV10 jackpoint installation instructions



- 1. Remove your main gear wheel pants.***
- 2. Jack your RV10 (for the last time) up high enough to the Remove Main wheel assy.***
- 3. Remove the two aft upper and lower bolts holding your brake caliper bracket and wheel pant bracket, Replace them with the supplied An4-17A bolts “INBOARD TO OUTBOARD***
- 4. Add the supplied spacer to the aft bolt that had no spacer.(see photo)***
- 5. Install the jackpoint base mount.***
- 6. Adjust as necessary your brake line to accept the jack Arm and pin installation for jacking***

NOTE#

We used different Jacks for testing the Jackpoints and found the Harbor Freight Alum floor jack and their Screw jack to work the best. In fact I carry a screw jack in mt RV tool bag. Here are the Part numbers:

Screw Jack:SKU# 66907 sells for about \$19.99

Alum floor jack SKU# 62160 sells for about \$89.99

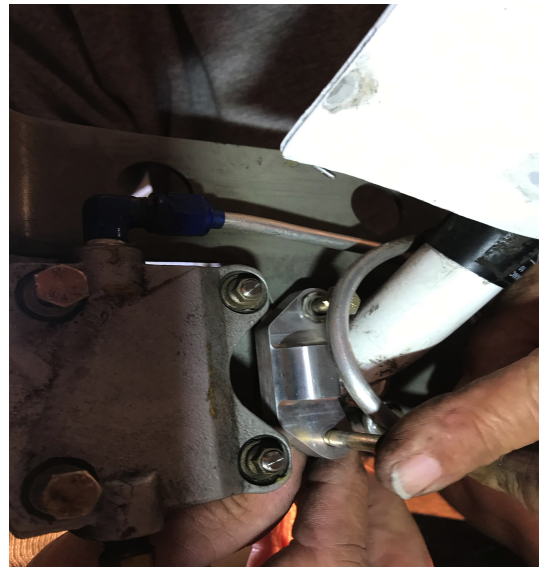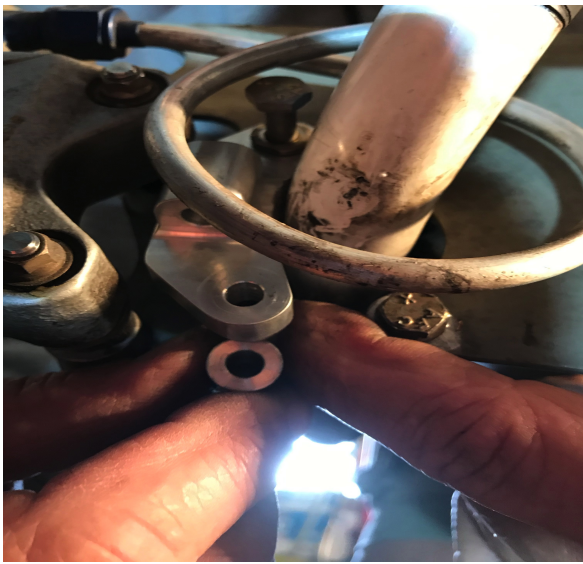

NOTE# IF YOU HAVE BERINGER BRAKES YOU'LL NEED TO CHANGE THE MOUNTING BOLTS TO AN4-21A AND ADD ONE THICK AN960 WASHER TO EACH BUSHING FOR SPACING.