



PN: 97105
Model Number: 97M-UBB
PN Instruction : 97001



Shown here:

Universal Bottle Jack Base, with
mounting hardware

PN: 97105



**Safe Jack Universal Bottle Jack
Base Instruction Manual**

The warnings, precautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. The operator must understand that common sense and caution are factors, which cannot be built into this product, but must be supplied by the operator.




WARNING: Do not allow anyone in or near the vehicle while using the jack. Sudden movement and weight shift can result in instability. Keep all personnel a safe distance away from the vehicle.



WARNING: Do not attempt to lift the vehicle on a side or longitudinal slope. The vehicle can slide or roll causing severe injury or death.



WARNING: Before lifting, place the vehicle's transmission in "PARK" for automatic transmissions and Low gear (1st gear) for manual transmissions. Set the vehicle's emergency brake. Then, block the wheel diagonal to the wheel that is being lifted, with wheel chocks. Failure to follow this instruction can result in severe injury or death to personnel.

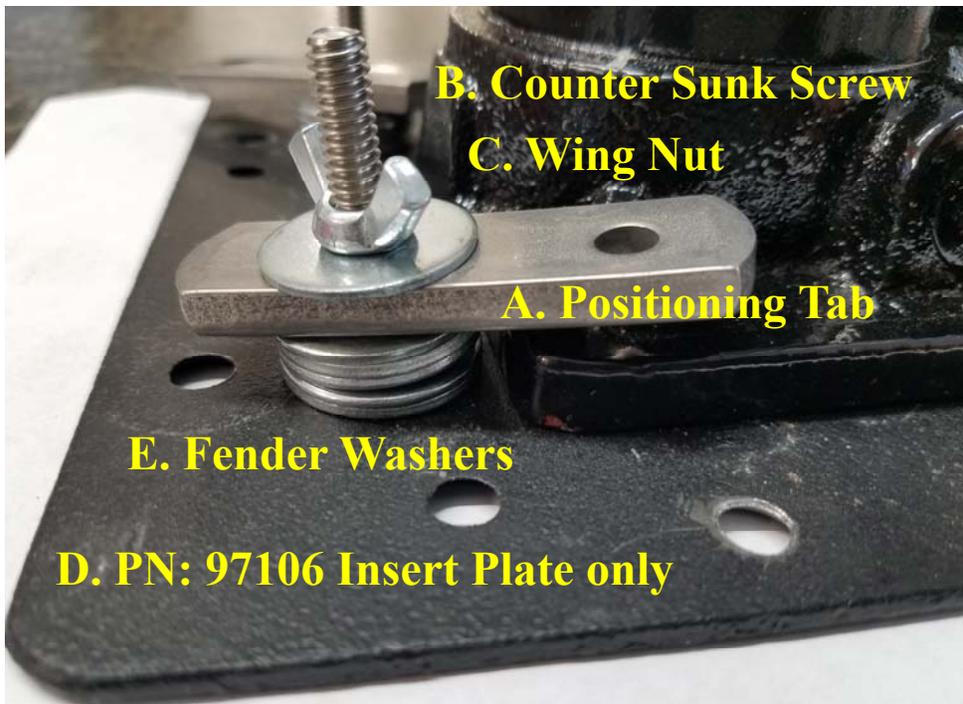

Unpack the 97105 (97M-UBB) and ensure that all parts are included.

If you are missing any parts please call 1-509-735-2106 immediately and reference which parts.

ITEM	MODEL NUMBER	PN	QTY	DESCRIPTION
A	97M-04-01-03	97124	4	Positioning Tabs
B	97M-25C175MXFS	97125	4	1/4-20, 1.75" length, Countersink, Phillips Drive, Stainless Steel
C	97M-25CNWI0Z	97126	4	1/4 x 20 Wing Nut
D	97M-UBI	97106	1	8"x7" insert plate only
E	97M-25N100WFE0Z	97127	25	1/4 x 1" Fender washer zinc

2. Everything should come in a box and look like this.



3. Set your bottle jack on top of the base plate in the middle of the screws as shown. Screws can be moved to accommodate various sized jacks.

NOTE: Jack bases vary, and it may not be possible to clamp in 4 places as shown.



4.

Stack washers on screws until each stack of washers is slightly shorter than the base of the jack. Install the tabs over the screws and adjust the position of the jack to try to get the tabs to fit onto flat spots on the base of the jack. Make sure that you do not block the release valve with any of the clamps.



5.

Add 1-2 washers on top of the tab and tighten down the wing nuts onto the tabs until you feel that your bottle jack is securely attached to the base plate.

