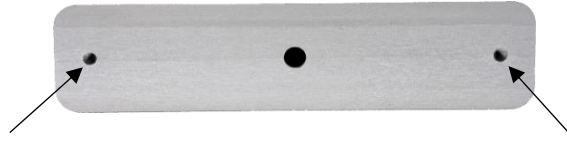


Quick installation guide

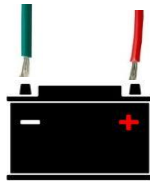
Location

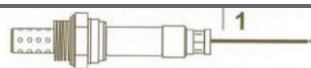
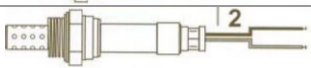
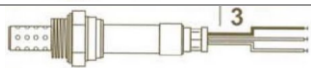

Using the two M3 threaded holes on the back, attach the SPILBA AFR indicator to your vehicle's panel where it can be easily seen and securely fastened.



Connection

| NARROWBAND SPILBA cable | Connection |
|-------------------------|----------------------------|
| RED | +12 VCC |
| GREEN | GND |
| BLUE | Black probe cable (to ECU) |



| Lambda probes | Description of the cables |
|---|--|
|  | - Black – Signal |
|  | - Black – Signal - Grey – GND |
|  | - Black – Signal - White – Heater (+12 Vcc) - White – Heater (GND) |
|  | - Black – Signal - White – Heater (+12 Vcc) - White – Heater (GND) - Grey – GND |

Probe location

