

# ASSEMBLY INSTRUCTIONS

## Counter Stool

Model 4-110

**TRAXION**  
engineered products



If you have any questions please contact us at:


phone: 479-474-3460

email: [service@traxionproducts.com](mailto:service@traxionproducts.com)

[www.traxionproducts.com](http://www.traxionproducts.com)


## PARTS

Top Leg Section  
with End Caps

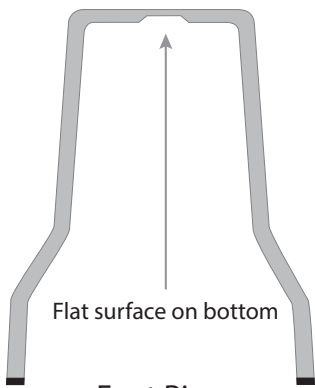


Flat surface on bottom

Foot Ring

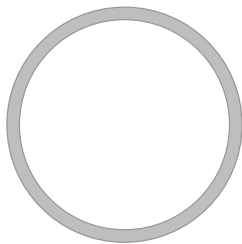

Bottom Leg Section  
with End Caps

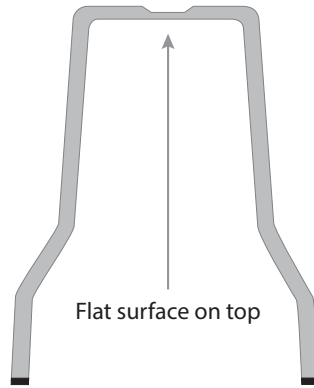

Flat surface on top

Swivel



Padded Seat



Assembly Tools\*



\* A 10mm socket will make assembly easier and faster



## ASSEMBLY



Position Top Leg Section over flat surface of the Bottom Leg Section. Secure using one 3/4" Allen-Head Bolt and Nyloc Nut.



Place Foot Ring over Leg Assembly (holes in Foot Ring face down). Line up the Foot Ring holes with the Leg Assembly holes and secure with 1 3/4" Allen-Head Bolt and Nyloc Nuts.

Loosely thread all of the nuts before tightening.

Rotate Swivel to expose all slotted holes as shown here.



Insert the four 1 3/8" Allen-Head Bolts through the slotted holes on the Swivel plate and then through the holes on the top of the Leg Assembly. Secure to Leg Assembly using Nyloc Nuts.

Loosely thread all of the nuts before tightening.



Place Padded Seat with pad down and align the slotted holes on the other Swivel plate with the holes on the bottom of the Padded Seat. Secure using the four 3/4" Allen-Head Bolts.

Loosely thread all of the bolts before tightening.

**Check bolts and nuts to ensure they are all tightened.  
ENJOY!**