




Thank you for purchasing this Tool Tray. If you have any questions or comments please visit our website at www.traxionproducts.com or phone 479-474-3460.

TopSide Bolt-On Tool Tray Parts List

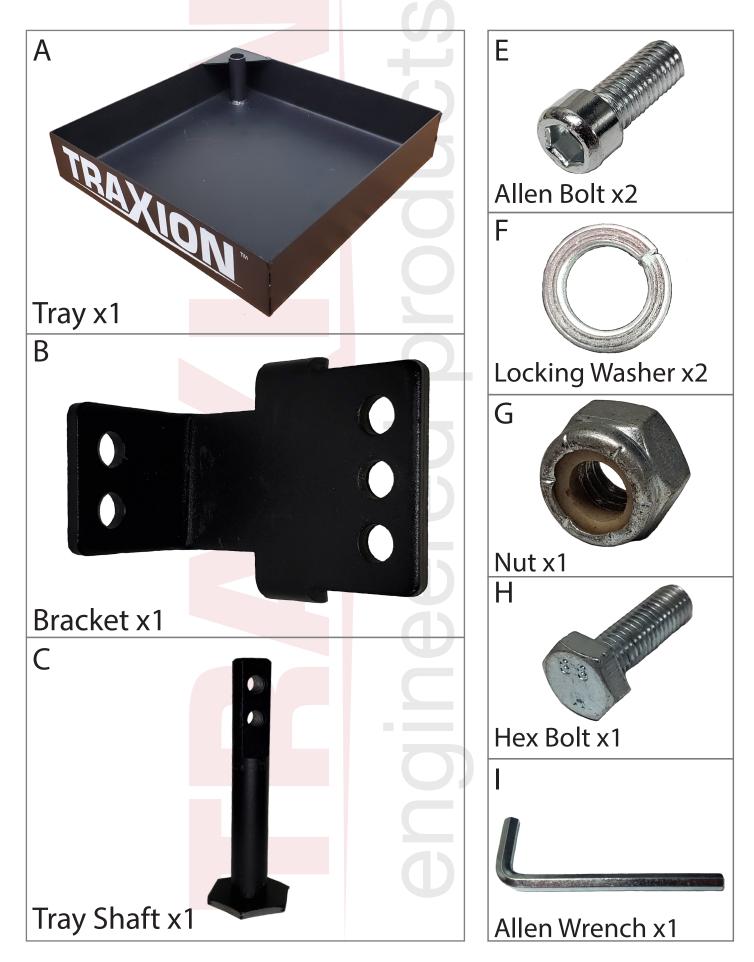


REQUIRED TOOLS:

Allen Wrench (included), 13mm / Adjustable Wrench



Attach bracket to Topside Creeper

Using a wrench, attach the wider side of the bracket (B) to the inside of the front of your Topside Creeper with the hex bolt (H) and nut (G) in the middle hole, it should be flush with the side of the Topside Creeper.

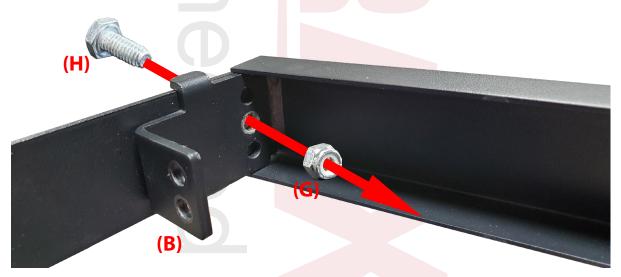



Insert Tray Shaft into Tray


Slide the tray shaft (C) through the tray (A) from the bottom with the flat side facing the side of the tray, as shown in the picture.





Attach Tray to Bracket

Using the included allen wrench, attach the bracket to the flat side of the tray shaft with 2 locking washers (F) and allen bolts (E). Make sure the shaft stays in the tray. You can do this easily by holding the tray near the corner and placing one hand under the insert while putting the bolts in with your other hand.

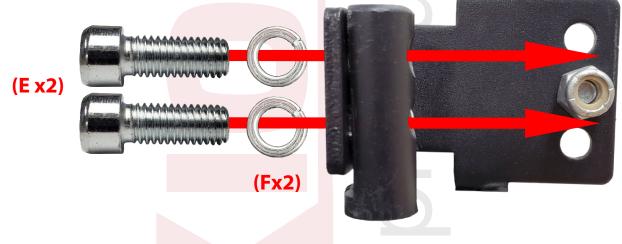

Don't forget, your Tool Tray can rotate!



See more great products at www.traxionproducts.com

and

Search traxion products on