


INSTALL INSTRUCTIONS

- 1) Clean the inside surface of your rear most trunk windows with the included alcohol wipes and the windows dry
- 2) Place the Rod Rig in the back of your vehicle and align it so the smaller, extending tube side is on the driver side
- 3) Press the push button on the tube so the Rod Rig can extend
- 4) Remove the yellow protectors from the black vacuum cups and put them in a safe place to store
- 5) Position the cup up against your window, with the vacuum pump straight down and the tube perpendicular to the window
- 6) Press firmly on the logo on the backside of the suction cup while pumping the vacuum plunger until the plunger slows down and you feel suction

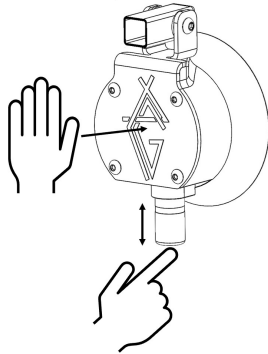

- 7) Stop pumping the plunger when the white safety line is just visible under the housing in its relaxed state

NOTE: The cup should hold itself to the window but still be able to slide and twist with some force


- 8) If the cup is not sealing, ensure the tube is perpendicular to the window and increase pressure slightly on the back of the cup to help it form a seal to the curvature of the window

- 9) Repeat with the opposite cup, again leaving the white safety line barely visible under the housing
- 10) Once both cups are supporting the Rod Rig, gently insert a fishing rod into one of the holders
- 11) Holding the vacuum cups, slide and rotate the cups until the rod is at the desired position and angle along the roofline of your vehicle
- 12) Once you are happy with the angle and placement of the rod, press on the logo on the backside of the suction cup and pump the vacuum pump until the white safety line is not visible and the cups are held firmly in place

NOTE: If the plunger does not stay in, ensure your cup is clean and you are pushing on the back of the cup


- 13) Check the white safety line is not visible periodically, and if it is, simply pump the plunger so the line is no longer visible

**SCAN THE QR CODE FOR AN
INSTALL VIDEO**

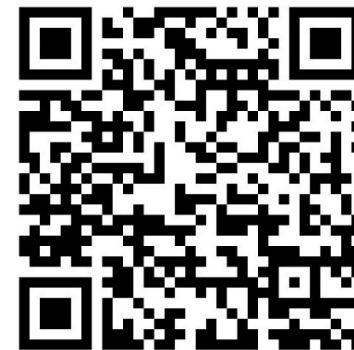


USAGE INSTRUCTIONS

- 1) Put the rod handle through the opening in the rod holder, displacing the bungee, then move the handle down into the angled sections

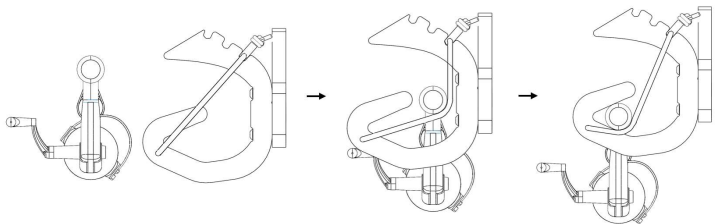

- 2) Use the pull tab to adjust the shock cord tension as desired to hold the handle firmly

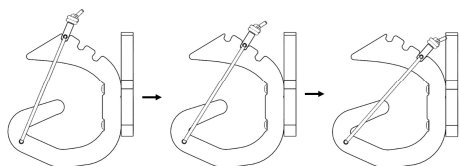

- 3) If you need to break down a multiple piece rod, disassemble and place the other sections in the holder next to the handle

NOTE: We recommend securing multiple piece rod sections together at the end with a rubber band, hair tie or other means

REMOVAL INSTRUCTIONS

- 1) Pull on or bend the release tabs on the backside of the cups towards the center of the cup to release the suction/seal

NOTE: If the cup does not come off easily, try twisting the cup away from the window while pulling the tabs on the cup

- 2) Collapse the Rod Rig until the button locks the pieces into place and put the protective cover back on the cups for storage

ROD RIG INSTRUCTIONS



SCAN THE QR CODE FOR AN
INSTALL VIDEO



PRIMALGEOMETRY.COM