


Built In Kit Cutout

The built in kit is designed to give your stove that pre-existing “built-in” look. There are three different ways to install the kit. Please note the cutout width below that applies to your application.

- 1) The brackets can be mounted on the counter top so that they sit $\frac{3}{8}$ ” higher than the rest of the counter top. Cutout width for this install would be 20.5” to 22.25”.
- 2) The brackets can be mounted to the sides of the cabinets so that they are level with the counter top. Cutout width for this install would be minimum 22.5” wide.
- 3) The brackets can be mounted to the sides of the stoves so that they are level with the stove top. Cutout width for this install would be 20.5” to 22.25”.

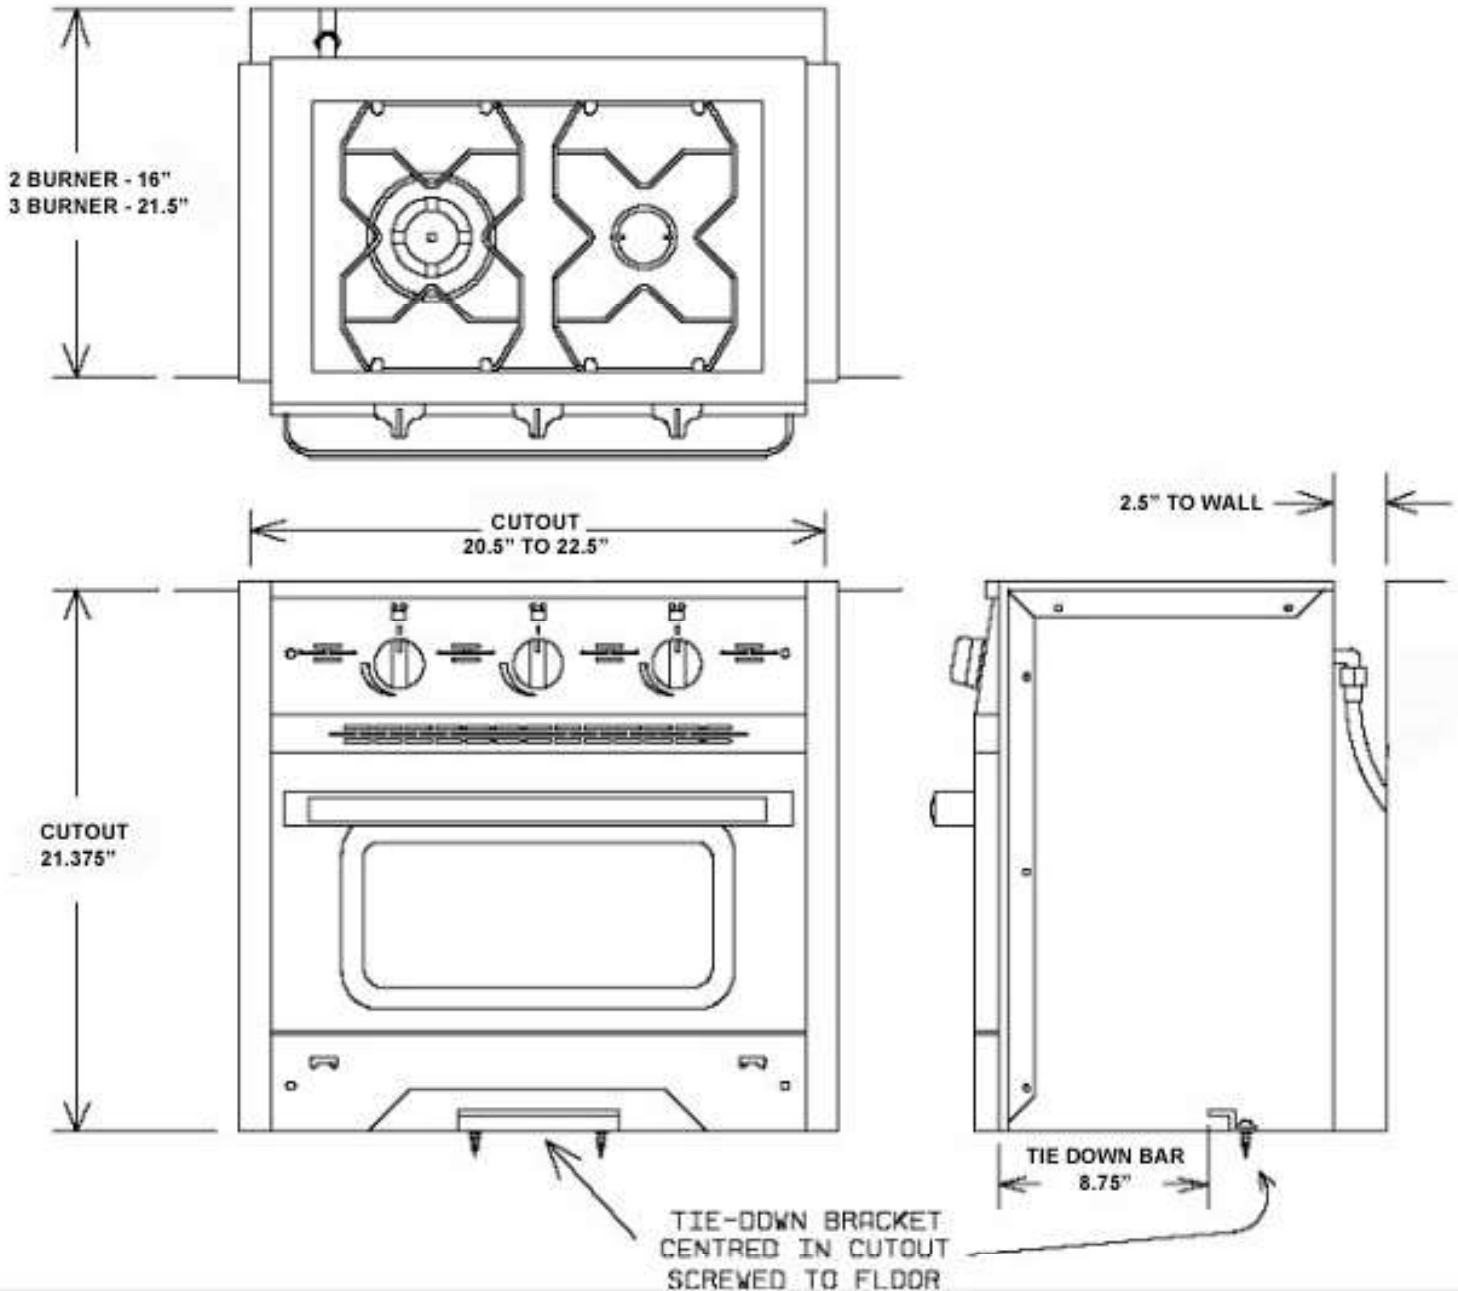

Built In Kit Part #
Caribbean - 26-000
Mediterranean - 26-001