


Southwest Speed Brake Cushion Kit INSTRUCTIONS

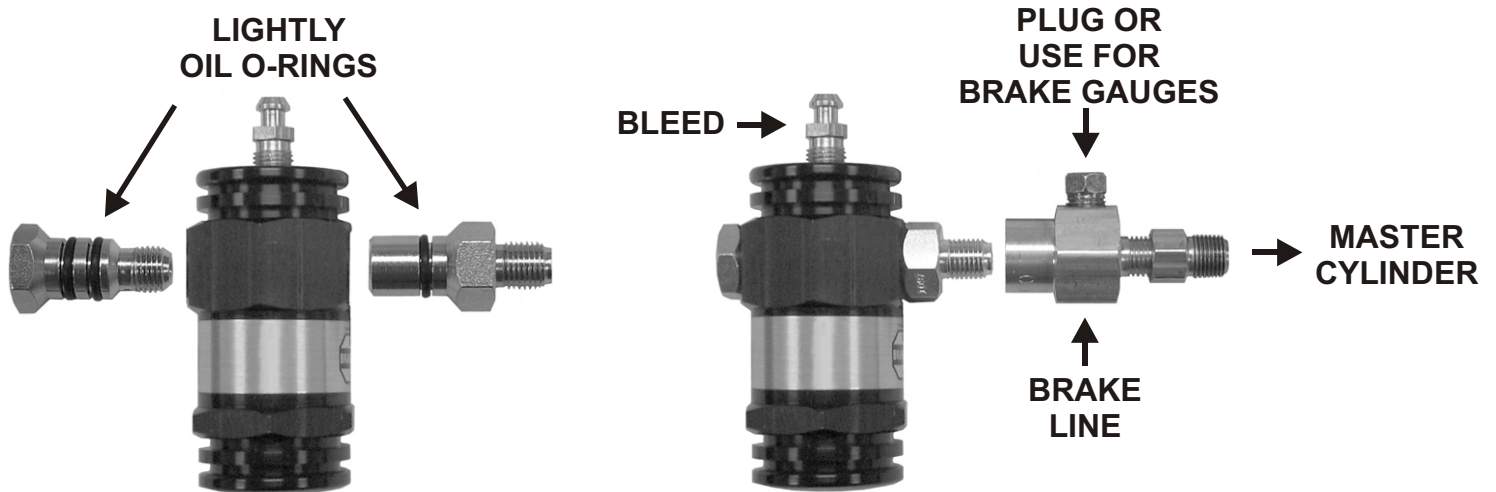

1. Install (1/8" NPT) brass adaptor into master cylinder.
2. Screw round "T" into brass adaptor.
3. Screw brake cushion onto the round "T" with bleeder valve up.
4. Screw brake line into one side of the round "T" and screw plug into the other side, or use for brake gauges.
5. Plumb the rest of the brake line and bleed brake cushion first.
6. Finish bleeding the brakes, then re-bleed to insure no trapped air.
7. Panic stop 4 to 5 times to seat system.

NOTE: If you use plastic brake lines you will need to use (2) #301-094 "T" Fittings.

