


Retro95

Nissan D21 Hardbody 3" Exhaust
P/N 32106017

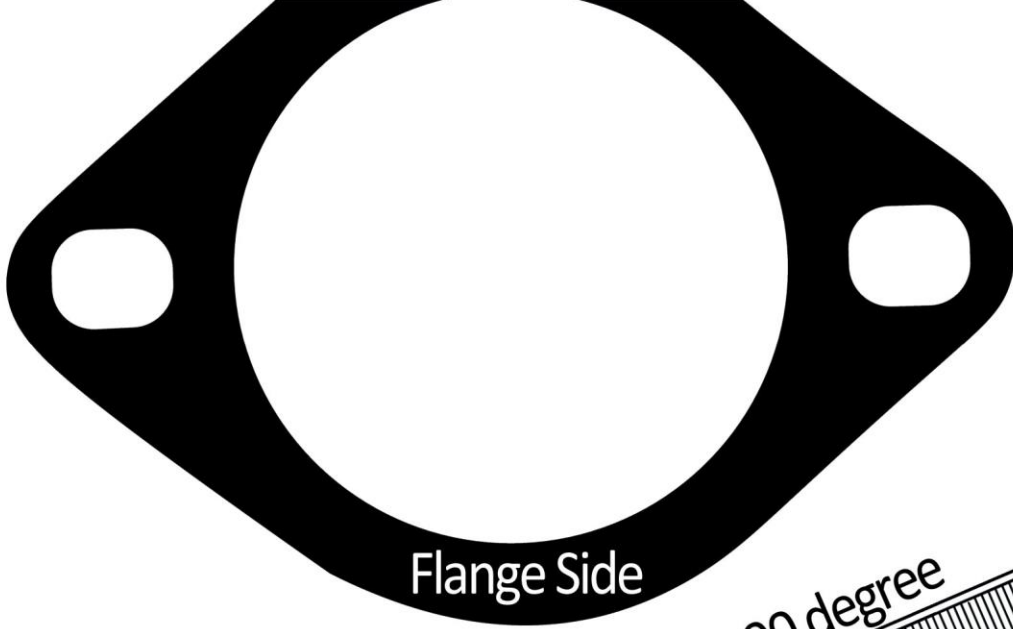

Fold here 90 degree

Exhaust Fitment Guide

This template helps you to check the exhaust fitment on some early or late model Nissan Hardbody trucks other than the 1990 through 1995 year model. The 2-bolt catalytic converter flange has to line up with this template in order to install the 3" exhaust kit without any modification. All hardbody trucks come with the same front exhaust hanger and bracket, use this point to check the fitment. Remove the mid-pipe between your exhaust and the catalytic converter. Leave the front rubber exhaust hanger, you will use this as a guideline. Hold the catalytic converter in its original position, don't let it hang low. Print the template in 1:1 or full scale on 8.5" by 11" Letter size paper. Use the metric ruler above to confirm the scale. Cut out the hanger side and flange side holes on this template then fold it 90 degrees. Insert the

template hanger hole into your the exhaust hanger stud. Hold the template and check if template print and the catalytic converter flange line up for the two exhaust bolts.

