




Step 1

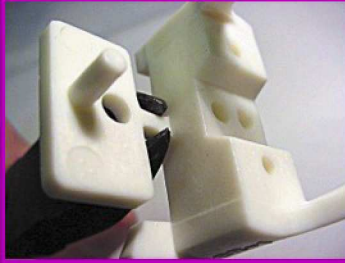

Step 2

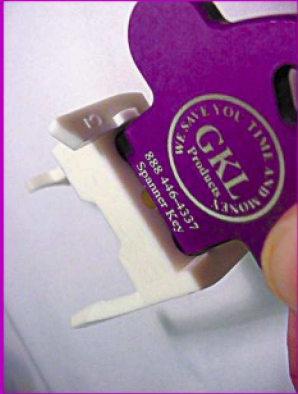

Step 3

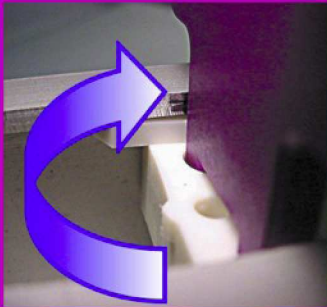

Storefront Door Modification Kit

Instructions

Note: For lock installations follow steps 1,2,3,4.

Note: For blank faceplate installations follow steps 1,2,3,5.

Step 1: Separate spacer from bridge and clean up edges.

Step 2: Insert the SK1 spanner key (not included) into bridge and turn vertical.

Step 3: Push bridge with spanner key into the aluminum door stile and turn clockwise 90 degrees, into position and remove key.

Optional: Insert two #6 x 1 1/2" screws into each bridge using the same holes that were used with the spanner key wrench.

Step 4: Insert lock into door using two #8 x 5/8" pan head screws (provided) - complete lock installation with cylinders and lock's faceplate.

Step 5: To install a furnished blank faceplate (instead of a lock) insert the third bridge in the center of door stile opening followed by a break-off spacer from step 1. Install blank faceplate with 3 of the #8 x 5/8" pan head screws. Use the furnished shims to bring faceplate even with the surface of the door's edge.

Contents

3 Bridges, 2 Blank Face Plates (a radius and a beveled), 6 Shims, 6 #6x1-1/2" pan head screws, 3 #8x5/8" pan head screws, 1 ADD2 set, and 2 rear brackets with screws

Optional



Steps 4 & 5



If you need to install only a faceplate, insert a third bridge followed by the break-off spacers and shims if needed.

TIP!

If the bridge is not fitting well into a narrow stile, try shaving down the feet of the bridge.

