

Installation Instructions

CP030200478&CP030200479

[Fits: Jeep Grand Cherokee Without CD player 2014-2020]

Thank you for your purchase! Please contact us for any issues!

Hardware List:

3 x Self-Tapping Screws

5 x Nuts

5 x Washer

Tools Needed:

Phillips Screwdriver

Open-ended wrench

Punching Cone


Note 1 When you receive this product, we recommend you that you should check the hardware before installation.

Note 2 The password code should be set with the **DOOR OPEN** to test the lock effectively without locking yourself out.

Safe installation:

STEP 1 Empty the armrest box including the factory mat at the bottom.

STEP 2 Put the side panels into the armrest box. **Note two side panels are different!**

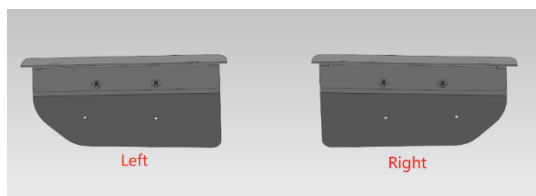

STEP 3 Open the lid of the top panel, please find the reserved notches of both sides of the top panel.

Please keep the notches covering the studs on the side panels.

STEP 4 Hand the washers and nuts on the studs, then use an Open-end wrench to tighten the nuts.

Do not overtighten the nuts, overtightening will damage the studs.

STEP 5 Use the punching cone to poke small holes in the wall of the armrest box through the reserved holes of the side panels.

STEP 6 Use the Screwdriver to screw the Self-tapping Screws through the reserved holes of the side panels into the armrest box. Also do not overtighten the screws.

DO NOT OVER-TIGHTEN, over-tightening may also result in armrest safe damage.