

INSTALLATION INSTRUCTIONS

CP030200327 & 328

[Fit Jeep Wrangler 2011-2017]

Thank you for purchasing our products! Please contact us for any issues!

Parts List:

4 pcs nuts
4 pcs Washers
4 pcs Self Tapping screws


Tools Needed:

Wrench
Punching Cone
Screwdriver



STEP 1 Open the armrest box cover, also the plastic tray, and empty the armrest box of any content.



STEP 2 Put the Side Panels into the armrest box. Pay attention, the side panels are different.

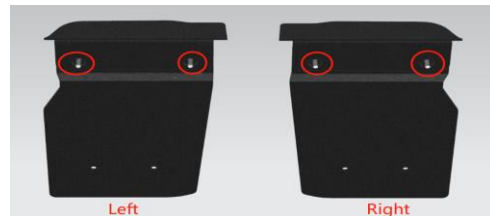


STEP 3 Make sure the studs on the side panels are face to face in the armrest box. Position the top panel on the side panel. Find the holes on the top panel and position the holes over the studs of the side panel.

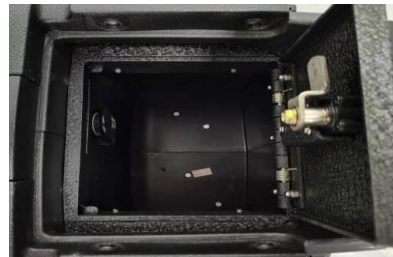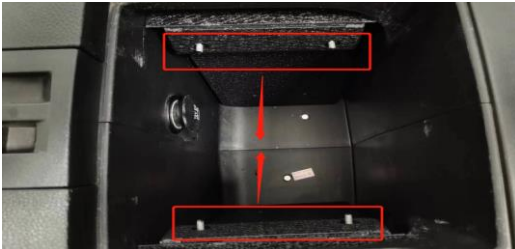

STEP 4 Hand the washers, then the nuts on the studs of the side panel, and use the **Wrench** to tighten the **nuts**. Use the **punching cone** to poke holes in the wall of the armrest box via the reserved holes of the side panels.



STEPS 5 Use the **Screwdriver** to tighten the **Self Tapping Screws** into the bottom of the safe. Put the cushion into the safe.

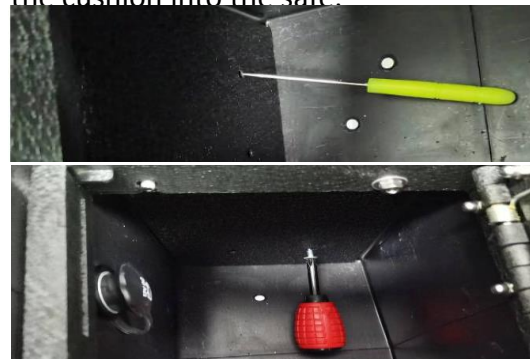

STEP 6 Enjoy your purchase! Contact us for any issue.

If you have any questions, welcome to contact us by email!

We will contact you within 24hours.

Thank you very much!