

# INSTALLATION INSTRUCTIONS

CP030200173&CP030200342

[ fit Jeep Wrangler 2018-2022 ]

**Thank you for purchasing our products! Please contact us for any issues!**


## Parts List:

4 pcs Blind nuts  
4 pcs Self Tapping screws

## Tools Needed:

Wrench  
Punching Cone  
Screwdriver

**STEP 1** Empty the armrest box of any content.

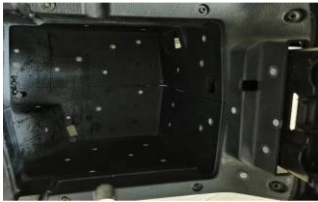

**STEP 2** Place the **Top Panel** into the armrest box and try to place the panel on the top of the armrest box.



**STEP 3** Open the **Lid** and put the **Side Panels** under the top panel. And verify the screws of the lid is inserted accurately into the reserved holes of the side panels.



**STEP 4** Use the **Wrench** to tighten the 4 **Blind nuts**. Use the **punching cone** to poke four holes at the bottom of the armrest box through the reserved holes of the side panels.

**STEPS 5** Use the **Screwdriver** to tighten the **Self Tapping Screws** into the bottom of the safe. Put the cushion into the safe.



**STEP 6** Enjoy your purchase! Contact us for any issue.

**If you have any questions, welcome to contact us by email!**

**We will contact you within 24hours.**

**Thank you very much!**