

INSTALLATION INSTRUCTIONS

CP030200322& 323

[Fit Lincoln MKC 2019]

Thank you for purchasing our products! Please contact us for any issues!

Parts List:

4 pcs Blind nuts
4 pcs Self Tapping screws

Tools Needed:

Wrench
Punching Cone
Screwdriver

STEP 1 Take out the soft tray from the armrest box, and empty the armrest box of any content.




STEP 2 Open the lid of the safe and position the **Top Panel** into the armrest box.



STEP 3 Put the **Side Panels** under the top panel. Pay attention, the **side panels** are **different**. Make sure the side panels are **hung on** the screws of the top panel via the **reserved holes** of the side panels.



STEP 4 **Hand** the blind nuts on the screws of the top panels and use the **Wrench** to tighten the 4 **Blind nuts**. Use the **punching cone** to poke holes at the bottom of the armrest box via the reserved holes of the side panels.

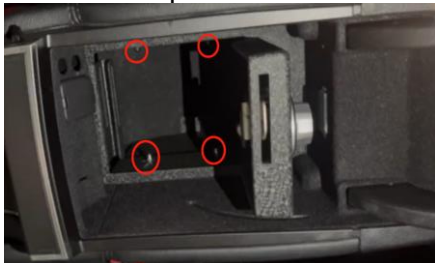

STEPS 5 Use the **Screwdriver** to tighten the **Self Tapping Screws** into the bottom of the safe. Install the soft tray and put the cushion into the safe.



STEP 6 Enjoy your purchase! Contact us for any issue.

If you have any questions, welcome to contact us by email!

We will contact you within 24hours.

Thank you very much!