

INSTALLATION INSTRUCTIONS

CP030200144&CP030200182&CP030200341
[Subaru Outback 2015-2019]

Thank you for purchasing our products! Please contact us for any issues!

Parts List:

4 pcs Self Tapping screws

Tools Needed:

Screwdriver
Punching Cone

STEP 1 Empty the armrest box of any content.




STEP 2 Console safe



STEP 3 Put the safe into the armrest box, open the lid and find the four reserved holes at the safe bottom.



STEPS 4 Use the **punching cone** to **poke** four **holes** the bottom of the armrest box through the **reserved holes**. Use the **Screwdriver** to tighten the **Self Tapping Screws**

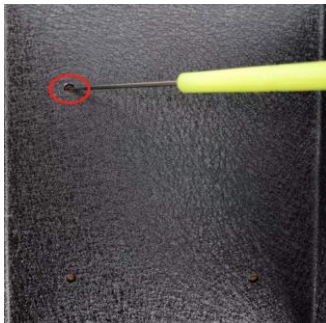

STEP 5 Enjoy your purchase! Contact us for any issue.

If you have any questions, welcome to contact us by email!

We will contact you within 24hours.

Thank you very much!