

# INSTALLATION INSTRUCTIONS

CP030200169&170

[ Toyota Sienna 2021-2023 ]

**Thank you for purchasing our products! Please contact us for any issues!**

## Parts List:

4 pcs Self Tapping screws  
4 pcs Hexagon Flange Nut

## Tools Needed:

Screwdriver  
Punching Cone  
Wrench



**STEP 1** Empty the armrest box of any content.



**STEP 2** Position the **Top Panel** into the armrest box.



**STEP 3** Open the **Lid** and put the **Side Panels** under the top panel. Pay attention, the **side panels** are **different**. And verify the screws of the lid is inserted accurately into the reserved holes of the side panels

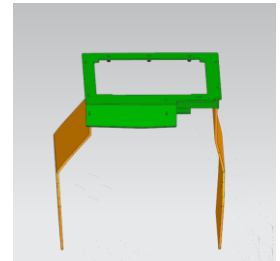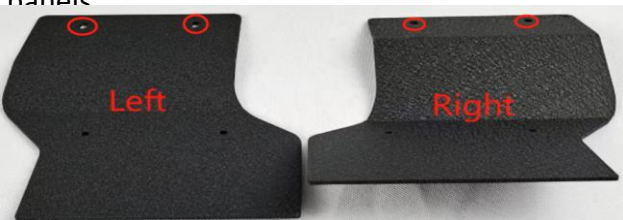

**STEP 4** Use the **Wrench** tighten the **Hexagon flange nuts**



**STEPS 5** Use the **punching cone** to **poke** four **holes** the inner wall of the armrest box through the **reserved holes**. Use the **Screwdriver** to tighten the **Self Tapping Screws**



**STEP 6** Enjoy your purchase! Contact us for any issue.

**If you have any questions, welcome to contact us by email!**

**We will contact you within 24hours.**

**Thank you very much!**