


**10**



Use a 2mm hex  
Tighten the preload adjuster bolt until the adjuster edges touch  
Do not over-tighten the preload adjuster. It is okay to leave a gap in the adjuster, as long as the top edges touch.

**11**

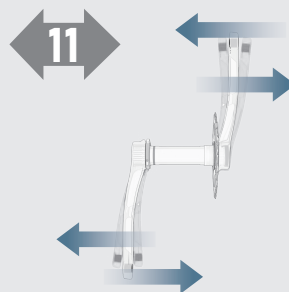

Check both sides of the crankset to make sure there is no play

**12**



Install the pedal washer between the crank arm and pedal.