



Instructions

VACUMM CUP


ROOF TOP STROBE LIGHT



THANK YOU

FOR YOUR PURCHASE!

integraltruck.com

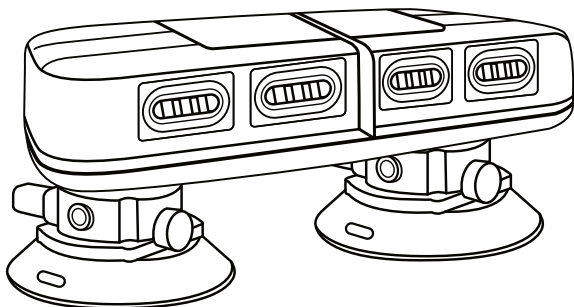

Warning


Our vacuum cups work perfectly with glass, metal, fiberglass, and all other smooth, nonporous surfaces. **To ensure a proper seal, please clean the surface prior to installation.**

Warning: the vacuum cup will **NOT** attach to porous, non-smooth surfaces, such as:

Rough dashboard materials:




Marine decks with indented ridges in any shape:

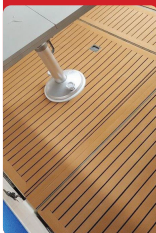

Wrapped vehicles:



Textured walls:

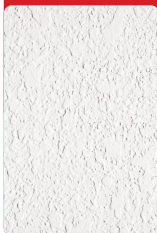

1



Clean the surface before mounting the light.

2



To attach, ensure the entire edge of each vacuum cup is touching the mounting surface. Install one side at a time. Firmly apply an even amount of pressure to the top of the light, directly above the cup. Press the pump repeatedly until the red indicator band completely disappears

3



When all the air is evacuated from the pad, the pump will remain inside the pump housing.

4



Plug in the 12V connection and enjoy!

5



To remove, lift the edge of the vacuum pad away from the surface by pulling either of the tabs on the top of the vacuum pad up and towards the center of the vacuum mount.

Warning

Before driving, always check the pumps to make sure the red indicator bands are still fully inside the pump housing. If either band is visible, reinstall the product.

Thank you for your purchase!

It's time to upgrade your truck. If there are any issues with your order or any assistance is needed, please contact us at: info@integraltruck.com

Text: (303) 834-7012 M-F 9am-5pm MST



If you are happy, a review is greatly appreciated!