



KTM RC

125 / 200 / 250 / 390

WHEELIE BAR



Installation Instructions

Installation Instructions



Kit contents

- A** 1x wheelie bar
- B** 2x adjusting washers
- C** 2x M8x25 bolt
- D** 4x M6x20 bolt
- E** 4x M6 nut

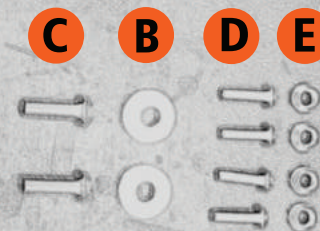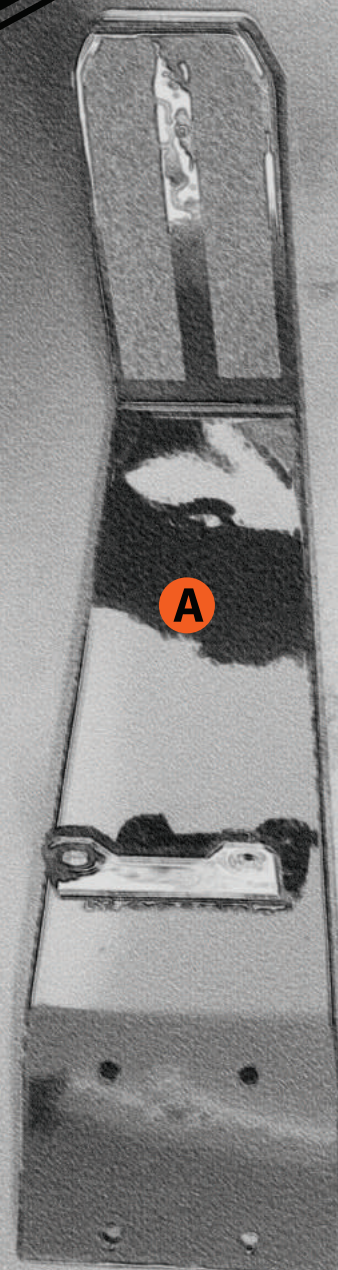

Installation Instructions



✂ Tools needed



- Allen key 4mm and 5mm
- Socket wrench size 10
- Ratcheting wrench with appropriate extension
- Torque wrench
- long nose pliers
- diagonal cutting nippers

* Tools, recommended by our mechanics; proper installation can also be carried out with different tools.

Installation Instructions 1




1. Remove the driver seat

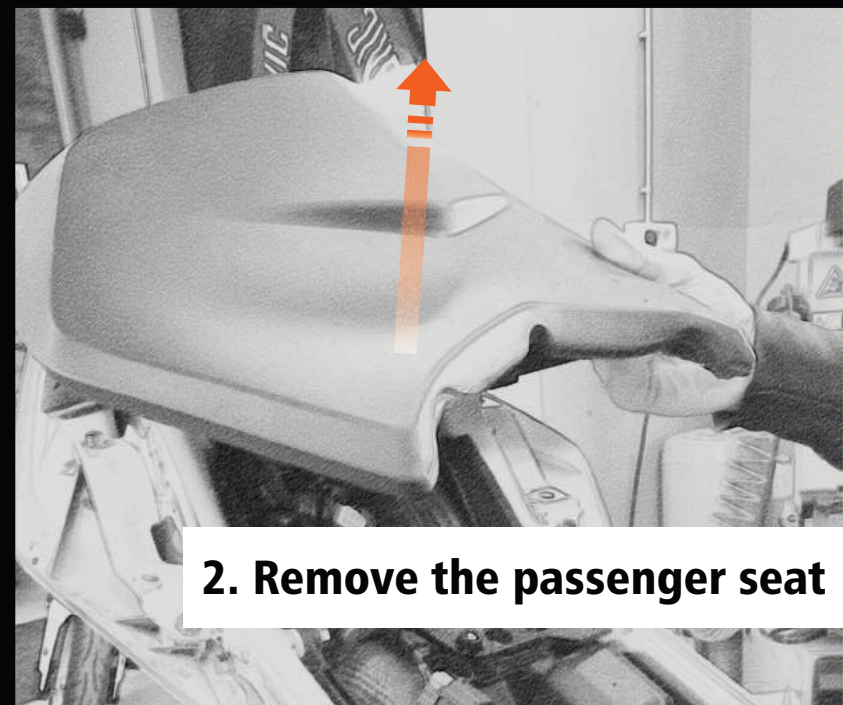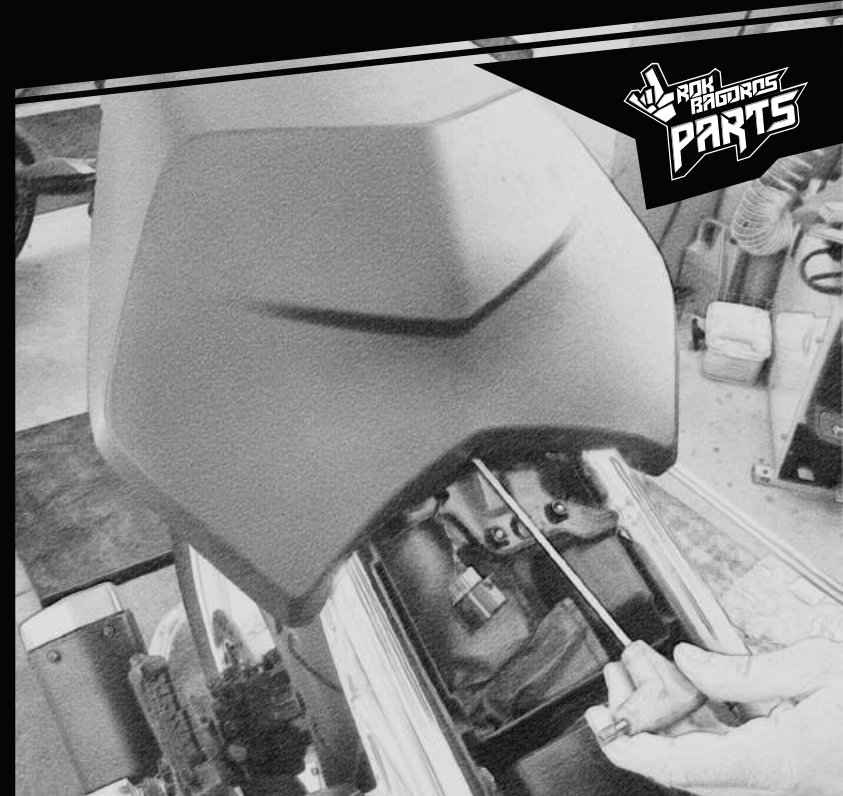


2. Remove the passenger seat

Installation Instructions 2

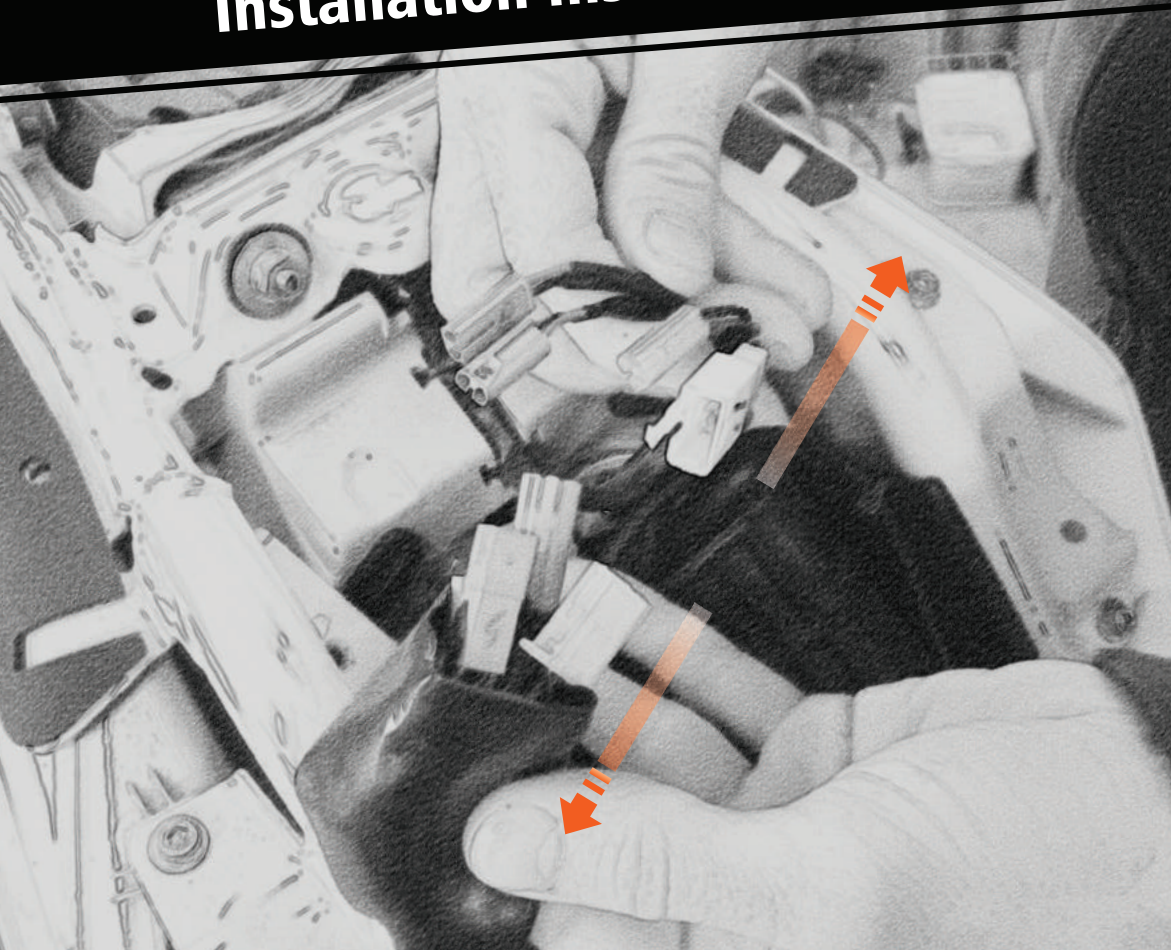


1. Disconnect the vires from tail light and turn signal

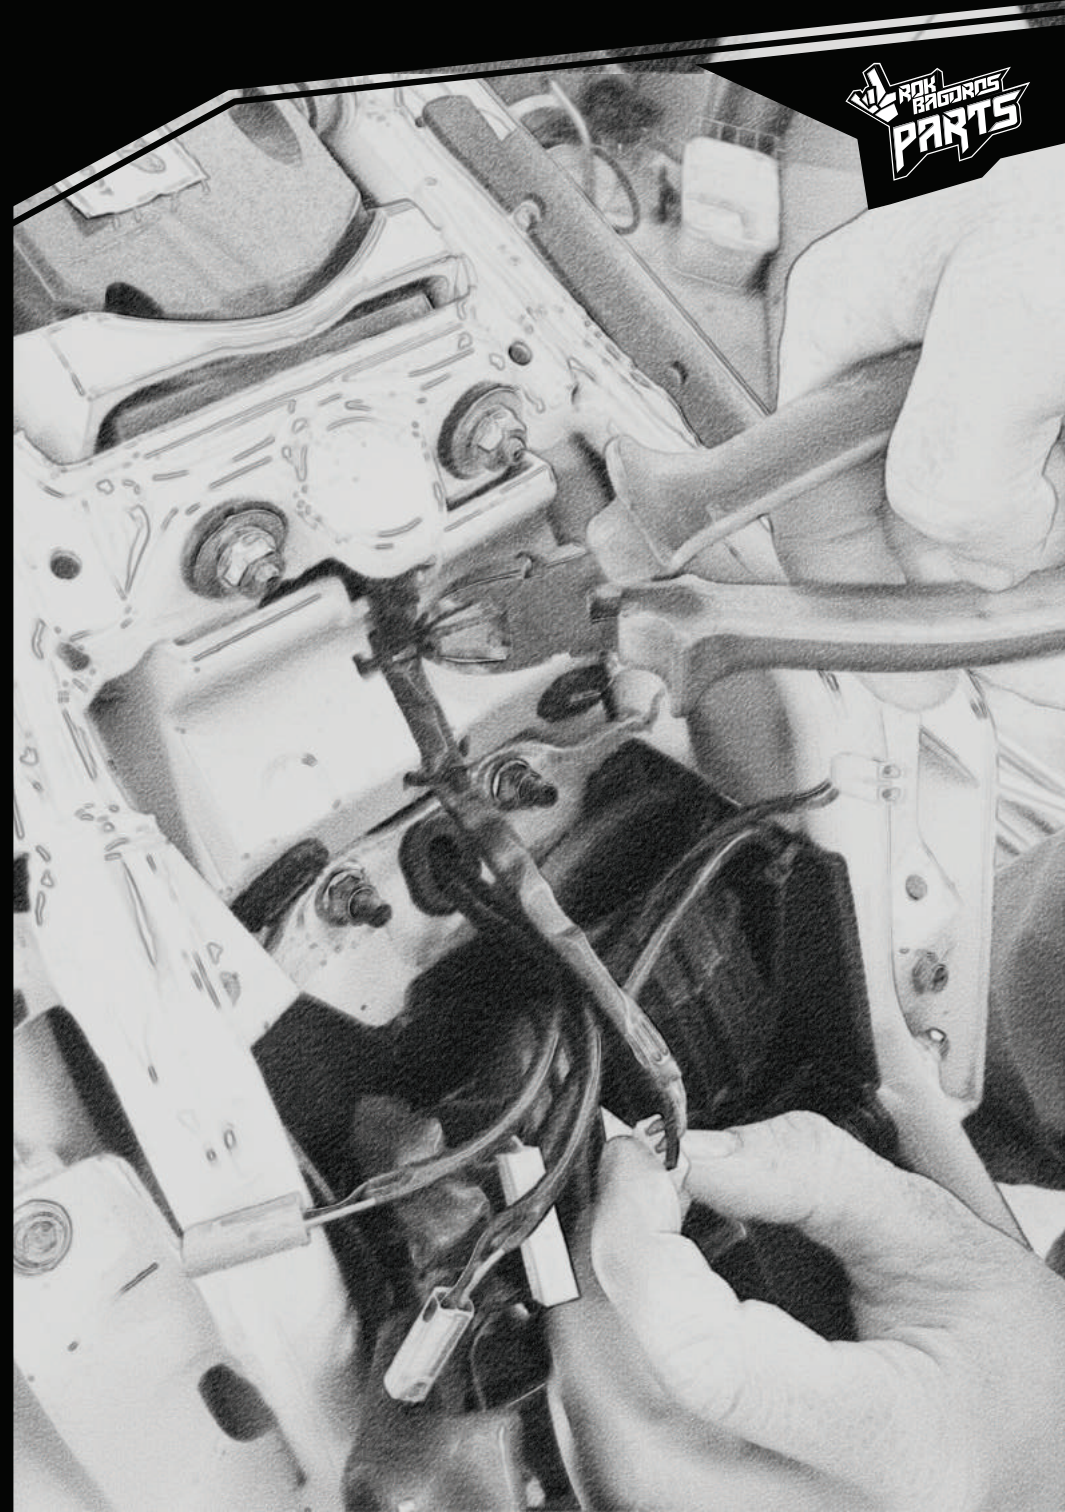


Installation Instructions 3



1. Remove the 4 bolts, holding the plate holder

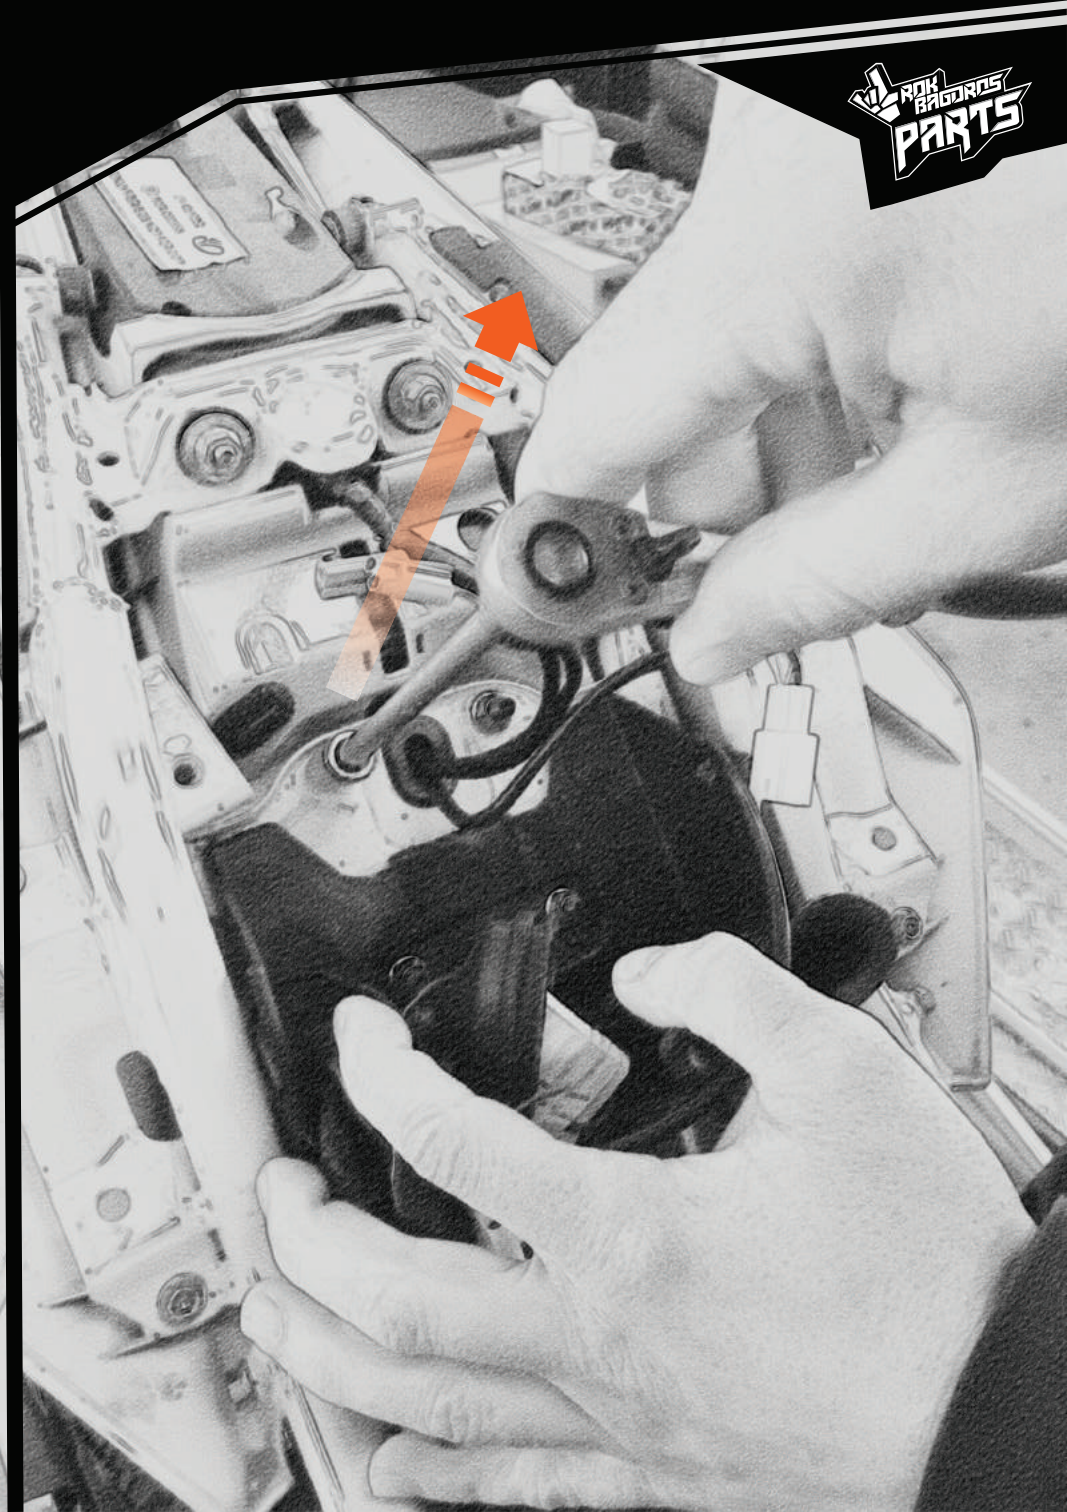


Installation Instructions 3.1

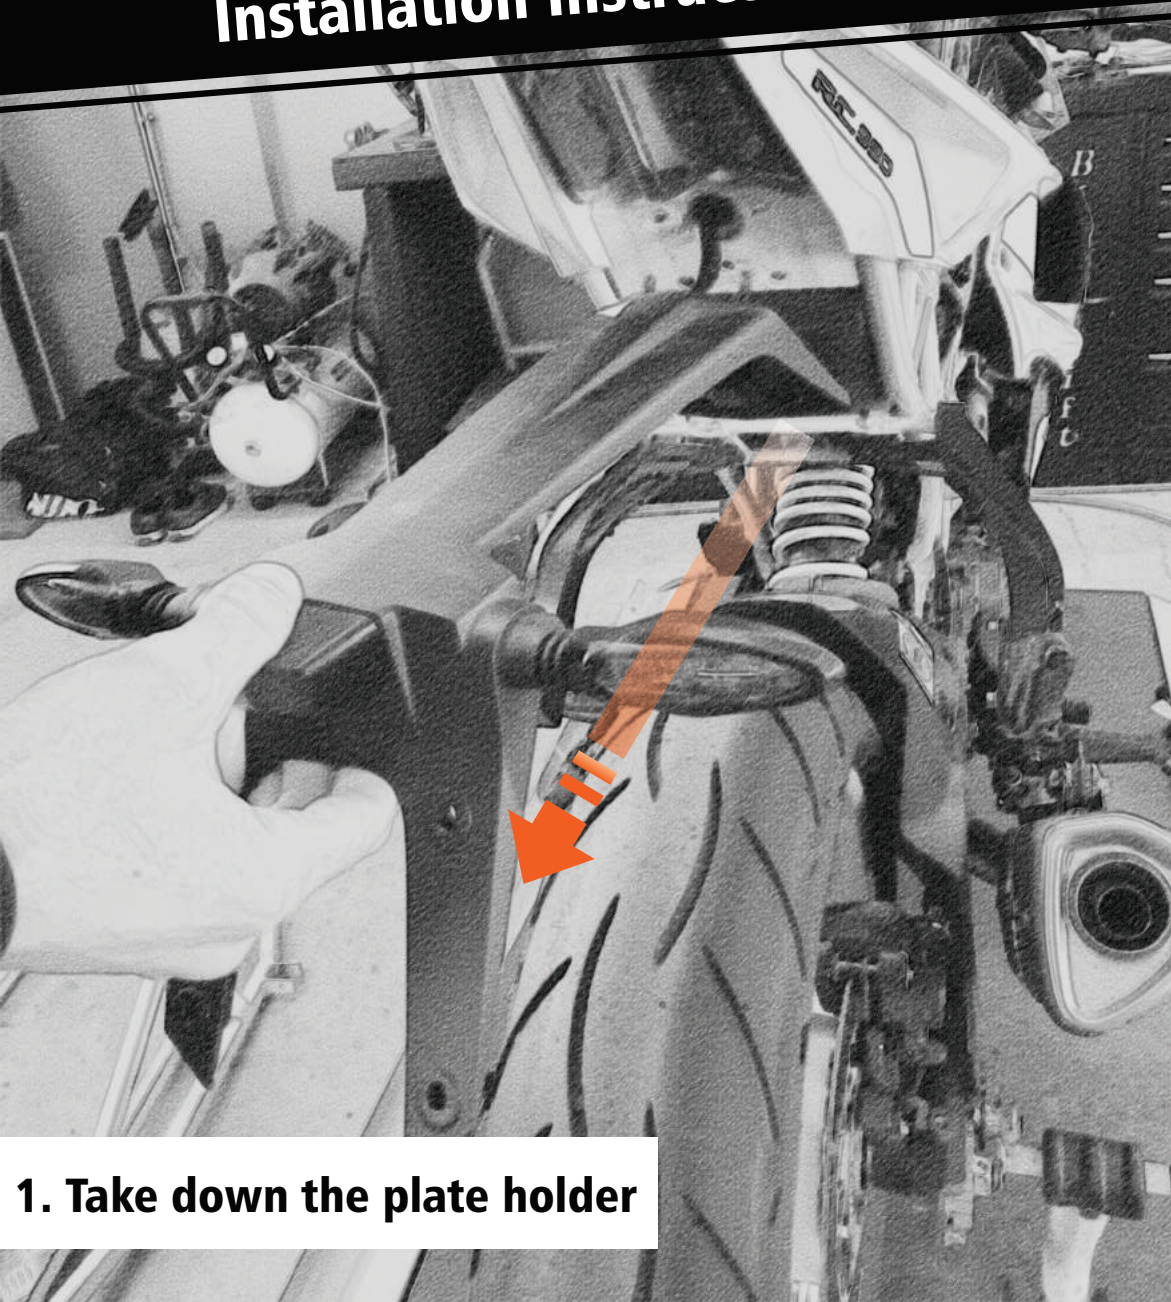

1. Take down the plate holder



Installation Instructions 4

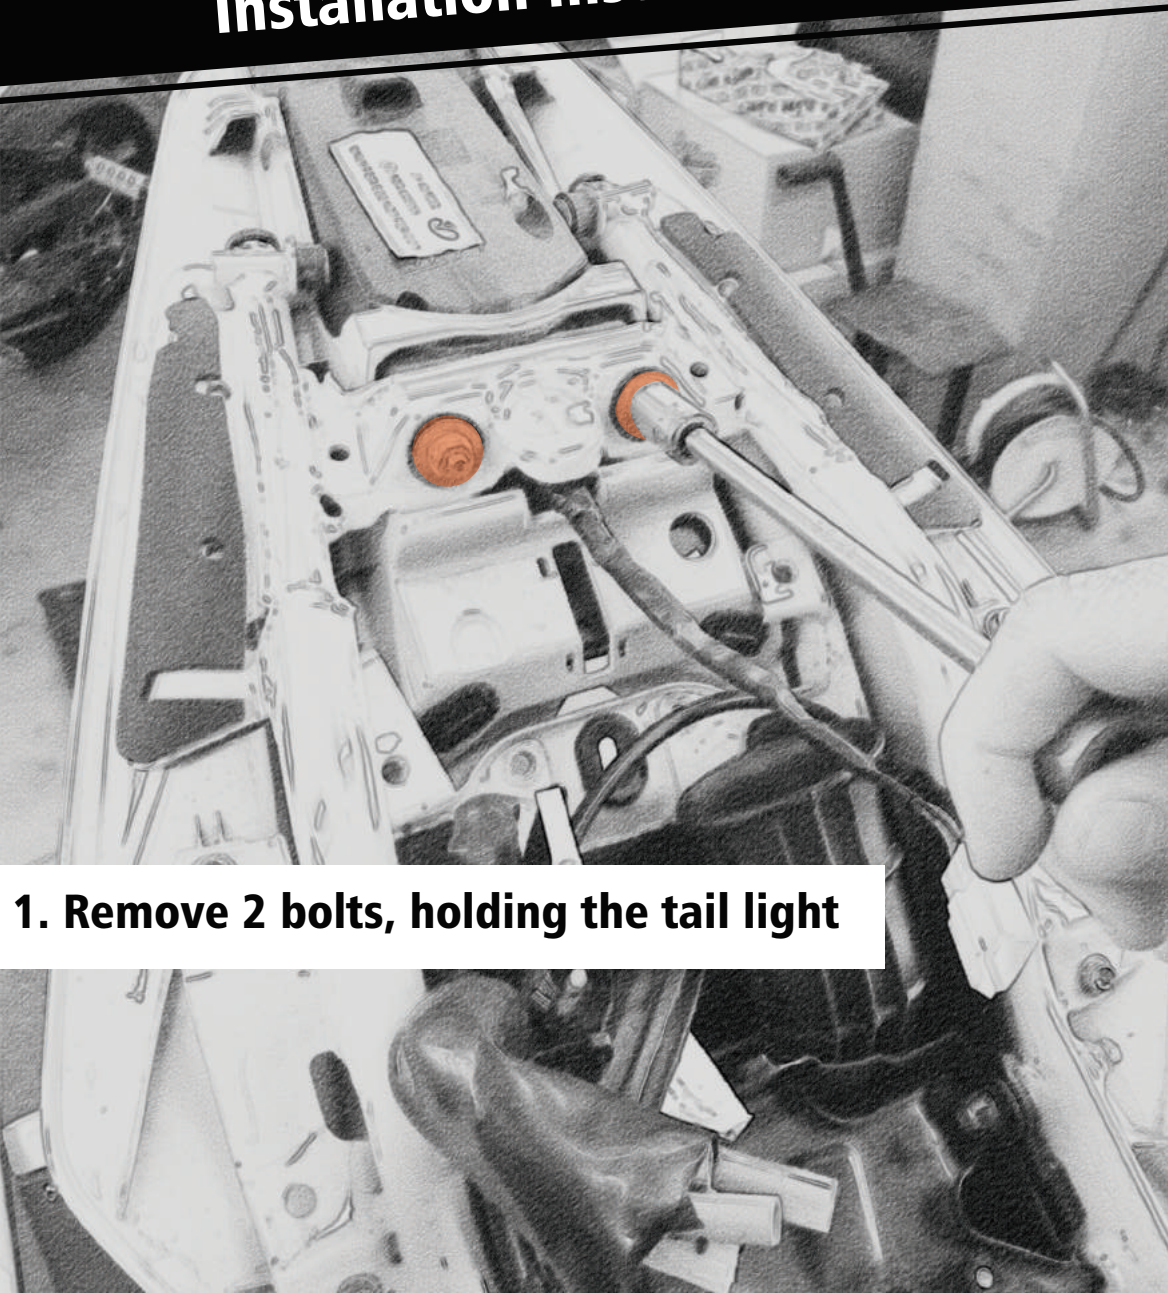


1. Remove 2 bolts, holding the tail light




2. Remove the tail light

Installation Instructions 5

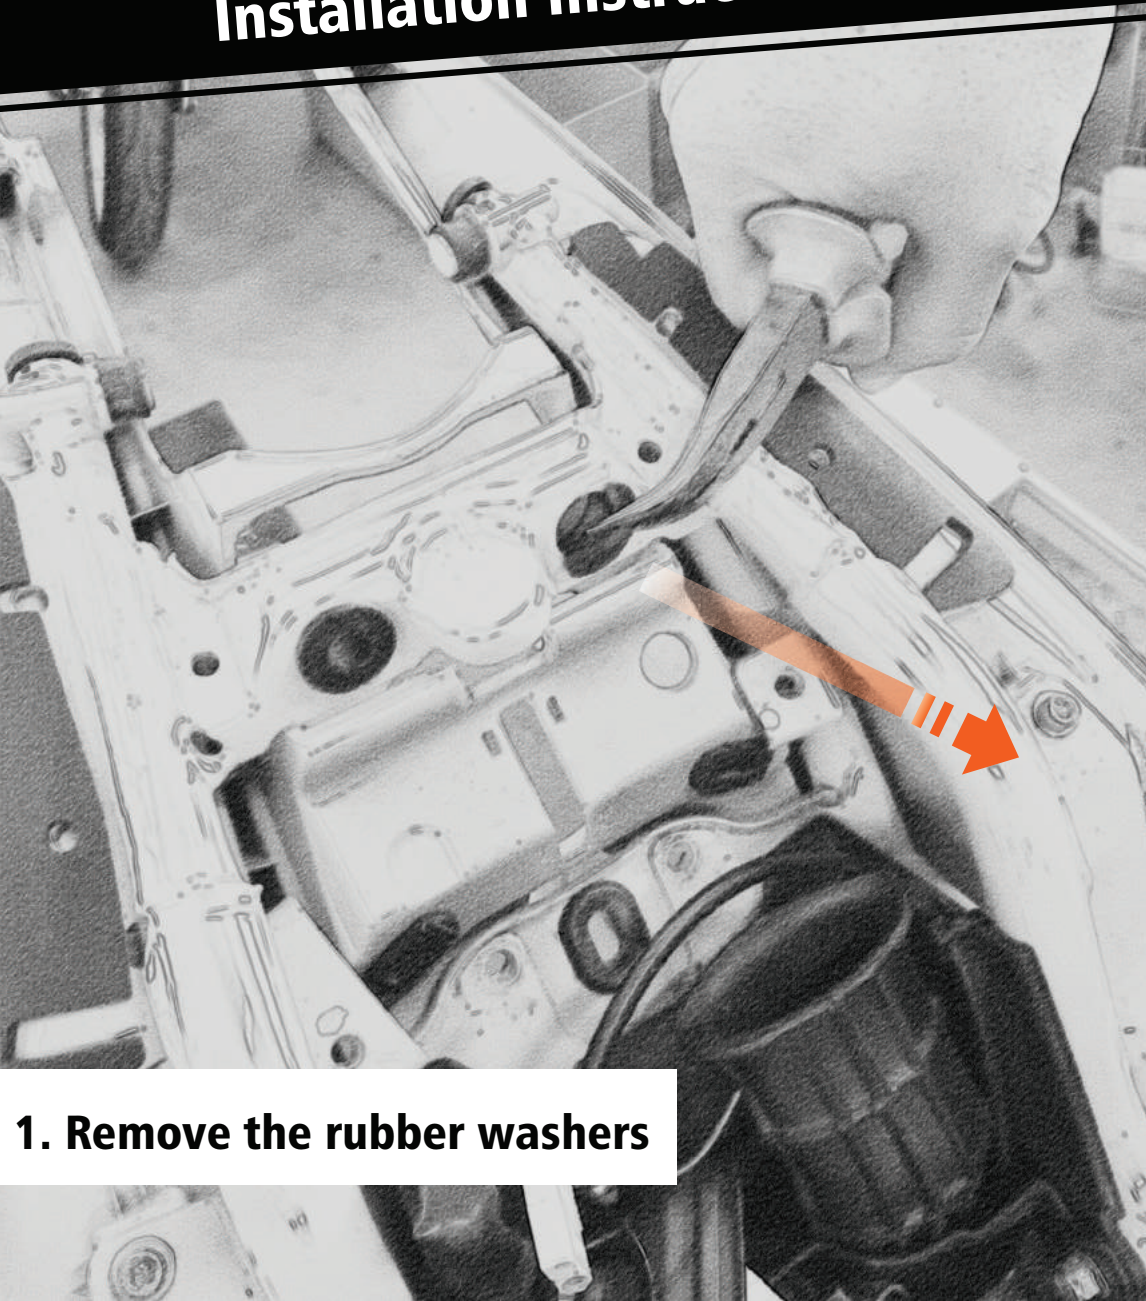


1. Remove the rubber washers

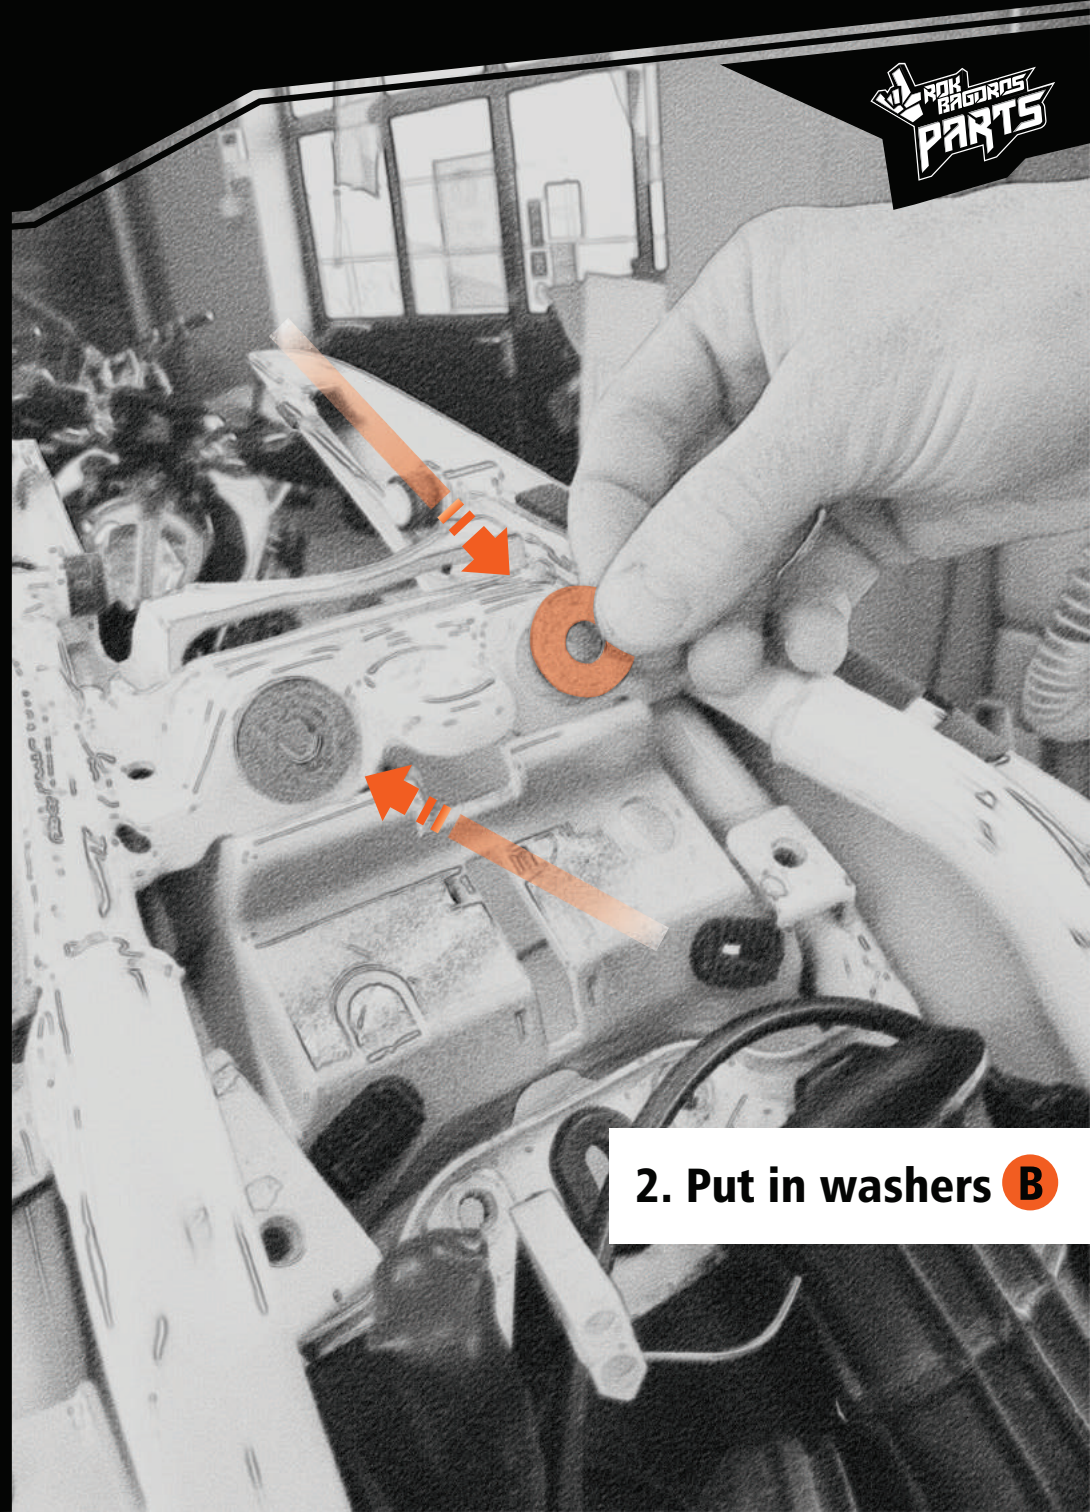


2. Put in washers **B**

Installation Instructions 6

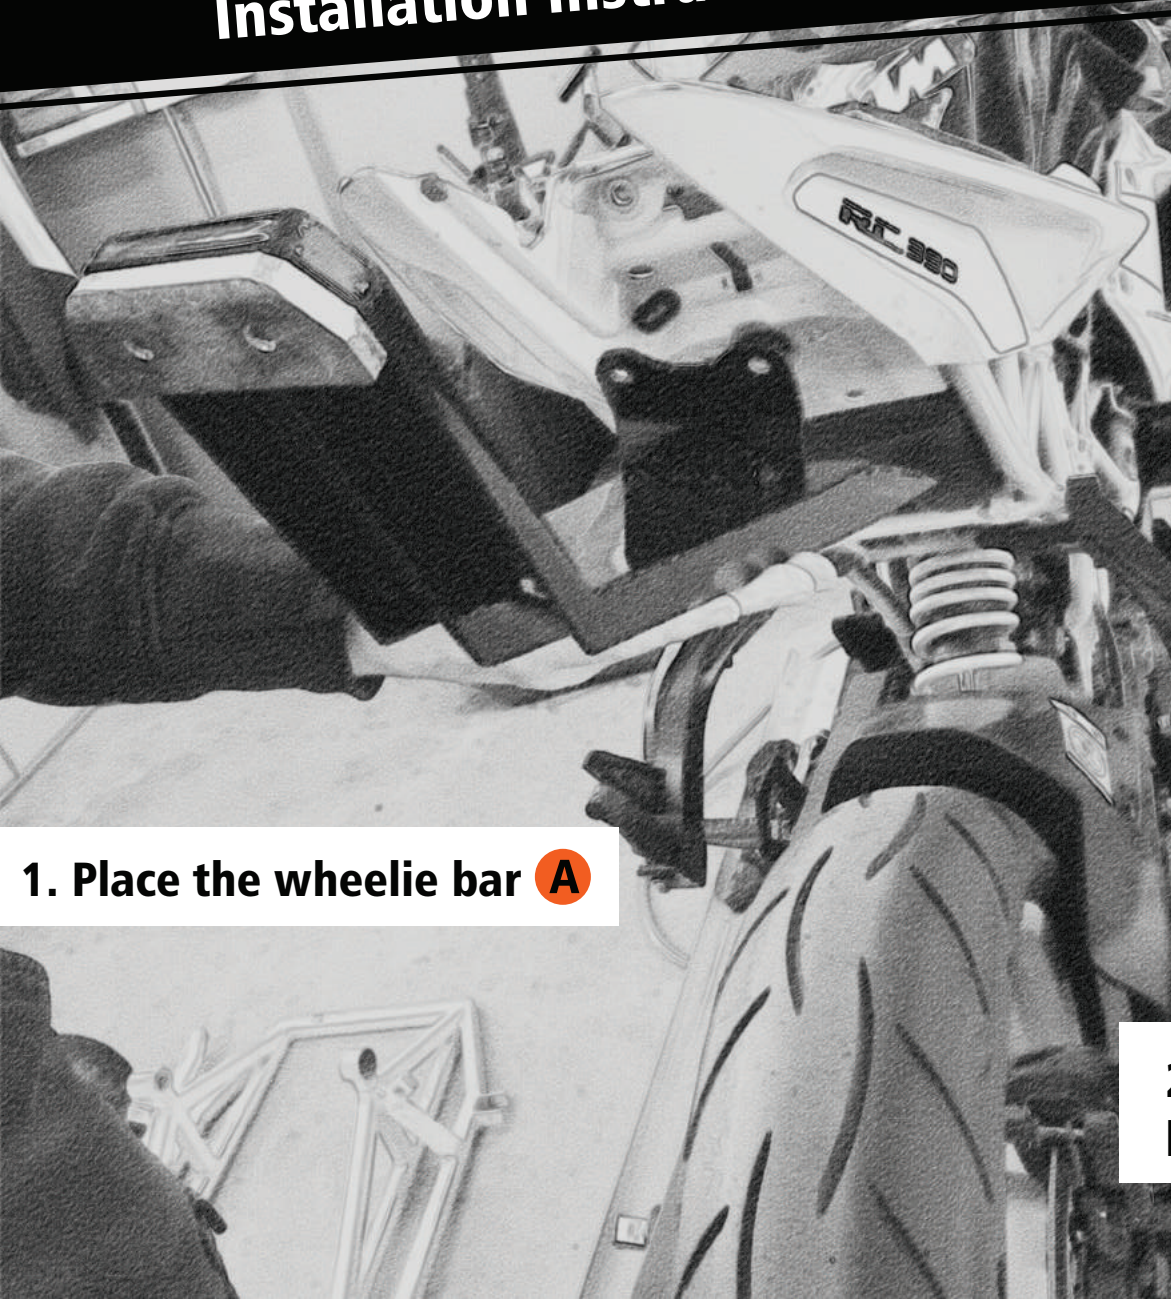


1. Place the wheelie bar **A**

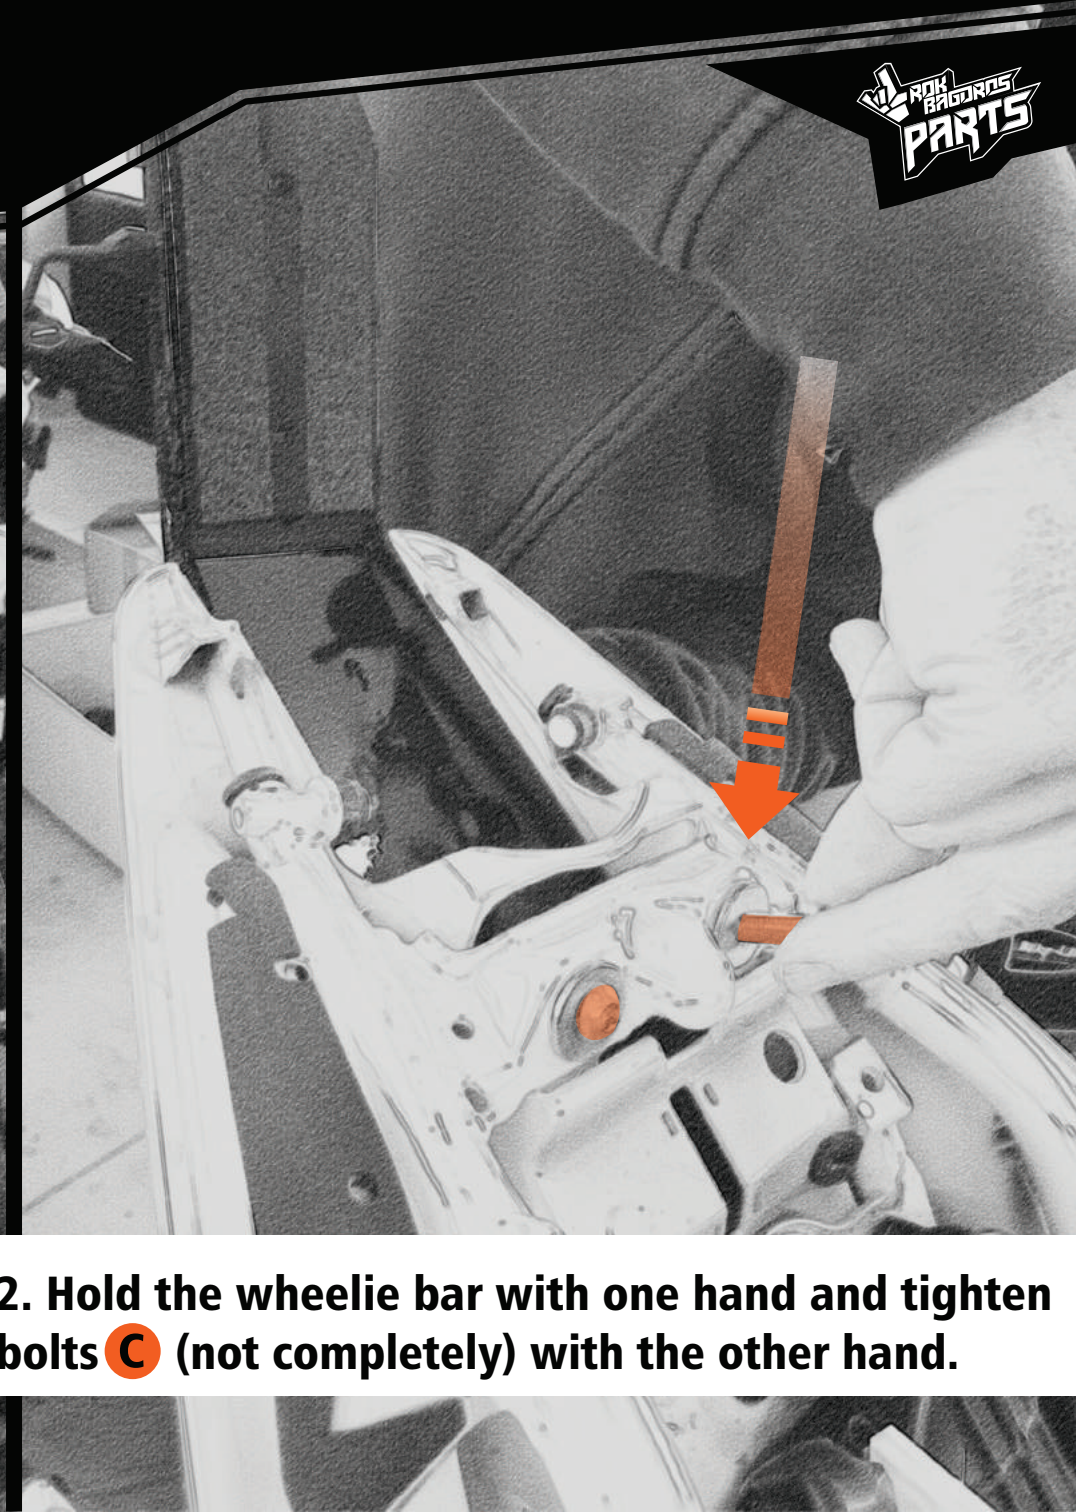

2. Hold the wheelie bar with one hand and tighten bolts **C** (not completely) with the other hand.

Installation Instructions 6.1

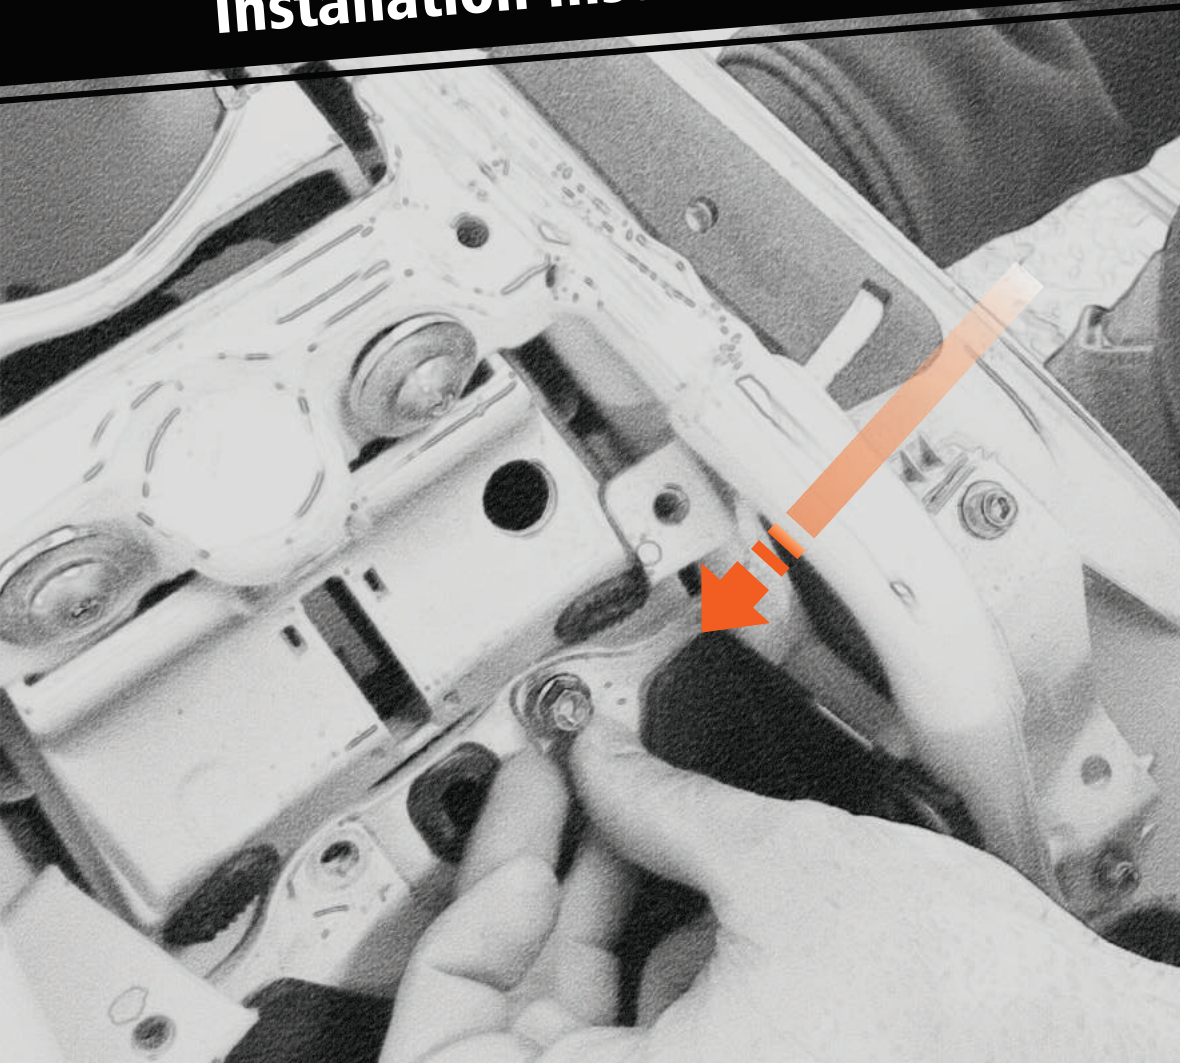



1. Put in bolts **D**, tighten (not completely) on other side with washers



2. Repeat with all 4 bolts


Installation Instructions 6.2

1. Tighten all bolts completely

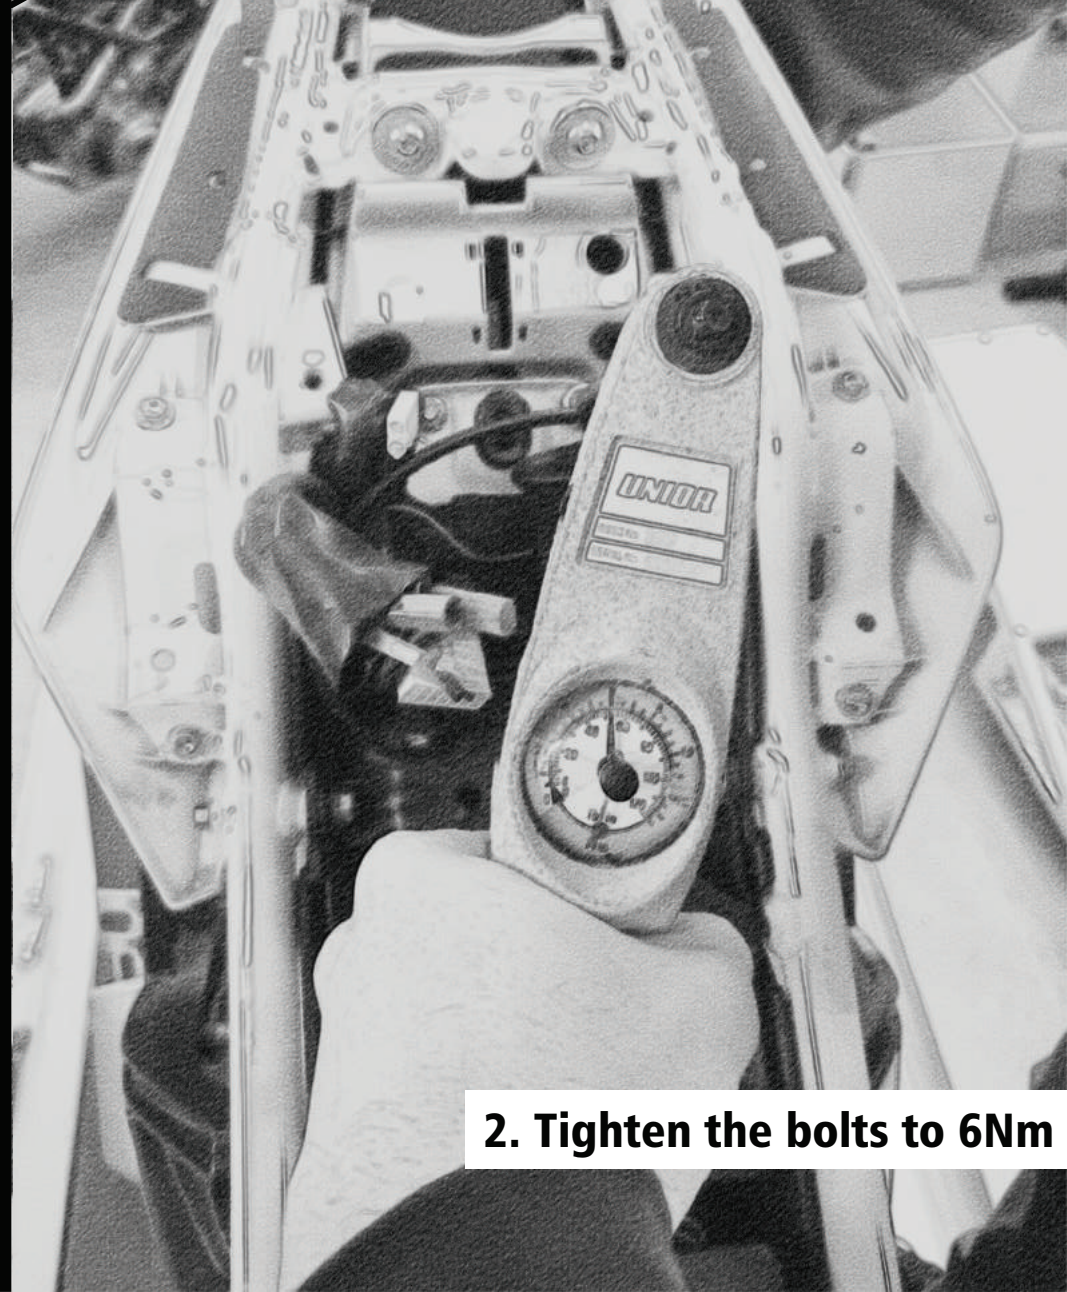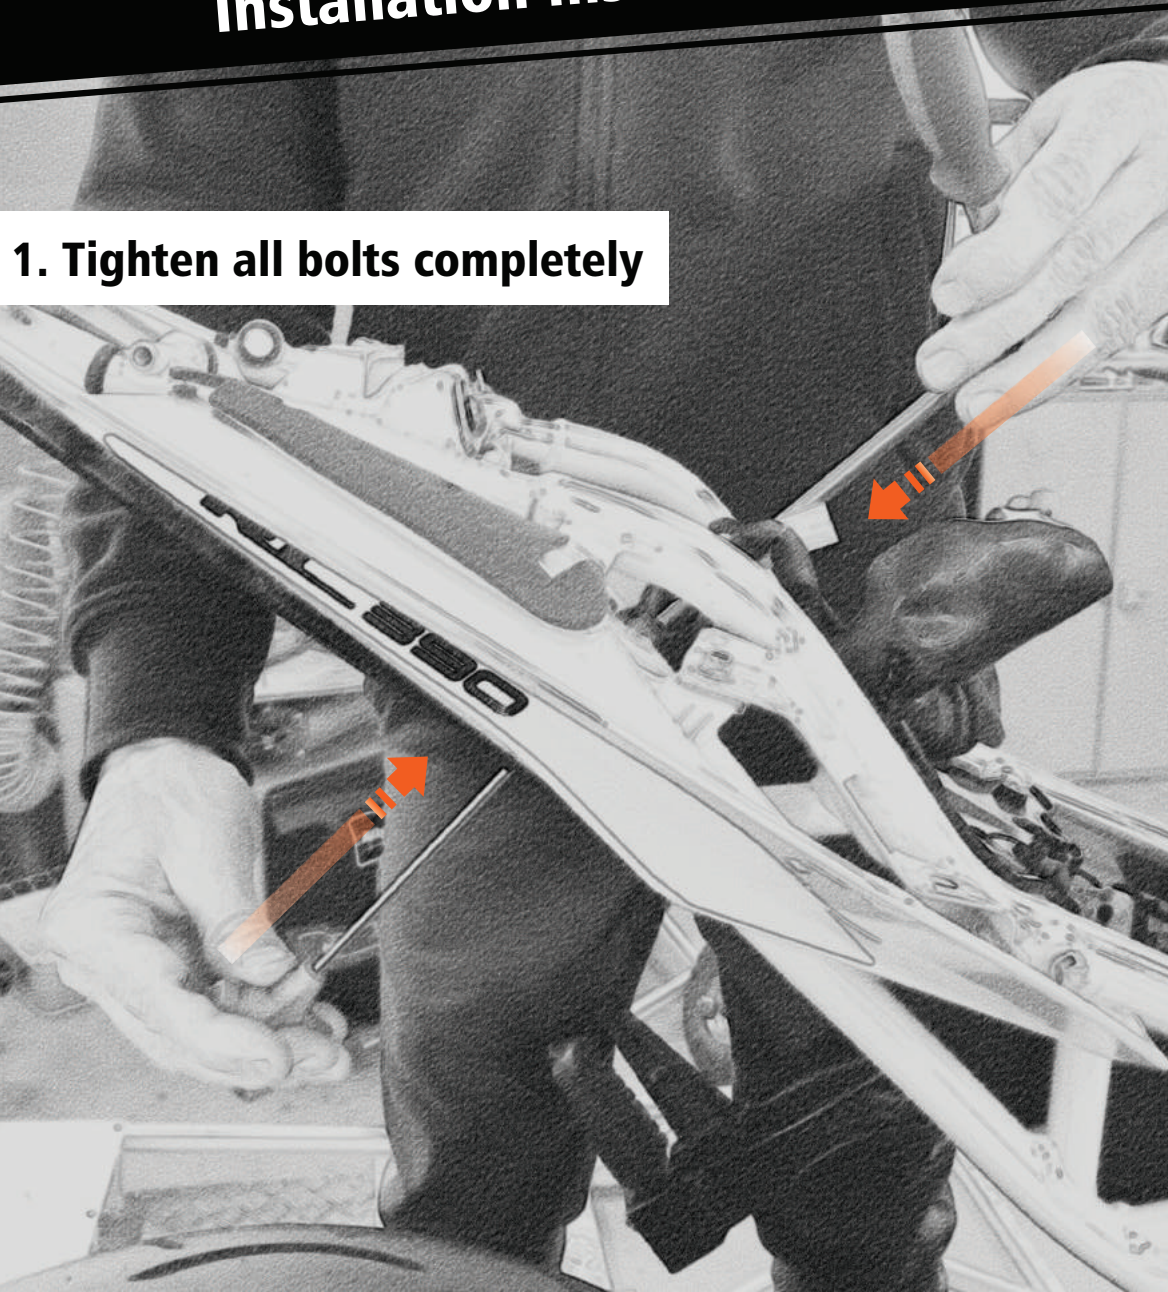

2. Tighten the bolts to 6Nm

Installation Instructions 6.3

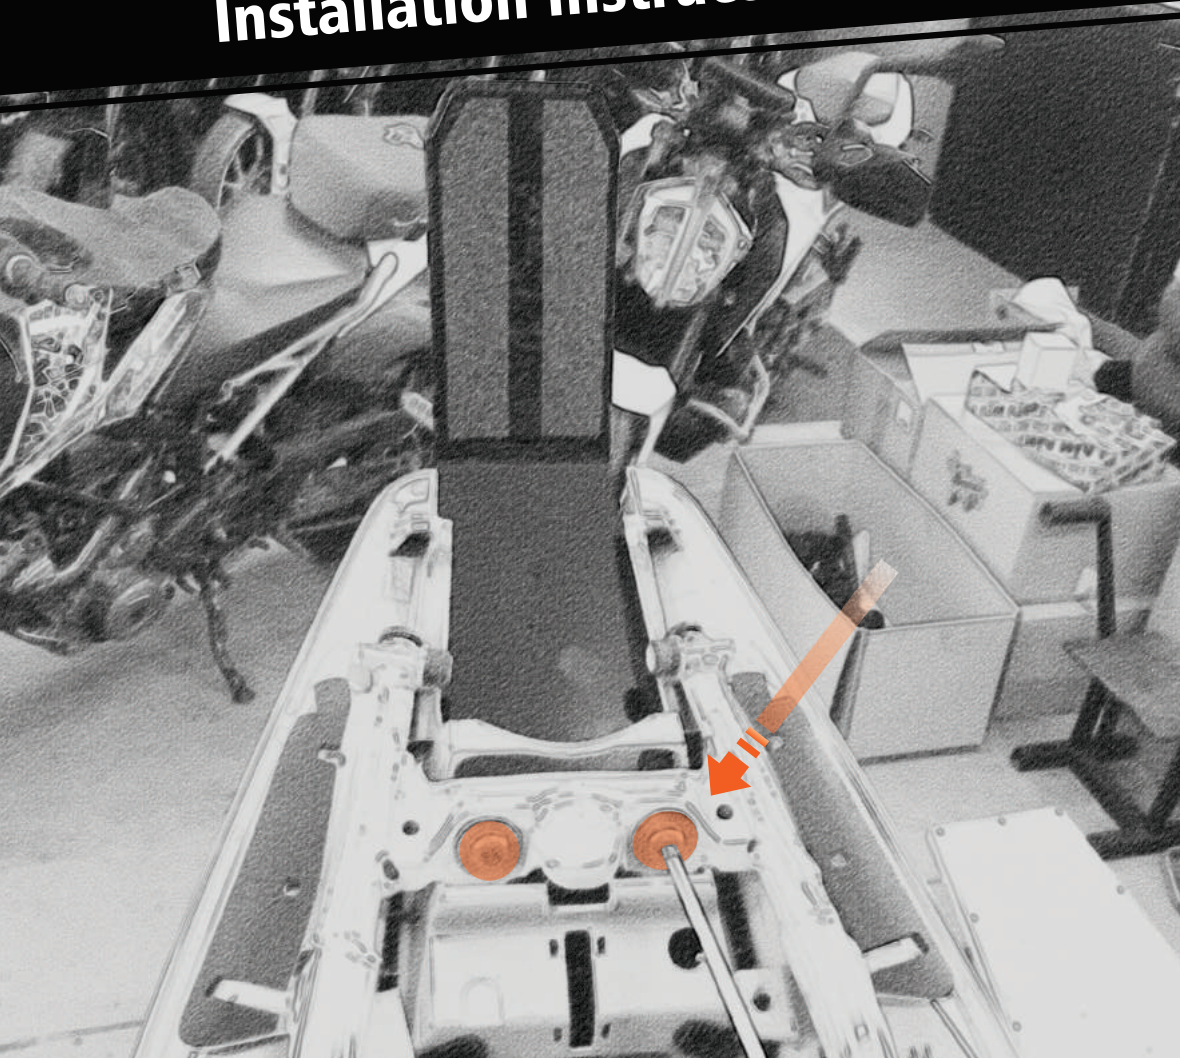


1. Tighten both upper bolts **C**




2. Tighten completely to 15Nm


Installation Instructions **7**

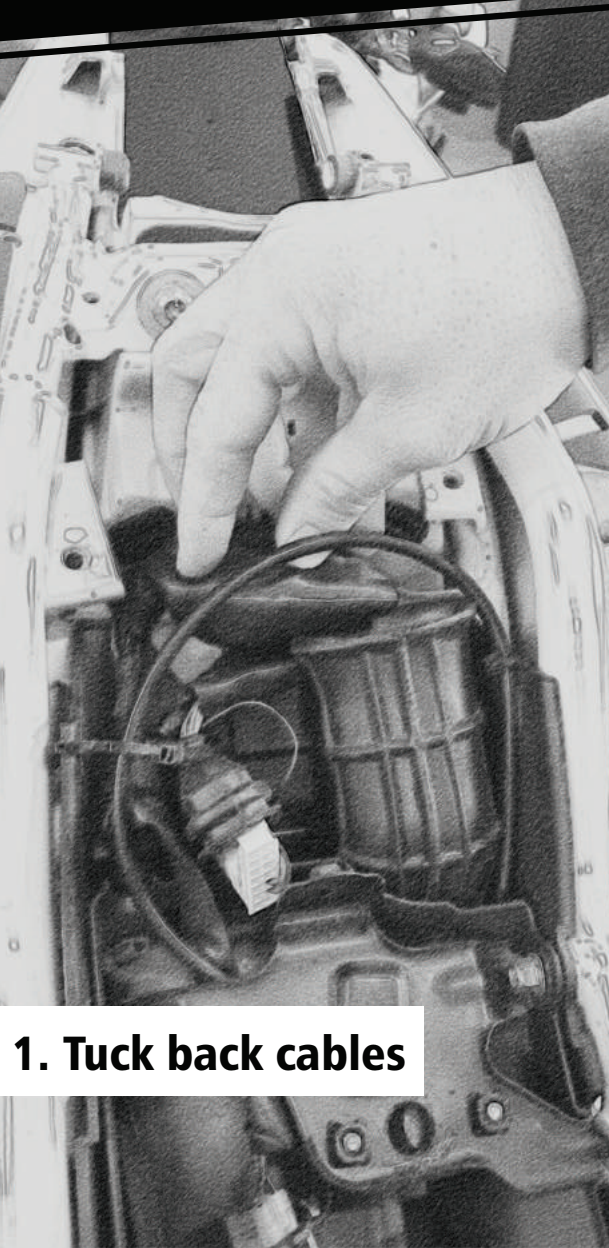

1. Tuck back cables

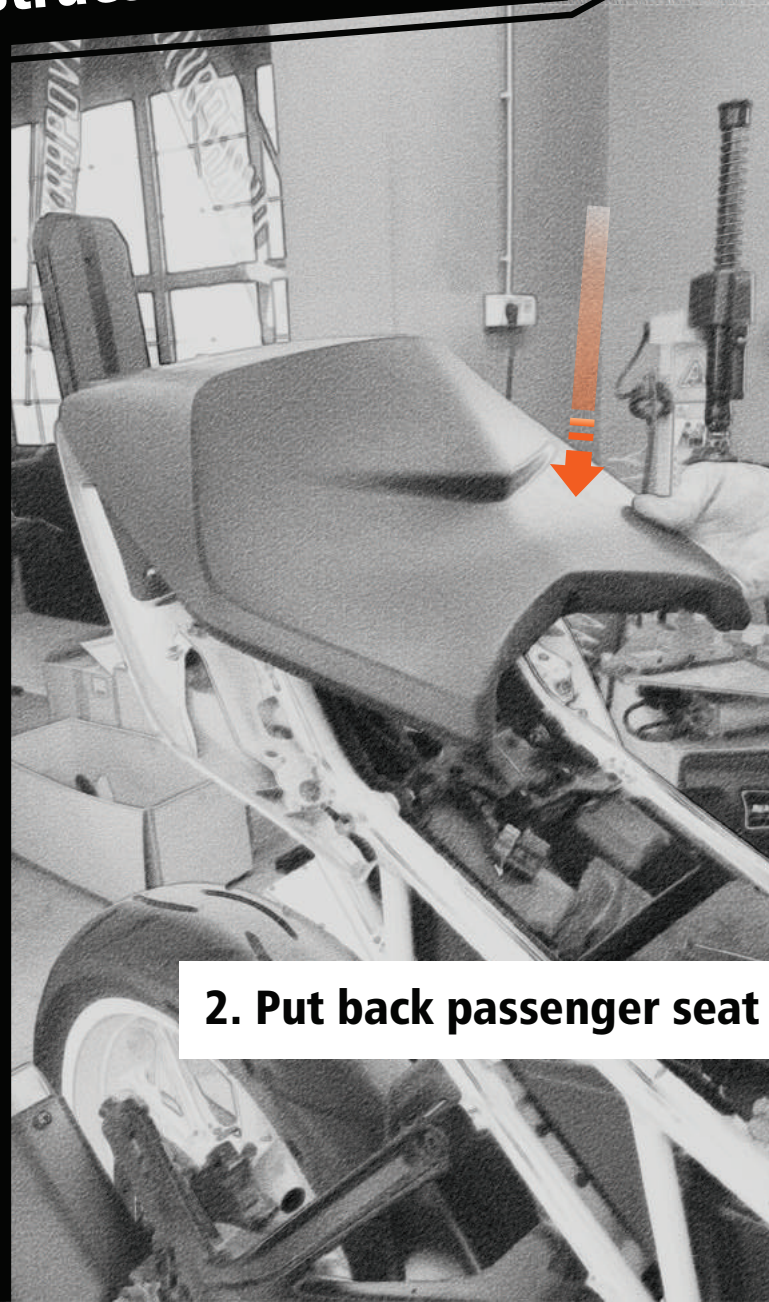


2. Put back passenger seat

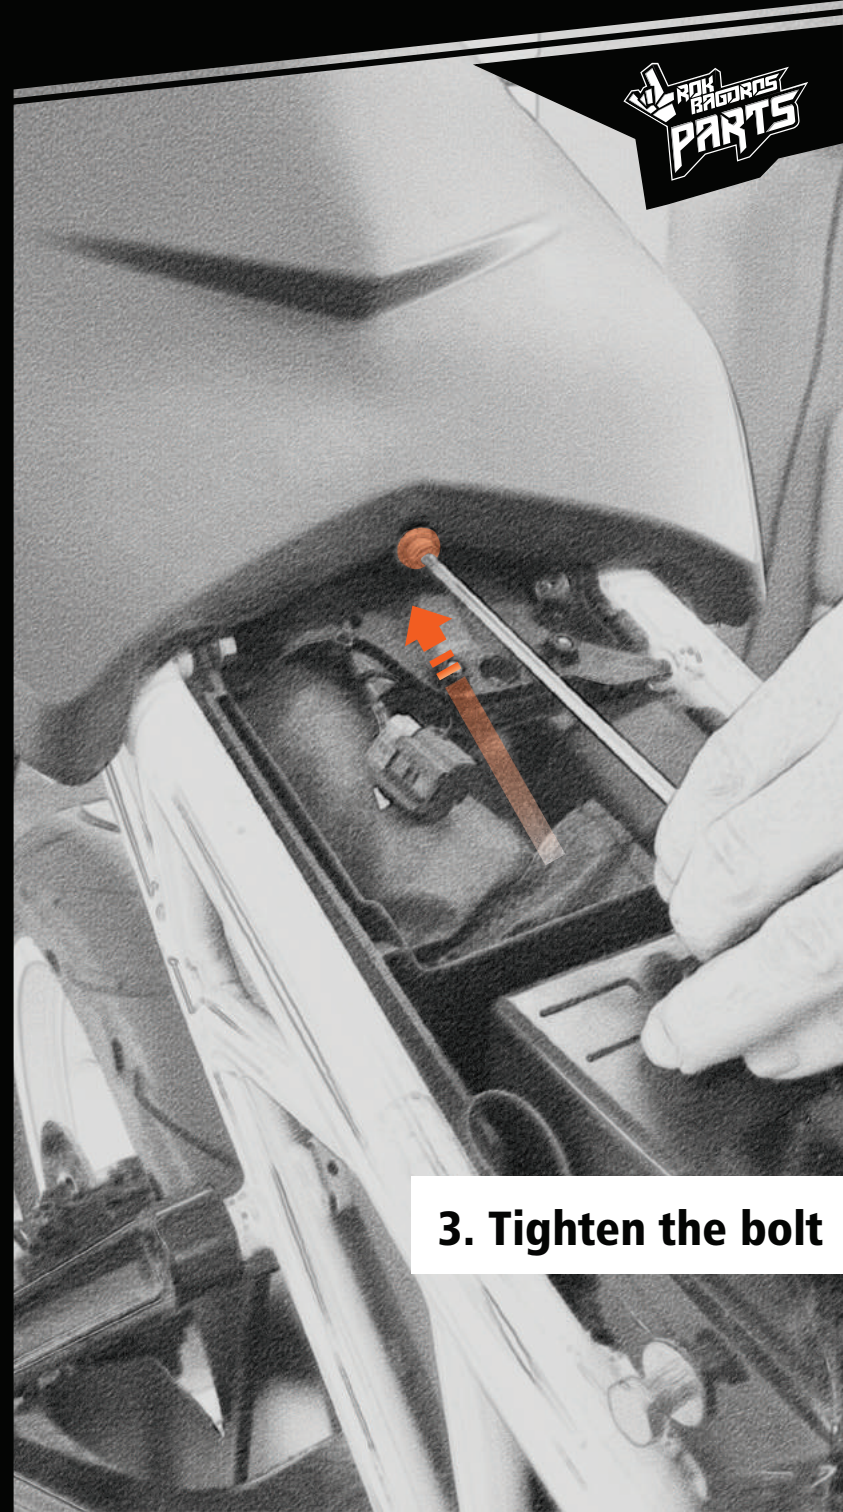


3. Tighten the bolt

Installation Instructions 7.1

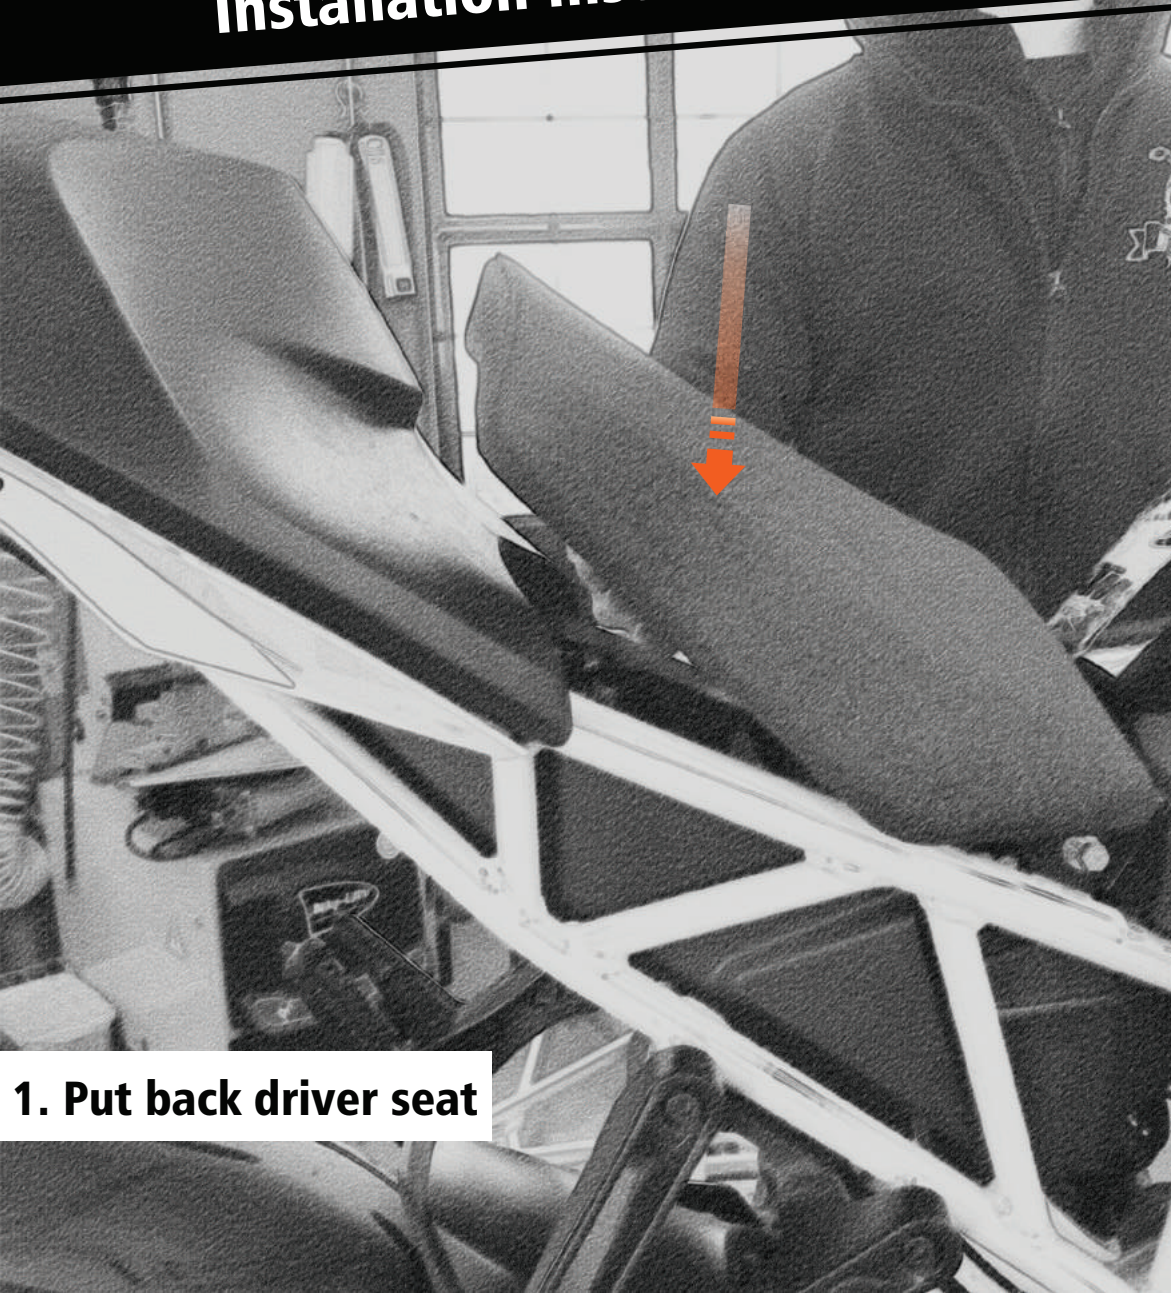

1. Put back driver seat

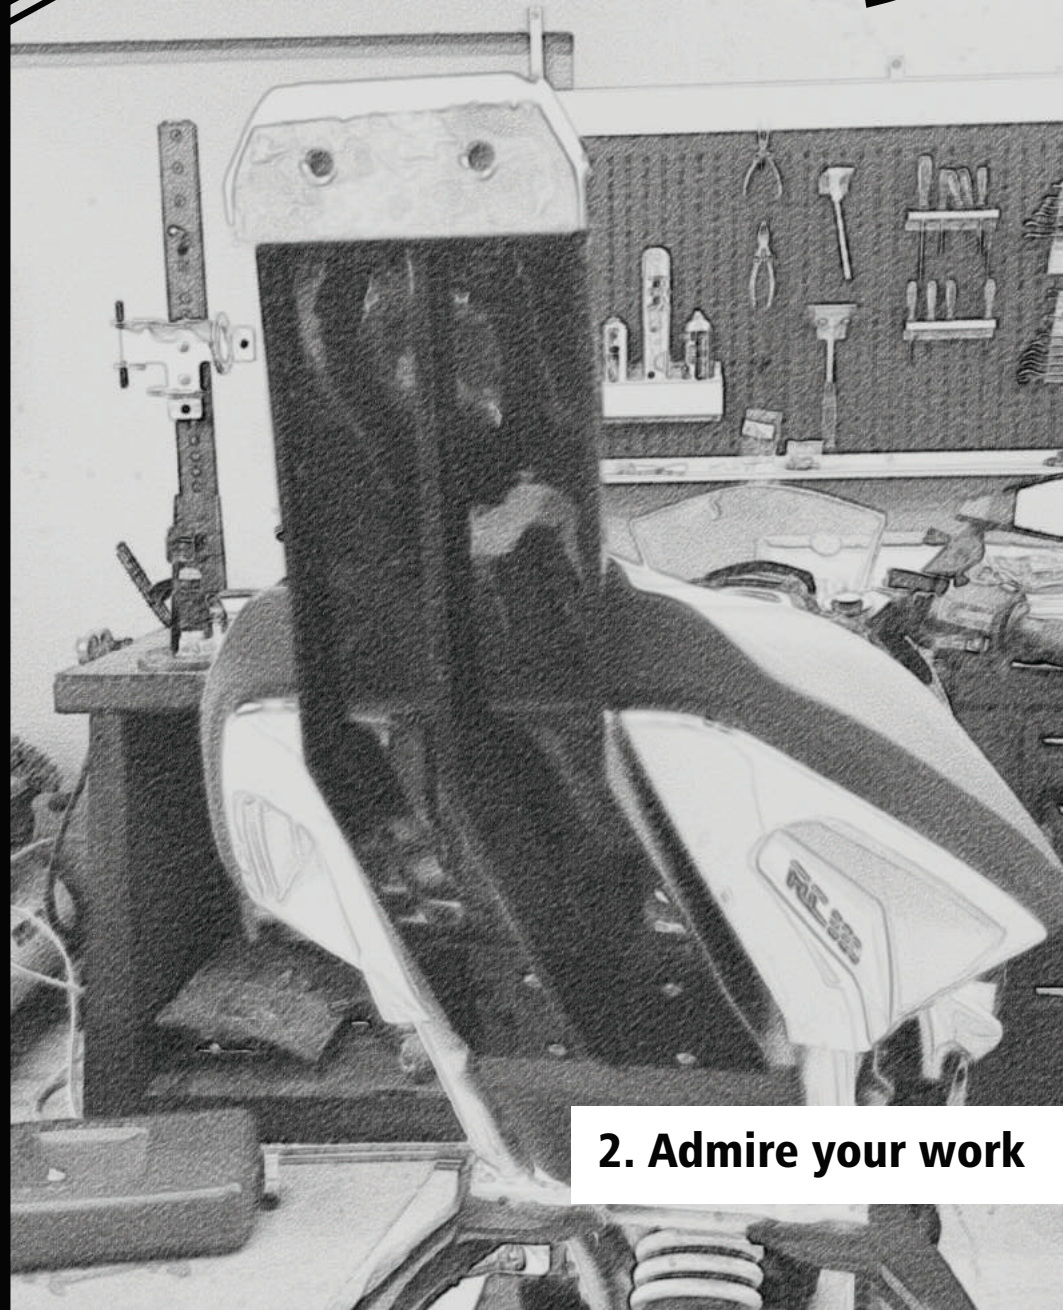

2. Admire your work



IMPORTANT



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings. Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced.

The manufacturer or supplier cannot be held responsible for products that are incorrectly mounted or inappropriately used.

It is recommended to check all connections regularly for tightness of fit.

NOW YOU ARE READY...
TO ROCK THE STREETS!



www.shop.rokbagoros.com