

SKU# 5085139



SCAN THE QR CODE TO VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



FITMENT:

• 2012-2014 5DR ONLY (DOES NOT FIT 4DR SEDAN)

- FACEBOOK.COM/SPYDERAUTO
- n LINKEDIN.COM/COMPANY/SPYDER-AUTO
- (O) INSTAGRAM.COM/SPYDERAUTO
- X TWITTER.COM/SPYDERAUTO
- TIKTOK.COM/@SPYDERAUTO




SCAN THE QR CODE TO VISIT OUR WEBSITE

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GU
WARNING: RANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELP RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE
UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.
FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM

THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFETS OR OTHER REPODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV





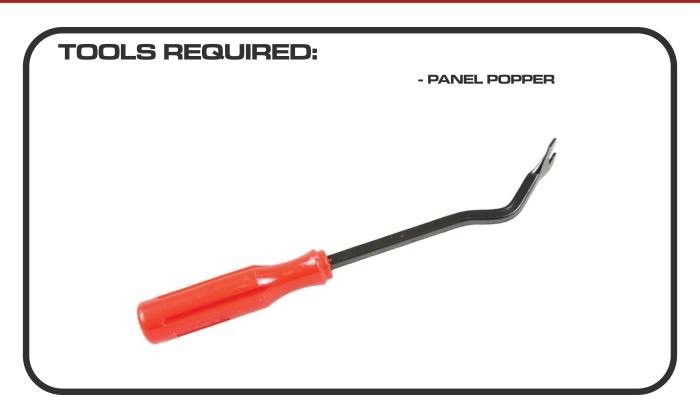



STEP 1:
DISCONNECT THE NEGATIVE BATTERY TERMINAL







STEP 2:
REMOVE THE TAIL LIGHT ACCESS PANEL



STEP 3:
REMOVE (2) THUMB SCREWS SECURING THE TAIL LIGHT

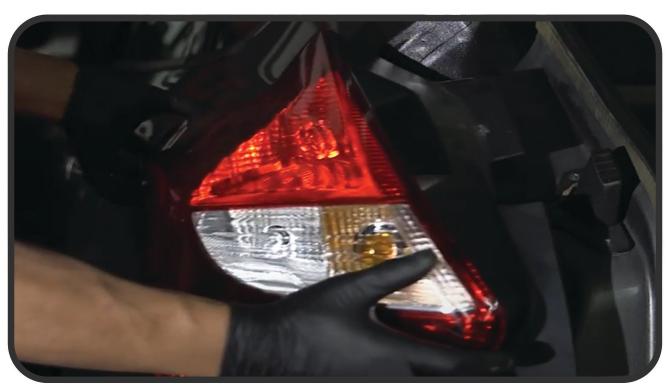


STEP 4: UNSEAT THE OLD TAIL LIGHT

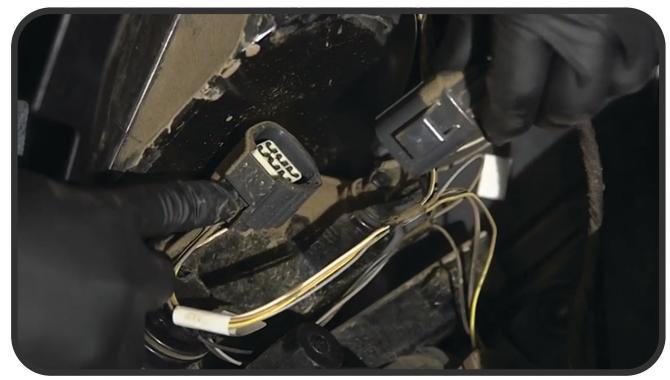

STEP 5:
DISCONNECT THE FACTORY TAIL LIGHT HARNESS



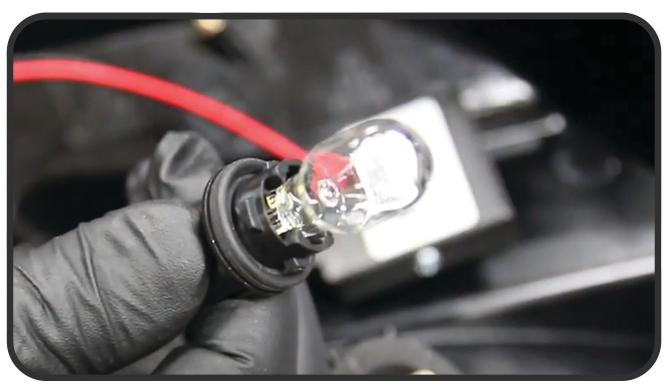

STEP 6: TRANSFER THE REVERSE LIGHT BULB TO THE SPYDER TAIL LIGHT (NOTE: NEVER TOUCH BULB WITH BARE HANDS)



STEP 7:
CONNECT SPYDER TAIL LIGHT HARNESS





STEP 8: SEAT THE SPYDER TAIL LIGHT



STEP 9: REINSTALL THE (2) THUMB SCREWS





STEP 10: REINSTALL THE TAIL LIGHT ACCESS PANEL



STEP 11:
RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY