



SPYDERTM

SKU# 5070067



**SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO**

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

• 2004-2015 NISSAN TITAN



FACEBOOK.COM/SPYDERAUTO

LINKEDIN.COM/COMPANY/SPYDER-AUTO

INSTAGRAM.COM/SPYDERAUTO

TWITTER.COM/SPYDERAUTO

TIKTOK.COM/@SPYDERAUTO



**SCAN THE QR CODE
TO VISIT OUR WEBSITE**

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV



TOOLS REQUIRED:

- RATCHET
- 10MM SOCKET



STEP 1:

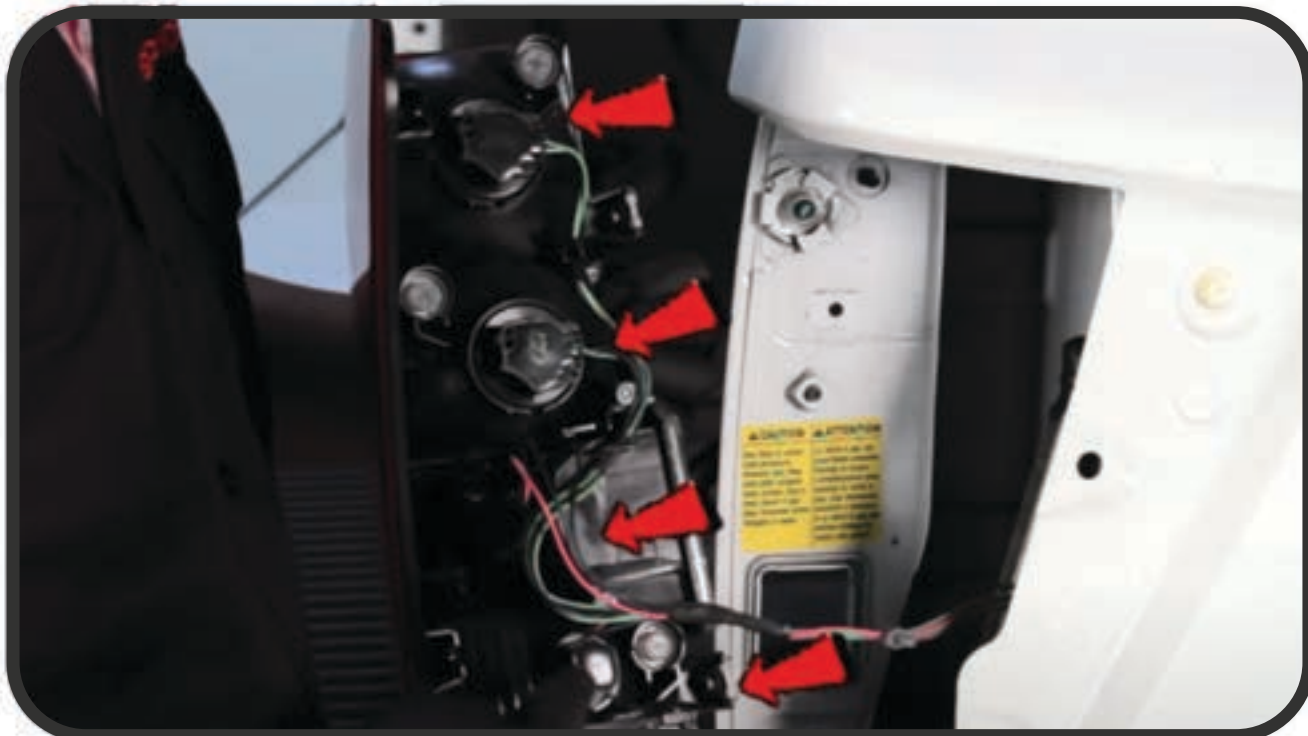
DISCONNECT THE NEGATIVE BATTERY TERMINAL



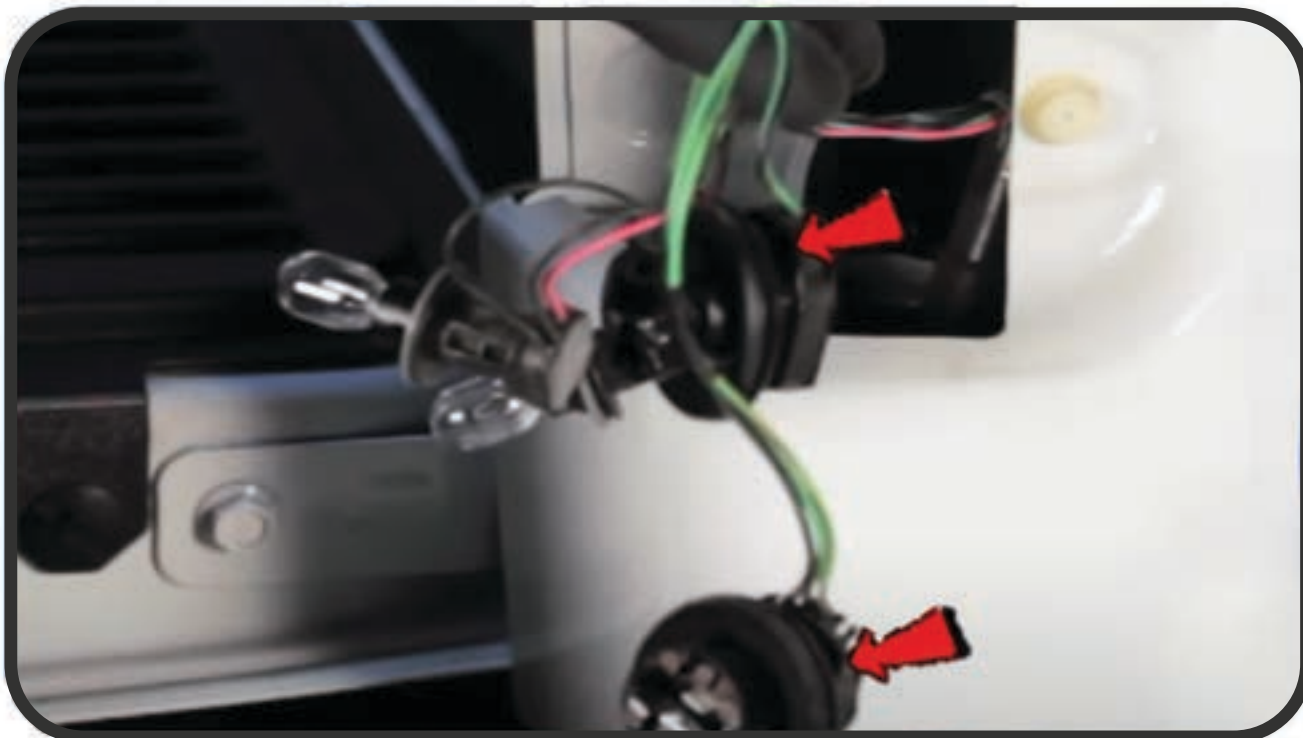
STEP 2:
REMOVE (2) 10MM BOLTS



STEP 3:
UNSEAT TAIL LIGHT


STEP 4:

**REMOVE (4) TAIL LIGHT SOCKETS.
(NEVER TOUCH BULBS WITH BARE HANDS)**


STEP 5:

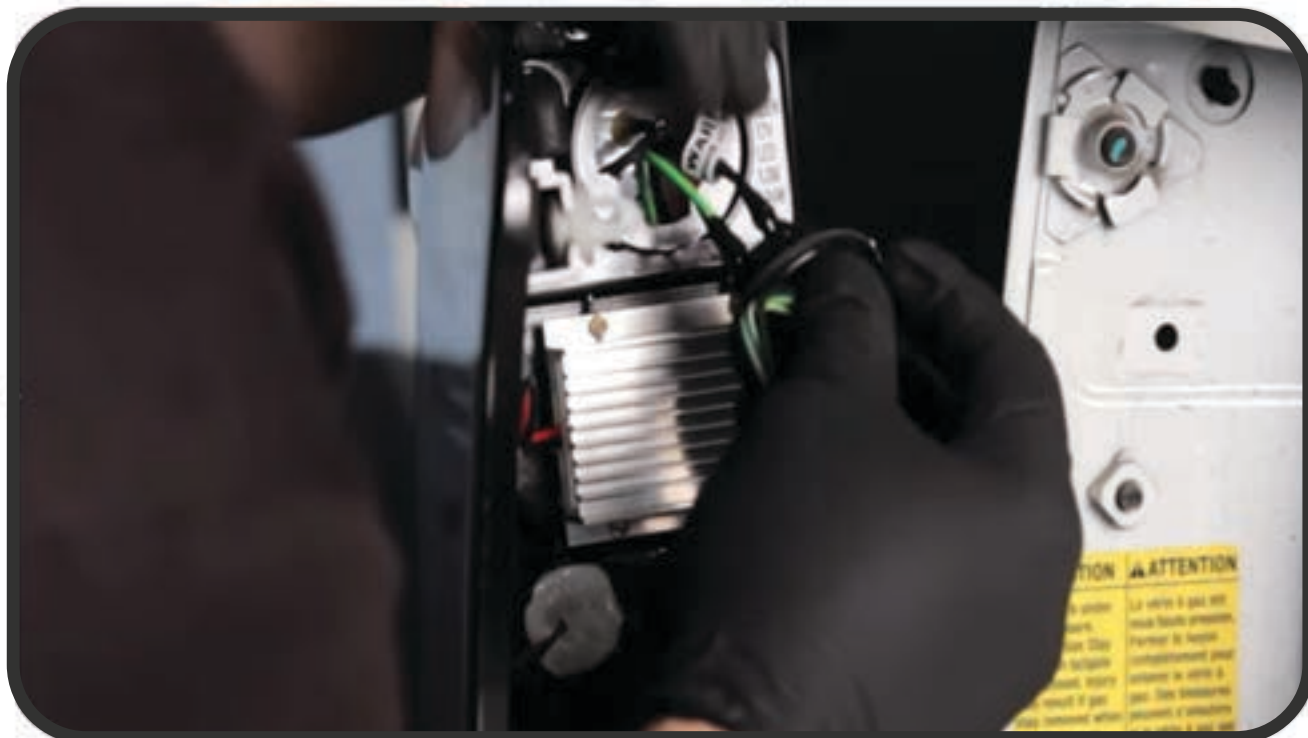
REMOVE TOP (2) BULBS FROM SOCKET HARNESS


STEP 6:

INSTALL LOWER TWO BULB SOCKETS INTO SPYDER TAIL LIGHT


STEP 7:

**INSTALL SPYDER LOWER BULB INSERT INTO BULB SOCKET. (ALIGN BLACK WIRE OF SOCKET INSERT TO BLACK WIRE OF SOCKET)
INSTALL SOCKET**


STEP 8:

**INSTALL SPYDER UPPER BULB INSERT INTO BULB SOCKET. (ALIGN BLACK WIRE OF SOCKET INSERT TO BLACK WIRE OF SOCKET)
INSTALL SOCKET**


STEP 9:

ALIGN SIDE TABS AND SEAT SPYDER TAIL LIGHT



STEP 10:
REINSTALL (2) 10MM BOLTS



STEP 11:
**RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE
THEY FUNCTION PROPERLY**