



Click here to email [Sales@Eco-BuildingProducts.com](mailto:Sales@Eco-BuildingProducts.com)  
Click here to order online at [Eco-BuildingProducts.com](http://Eco-BuildingProducts.com)  
Click here to call us at 231.399.0700

# How to Install Electrical Flashing (after WRB)

**IMPORTANT:** Always refer to house wrap or building paper manufacturer's guidelines

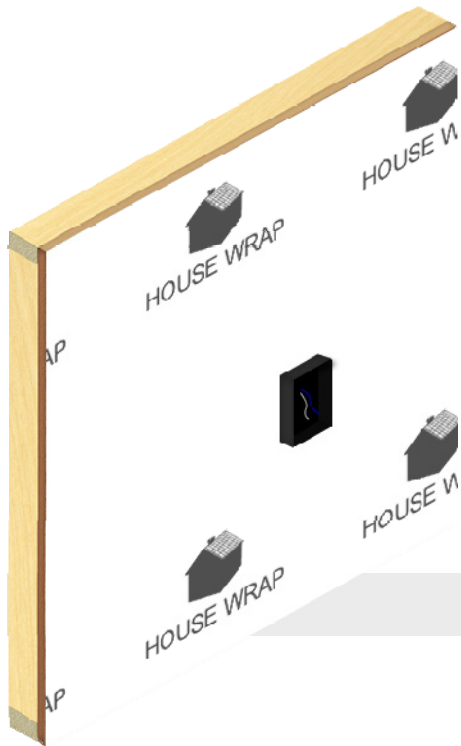


1

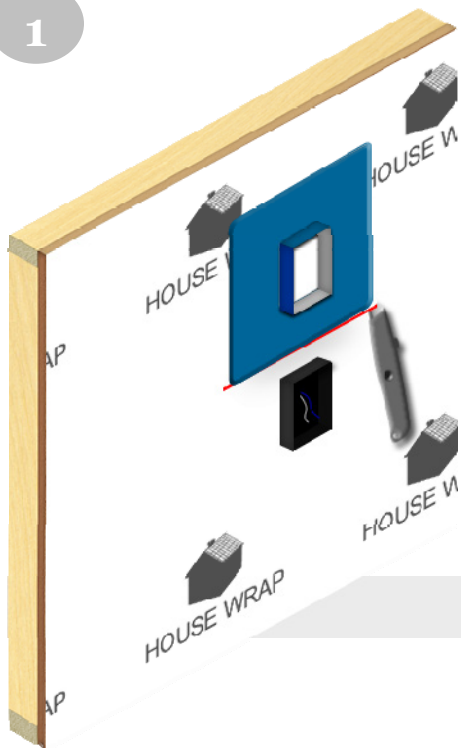


Using the Quickflash® panel as a guide, mark the length of the panel plus 1/4" on each side 2" above penetration onto the WRB and using a utility knife, cut a slit along the mark.

2

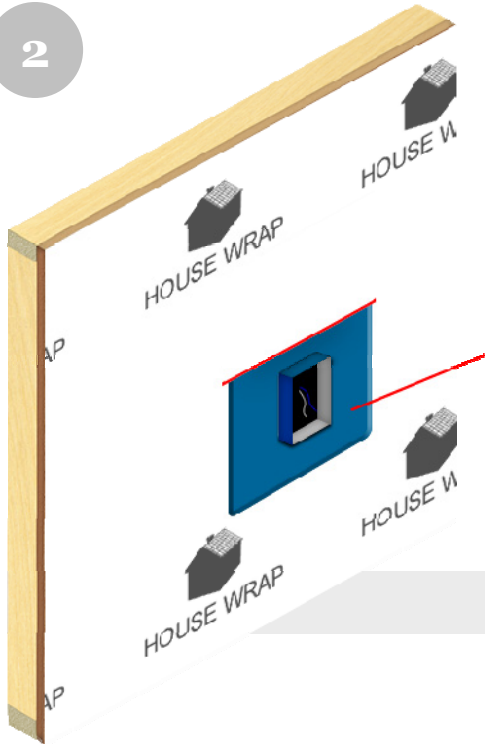


Slide the Quickflash® panel up underneath the WRB and over the penetration pressing down firmly to ensure a flush seal.

3

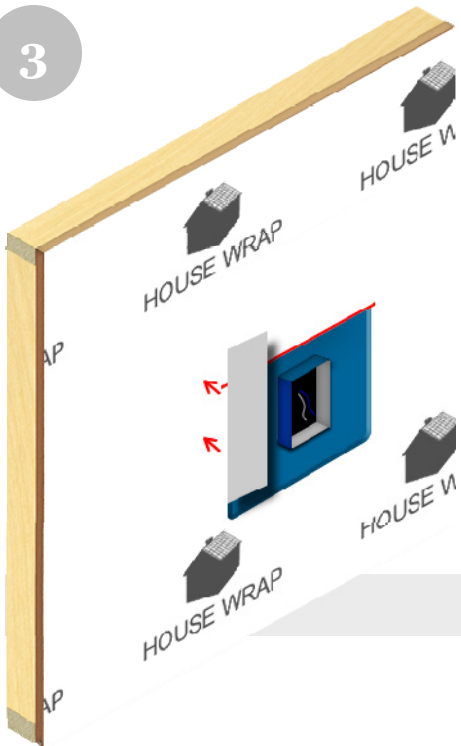


Tape on left side.

4

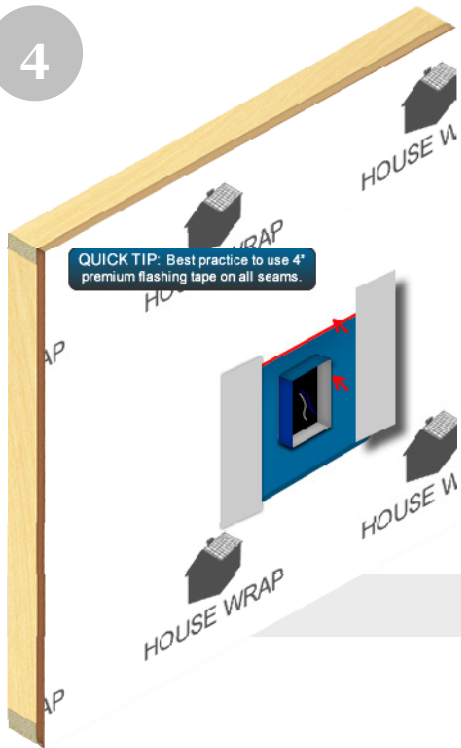

Tape on right side.

5

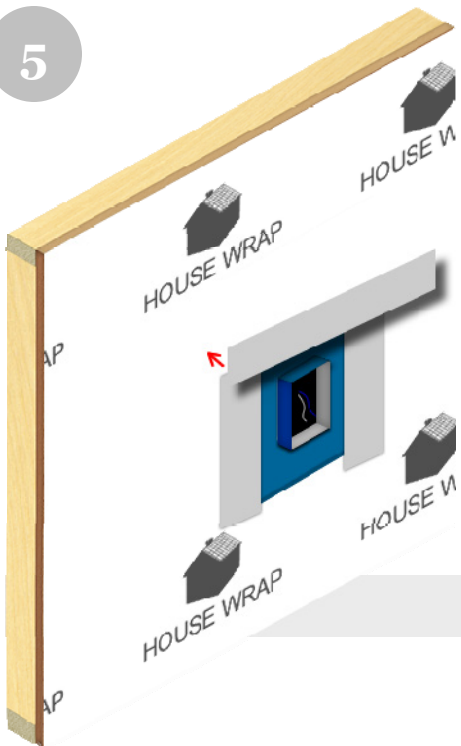

Tape across the top.