



HydraBarrier


HydraBarrier® Repair Instructions

This guide describes how to repair any of our Watershed Innovations Company, LLC HydraBarrier® products that may have suffered a small puncture.

Materials Required

The following materials are required in order to repair a HydraBarrier:

1. A HydraBarrier vinyl patch from the patch kit.
2. A cloth to clean the punctured area.

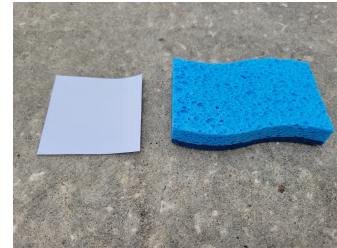

HydraBarrier Preparation


In order to patch a HydraBarrier please use the following steps:

1. Empty the HydraBarrier.
2. Clean the affected area on the HydraBarrier and let it dry for at least 10 minutes.



HydraBarrier Repair Instructions

1. Remove the vinyl patch from the paper backing.
2. Apply the patch firmly over the hole.
3. Wait 30 minutes to completely dry.
4. Move the HydraBarrier back into position and refill with water.

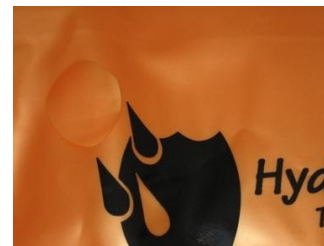

Watershed Innovations Company, LLC

(888) 876-4068

Trademarks and/or registered trademarks of Watershed Innovations Company, LLC. Information is subject to change without notice.