








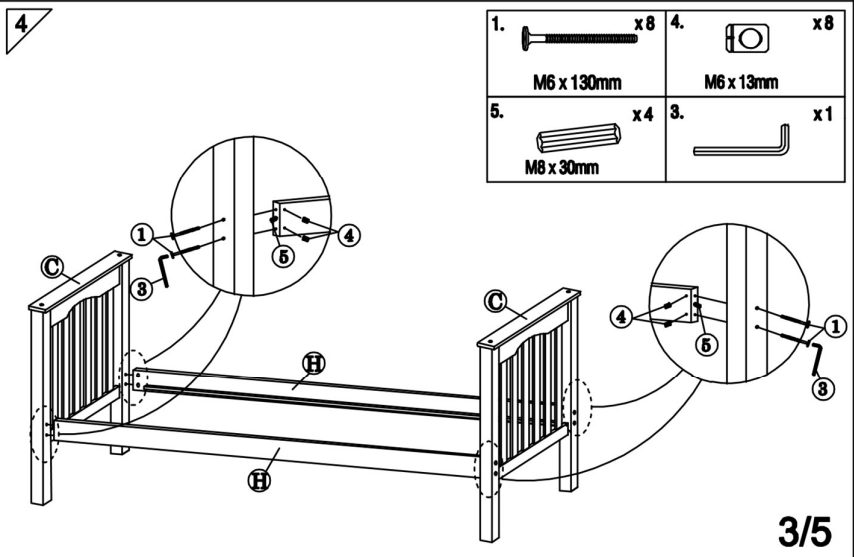
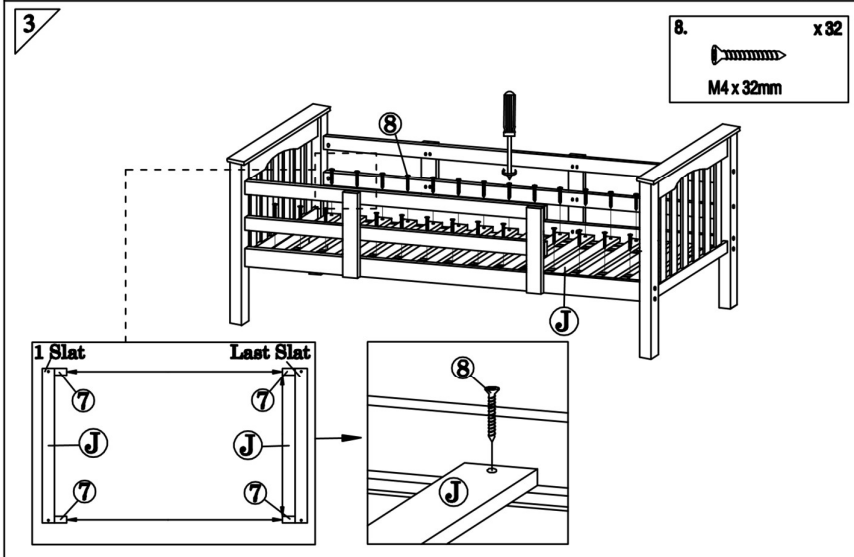
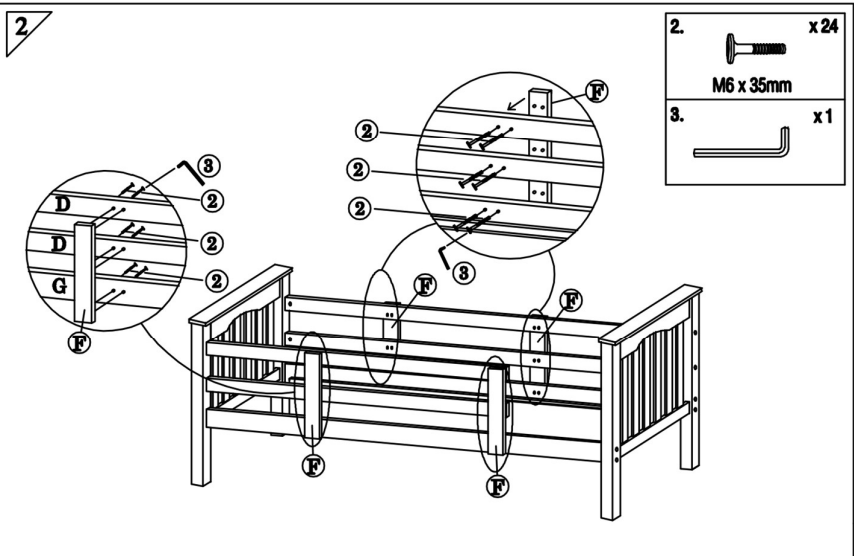
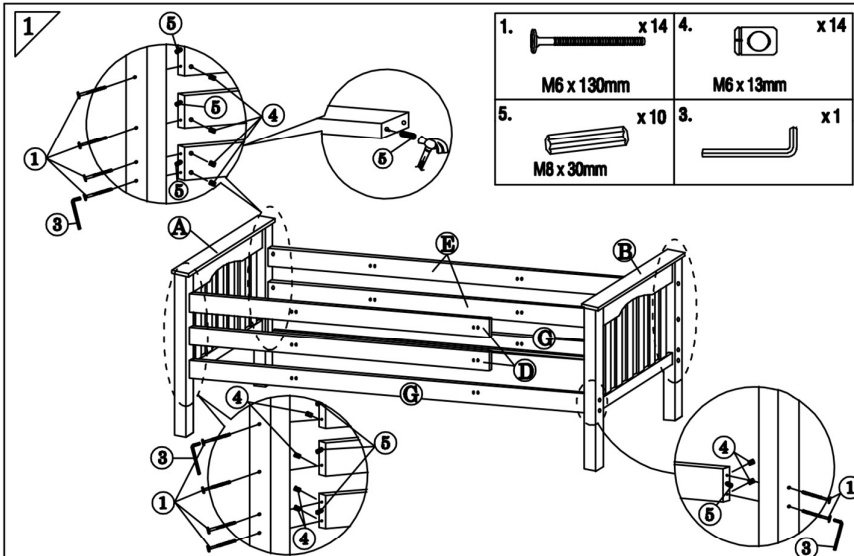
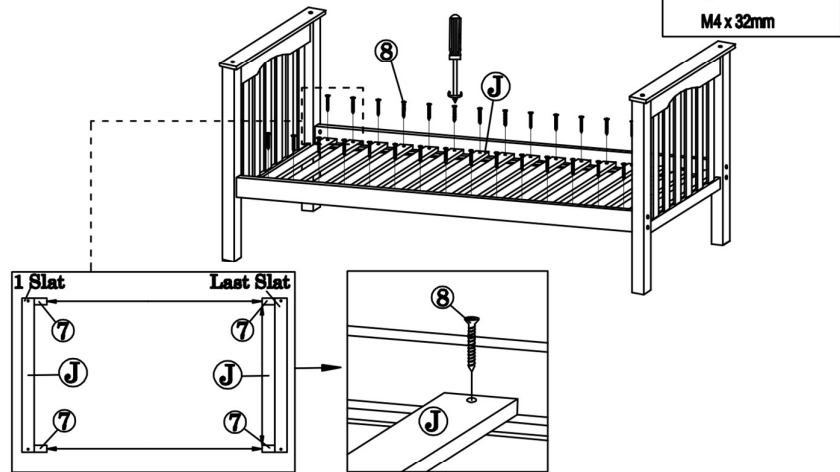



1.  x 22 M6 x 130mm	2.  x 24 M6 x 35mm	3.  x 1 ALLEN KEY	4.  x 22 M6 x 13mm	5.  x 14 M8 x 30mm	6.  x 4 M10 x 125mm	7.  x 8 WOODEN BLOCK
8.  x 64 M4 x 32mm	9.  x 2 M3.5 x 16mm					




5




6

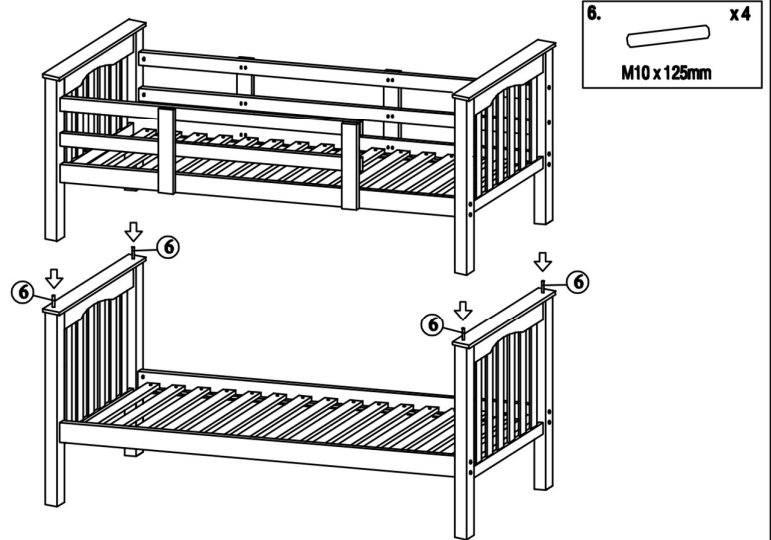

7

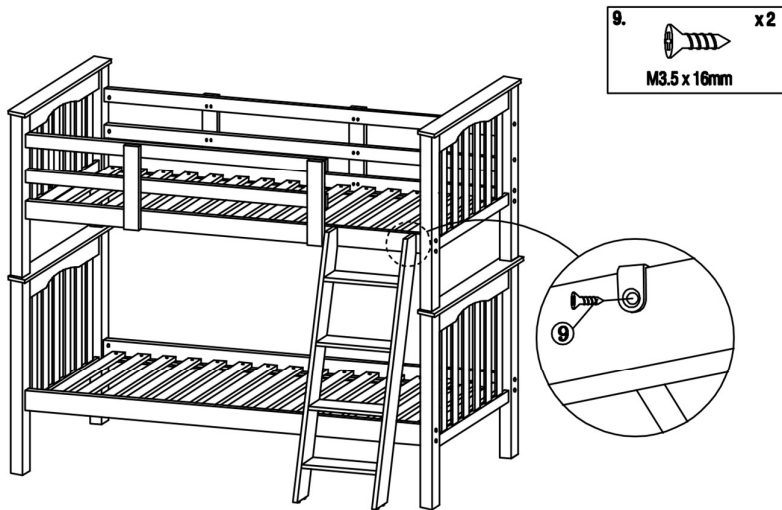

8




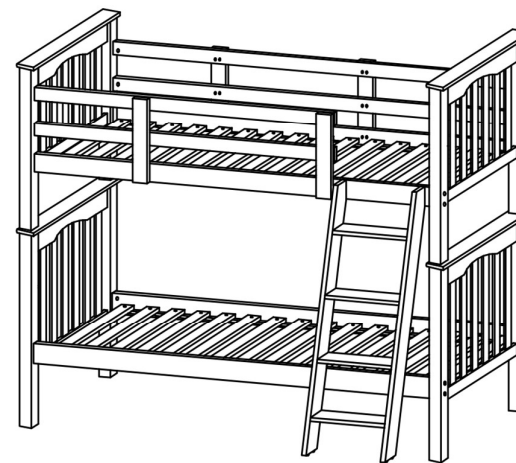


FULLY SET-UP

WARNING

For assembly for twin bed only
Strictly not allow for bunk bed .

Twin bed conversion

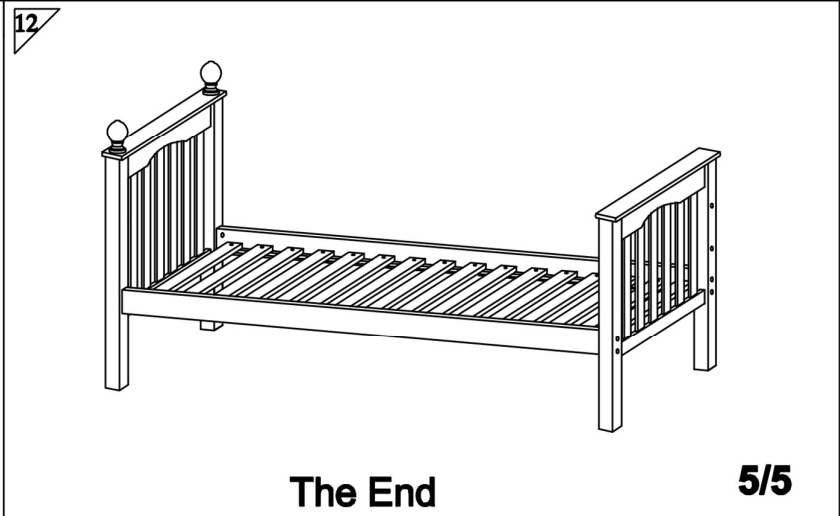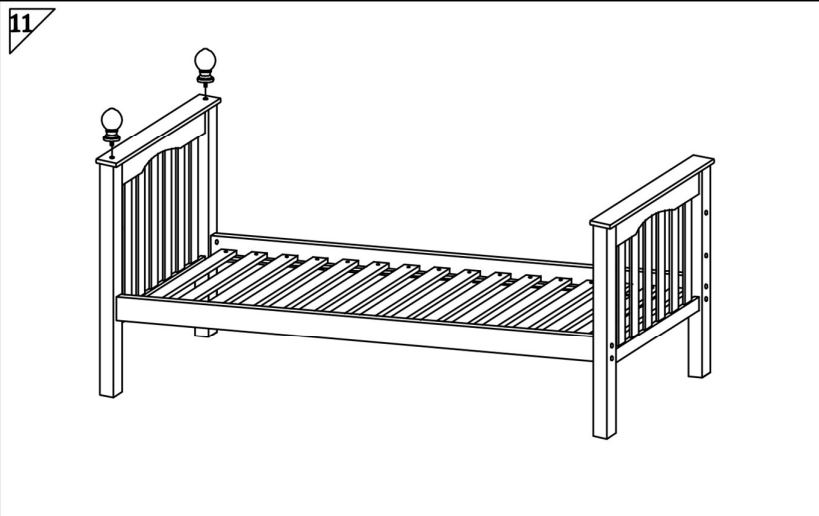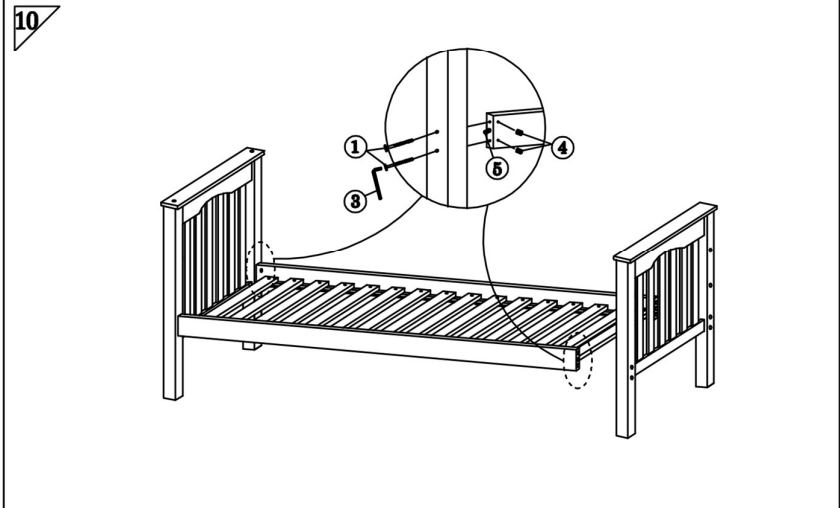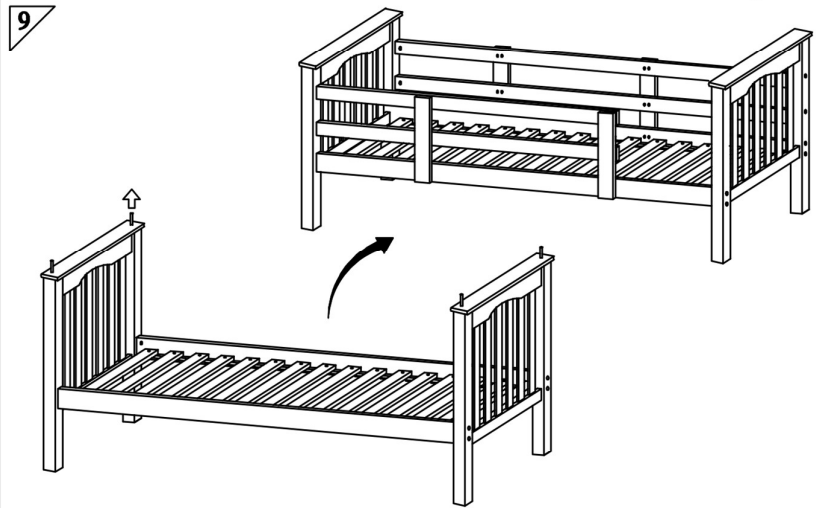

The End