

Questions/Comments:

Visit us at www.vagabondmotorsports.com

Or email sales@vagabondmotorsports.com

P/N: VM-SS710



Suzuki GSX-S750 (2017+) Fender Eliminator Installation Instructions

TOOLS REQUIRED:

- **4mm, 5mm** Allen head wrenches
- 8mm hex wrench
- 10mm socket and ratchet
- **Phillips screwdriver**
- Wire cutting pliers

Underlined tools are included in the OEM tool kit located under the passenger seat

PARTS INCLUDED:






- Fender Eliminator
- 4X M6 bolts
- 4X M6 lock washers
- 4X Aluminum spacers
- 2X Rubber Bumpers
- Rubber grommet

INSTALLATION VIDEO:




We've created a YouTube video to help explain the installation steps in more detail. Search "Vagabond Motorsports GSX-S750 Fender Eliminator Installation" or use the link: <https://youtu.be/f-LXP-hxze>

INSTALLATION STEPS:

1. Remove the rear passenger seat (key in front of seat). Remove the tool bag from under the seat if you need the required tools listed above.
2. Remove the black plastic panels from the right and left sides of the motorcycle below the rider seat. Start by removing the bolt (5mm allen head bolt, FIGURE 1) then pop the panel off its rubber mounts by gently pulling it away from the motorcycle starting with the front portion.
3. Remove the rider seat (5mm allen head bolts on both sides, FIGURE 2).
4. Release the reusable cable tie on the right side of the sub-frame tube that secures the wiring harness (FIGURE 3A). This will be reused so do not cut it; loosen by lifting the tab and pushing the tail back through the latch.
5. Disconnect the electrical connectors for the turn signals and license plate light located under the right side of the riders seat (Grey, black and white connectors, FIGURE 4).
6. Pull the three wiring harnesses for the turn signals and license plate light back through the motorcycle towards the factory fender. Loosen the cable tie attached to the frame to provide room for the connectors to be pulled through (FIGURE 3B).
7. Remove the OEM rear fender from the motorcycle by removing the bolts that hold it to the sub-frame (4X 10 mm hex head bolts, FIGURE 5).
8. Remove the license plate from the OEM rear fender. (2X Phillips head screws and 10mm lock nuts). This hardware will be reused so do not discard.

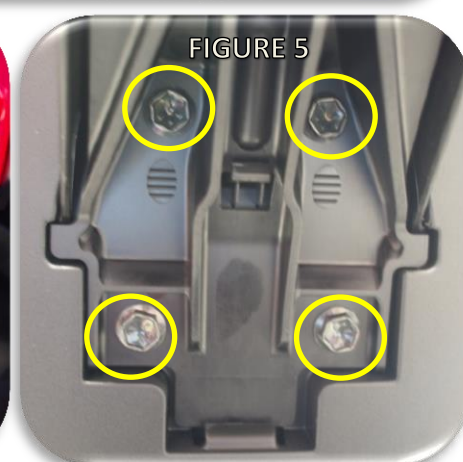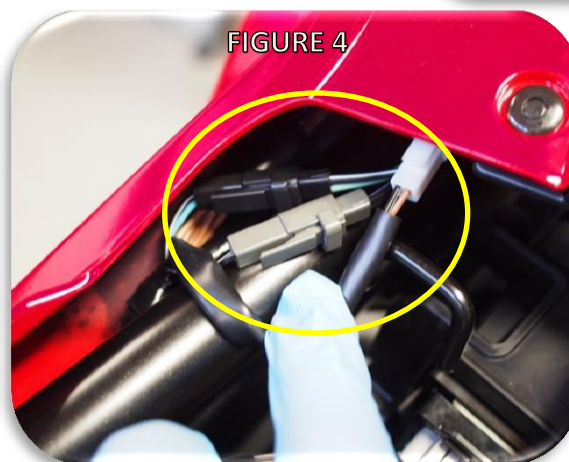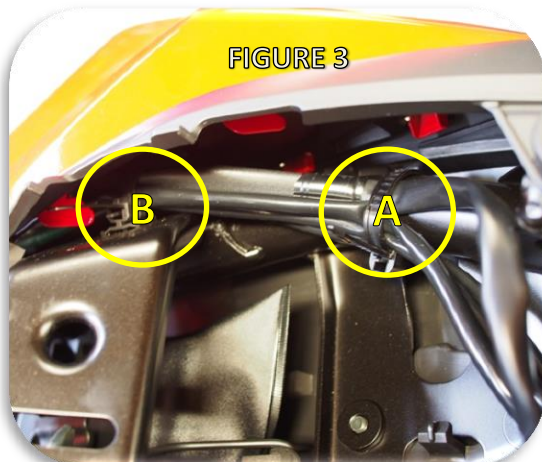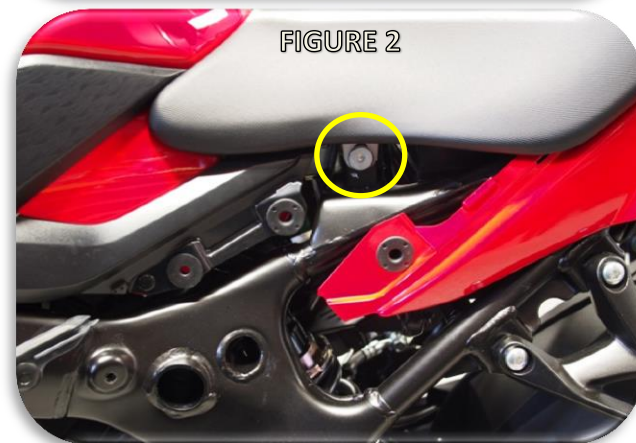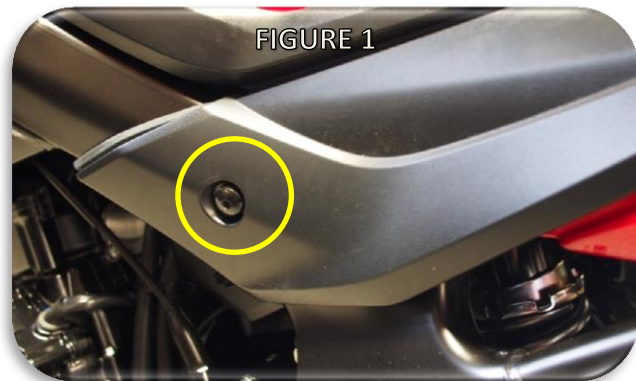

9. Remove the back shell from the OEM rear fender (5X phillips head screws, FIGURE 6). Set two of these screws aside, as they will be reused. Cut the cable tie connecting the wiring harnesses from the plastic fender shell using the wire cutters or other cutting tool.
10. Remove the turn signals (2X 8mm hex nuts, FIGURE 7A) and license plate light (2X Phillips head screws, FIGURE 7B) from the OEM fender by removing the hardware and pulling the wiring harnesses from the OEM fender.
11. Install the turn signals into the new fender eliminator by re-using the factory hardware (2X 8mm hex nuts, FIGURE 8A). The turn signal with the black connector is RIGHT and the grey connector is LEFT. For the factory signals, pass the electrical connector through the larger hole and the threaded stud through the smaller hole. Before tightening the nut, rotate the turn signals so that they are roughly level with the ground and each other. If using aftermarket turn signals with the common M10 stud, you will only use the larger hole for installation.

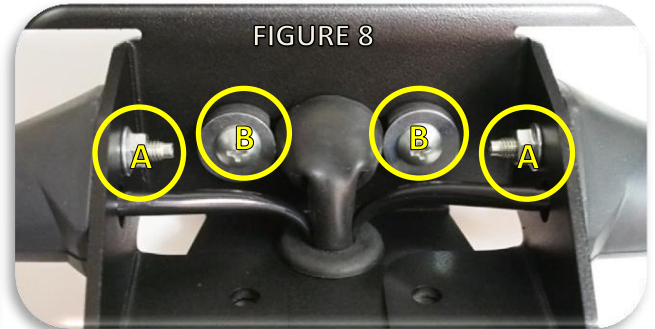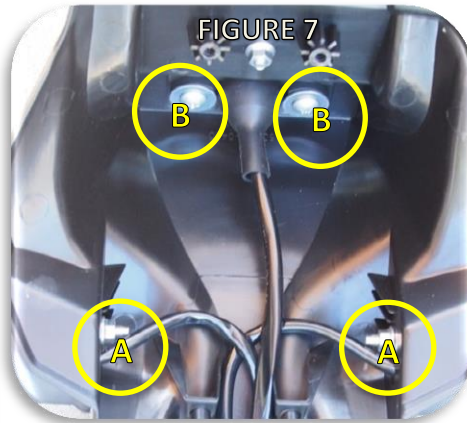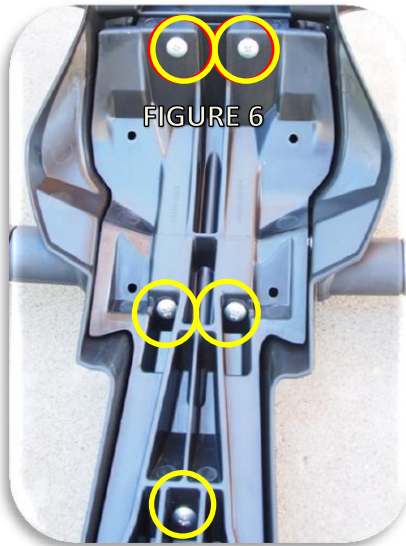

12. Install the license plate light into the fender eliminator. You will reuse the rubber grommet from the OEM rear fender, but you will not need the plastic spacer that the OEM fender uses (FIGURE 10). Take the large washers off the long screws originally used on the license plate light and place them on two of the shorter screws used to connect the OEM plastic fender shell (FIGURE 9). Install the shorter screws into the OEM license plate light (FIGURE 8B). Do not overtighten these screws.
13. Pass the three electrical connectors for the turn signals and license plate light through the grommet in the fender eliminator and pull the wires snug.
14. Install the fender eliminator on the motorcycle, first by passing the electrical connectors through the hole in the tail section. Use the supplied hardware (4X 4mm allen head bolts, lock washers and spacers) to attach the fender eliminator to the motorcycle. The spacers will be placed in between the motorcycle and the fender eliminator (FIGURE 11). It is easiest to start with the two bolts closest the front of the motorcycle and then installing the hardware in the two rearward holes after the front bolts have been threaded in partially.
15. Run the wiring looms along the right side of the sub-frame tube and connect the black, grey and white connectors. Be sure to pass the cables back through the OEM cable tie mounted on the sub-frame and reinstall the second OEM cable tie to secure the wiring loom (FIGURE 3). Make a service loop with the extra wiring between the cable ties and tuck it into the space of the right side panel.
16. Reinstall the license plate, rider and passenger seat and black plastic side panels. Test that all lights are functional and double check that all hardware is tight. Adjust the angle of the turn signals if necessary.

TERMS & CONDITIONS

Legal Notice: The purchaser and/or user of any Vagabond Motorsports, LLC branded parts releases Vagabond Motorsports, LLC from all liabilities pertaining to use of the parts. The user acknowledges that any modification, alteration or change to a motorized vehicle may increase the risk of accident and/or injury. Additionally, the user acknowledges any change may render the motorized vehicle illegal for use in public roads. **Warranties:** All Vagabond Motorsports, LLC branded products carry a one-year limited liability against workmanship and material defects. This Warranty is provided to the original purchaser of the products. **Return Policy:** All approved returns must be in new and unused condition within 90 days of purchase.