

**Questions/Comments:**Visit us at [www.vagabondmotorsports.com](http://www.vagabondmotorsports.com)Or email [sales@vagabondmotorsports.com](mailto:sales@vagabondmotorsports.com)

P/N: VM-Y330



## Yamaha YZF-R3 (2015+) Exhaust Hanger Installation Instructions

### TOOLS REQUIRED:

- 5mm, 6mm Allen head wrenches
- 12mm hex wrench
- 12mm socket and driver

### PARTS INCLUDED:




- Exhaust hanger bracket
- 2X M8 x 14mm bolts
- 1X M8 x 16mm bolt
- 2X M8 washers
- 2X plastic plugs

### OVERVIEW:

This kit will allow you to remove the rear passenger pegs from your YZF-R3 and provide a lightweight mount for the exhaust. This kit will work for the factory exhaust as well as aftermarket exhaust systems that re-use the factory exhaust hanger. This kit will reduce motorcycle weight by approximately 1.5 pounds.

### INSTALLATION STEPS:

1. Remove the bolt connecting the right (brake pedal) side passenger peg mount to the factory exhaust (12mm head hex bolt and 12mm lock nut, FIGURE 1A). Save the the lock-nut and large black metal washer, these will be re-used. The factory bolt will not be re-used.
2. Remove both right and left side passenger mounts from the motorcycle by removing the two bolts on each side that connect them to the sub-frame (6mm allen wrench, FIGURE 1B)
3. Loosely install the new exhaust hanger onto the motorcycle with the two shorter (14mm long) bolts and washers supplied (5mm allen wrench, FIGURE 2A). Do not tighten the bolts yet.
4. Connect the new exhaust hanger the muffler with the longer (16mm long) bolt supplied (FIGURE 2B). Use the large black metal factory washer under the head of the new bolt, and re-use the factory lock-nut on the back side of the exhaust tab (5mm allen wrench and 12 mm wrench). Do not tighten yet.
5. Once all three bolts are installed through the new exhaust hanger, start by making all three bolts hand-tight (snug). This will prevent any binding for occurring during final installation.
6. Tighten the 3 bolts with the 5mm allen wrench to finish the installation. The longer bolt used on the exhaust mount should engage the locking portion of the factory nut, so a 12mm wrench will be required to hold the nut securely while tightening the bolt.
7. On the left (shifter pedal) side, install the two supplied plastic cosmetic plugs in the open threaded holes of the sub-frame where the passenger peg used to mount (FIGURE 3).

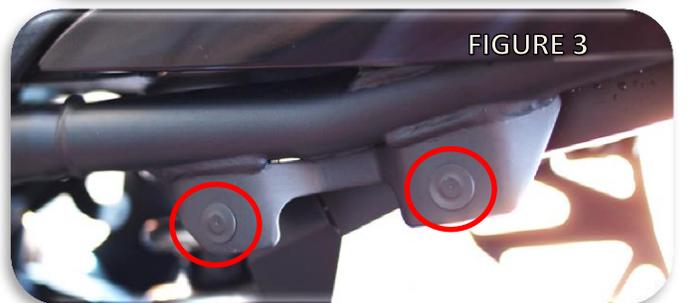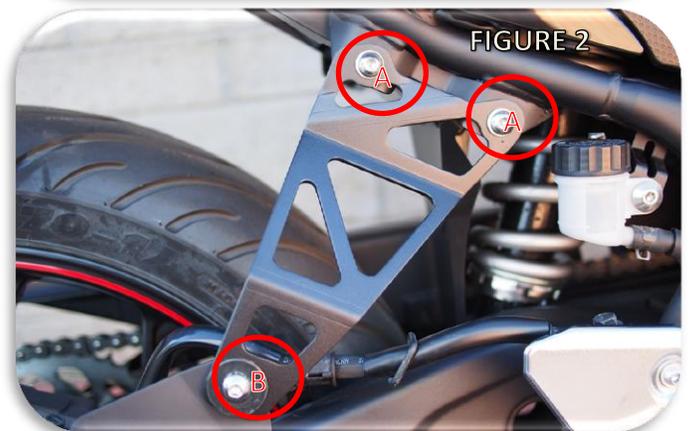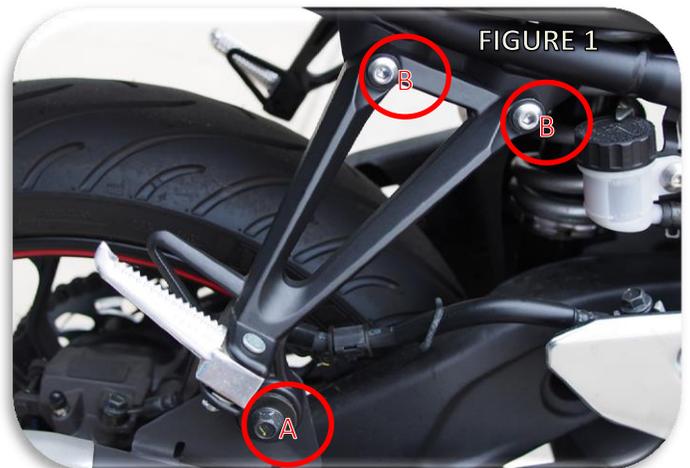

### TERMS & CONDITIONS

**Legal Notice:** The purchaser and/or user of any Vagabond Motorsports, LLC branded parts releases Vagabond Motorsports, LLC from all liabilities pertaining to use of the parts. The user acknowledges that any modification, alteration or change to a motorized vehicle may increase the risk of accident and/or injury. Additionally, the user acknowledges any change may render the motorized vehicle illegal for use in public roads. **Warranties:** All Vagabond Motorsports, LLC branded products carry a one-year limited liability against workmanship and material defects. This Warranty is provided to the original purchaser of the products. **Return Policy:** All approved returns must be in new and unused condition within 90 days of purchase.