Green Shoots® Small Foam Herbicide Dispenser – Use Instructions

If you have questions, comments, or suggestions, contact us!

website: www.greenshootsonline.com email: john@greenshootsonline.com

NOTE: A version of these instructions optimized for smartphone viewing is available on our website.


Safety Precautions and Handling:

- 1. Read and follow the label that comes with the herbicide.
- 2. Wear protective gloves, eyewear, and clothing when using and mixing.
- 3. Never point the nozzle in the direction of humans, animals, or desirable plants.

Mixing Instructions for Cut Stump and Similar Applications:

- 1. Add Super Concentrate Killzall® (or comparable herbicide) into dispenser to **70 ml**.
- 2. If using Blue Foaming Agent, add about 5 ml of Foaming Agent to reach **75 ml**.
- 3. Add water to 140 ml. DON'T FILL ABOVE 140 ml.
- 4. Screw dispenser top back on to the dispenser bottle. Make sure the top is screwed on tight.
- 5. Lightly shake dispenser to mix for a minute or two.

<u>Note</u>: This creates mixture with 20% active ingredient. Mixtures above 30% will not foam well. For foliar applications (applications to the foliage or green parts of the target weed), check the herbicide label and our website for the appropriate herbicide mixtures.

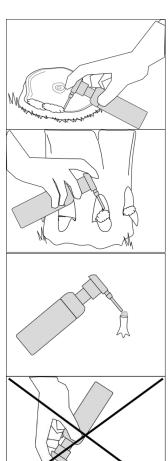

Cut Stump – small to medium weed trees, shrubs, vines, tall weeds:

- 1. Cut the stem about 1 inch above ground.
- 2. <u>Immediately</u> apply a ring of foam to the inner bark (just inside outer bark of tree).

<u>Frill</u> – medium to large weed trees:

- 1. Use a hatchet or similar tool to make downward cuts to expose inner bark near tree base.
- 2. Place cuts about 2-5 inches above ground and ½ inch apart.
- 3. *Immediately* apply foam in the cut.

<u>Cut Green Stem</u> – tall green stemmed weeds (or small woody saplings):

- 1. Cut the stem about 1/2 inch above ground.
- 2. <u>Immediately</u> dab foam onto face of entire cut stem.

General Tips:

- 1. Never hold dispenser upside down when pumping the dispenser. This will cause pump to stick.
- 2. Keep dispenser clean to keep it operating smoothly.
- 3. Apply herbicide within 5-20 minutes of making a cut. If necessary, re-cut to expose live plant tissue.
- 4. Dirt or soil will neutralize some herbicides. If treatment surface is contaminated, recut and reapply.